

element[®] v.2.0

Installation & User's Guide

Includes StudioEngine and PowerStation



Manual Rev v1.8.1 — April 2016
p/n 1490-00058-004

USA Class A Computing Device Information To User. Warning:

This equipment generates, uses, and can radiate radio-frequency energy. If it is not installed and used as directed by this manual, it may cause interference to radio communication. This equipment complies with the limits for a Class A computing device, as specified by FCC Rules, Part 15, Subpart J, which are designed to provide reasonable protection against such interference when this type of equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference. If it does, the user will be required to eliminate the interference at the user's expense.

NOTE: Objectionable interference to TV or radio reception can occur if other devices are connected to this device without the use of shielded interconnect cables. FCC rules require the use of only shielded cables.

Canada Warning:

“This digital apparatus does not exceed the Class A limits for radio noise emissions set out in the Radio Interference Regulations of the Canadian Department of Communications.” “Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques (de la classe A) prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.”

CE Conformance Information:

This device complies with the requirements of the EEC Council Directives: 93/68/EEC (CE Marking); 73/23/EEC (Safety – low voltage directive); 89/336/EEC (electromagnetic compatibility). Conformity is declared to those standards: EN50081-1, EN50082-1.

Important Safety Information

To prevent risk of electric shock: Disconnect power cord before servicing. If fuse replacement is required, please note: For continued protection against fire, replace fuse only with same type and value.

Caution

The installation and servicing instructions in the manual are for use by qualified personnel only. To avoid Electric Shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified personnel.

Electrical Warning

To reduce the risk of electrical shock, do not expose this product to rain or moisture. Keep liquids away from the ventilation openings in the top and rear of the unit. Do not shower or bathe with the unit.

This equipment is designed to be operated from a power source that includes a third “grounding” connection in addition to the power leads. Do not defeat this safety feature. In addition to creating a potentially hazardous situation, defeating this safety ground will prevent the internal line noise filter from functioning.

Ventilation Warning

The Axia PowerStation, StudioEngine and Power Supply/GPIO Nodes require the free flow of air for adequate cooling. Do not block the ventilation openings in the top and rear of the unit. PowerStation, StudioEngine and the Power Supply/GPIO Node must be mounted with a blank rack spacer above or damage may occur.

Failure to allow proper ventilation could damage the unit or create a fire hazard. Do not place the unit on a carpet, bedding, or other materials that could interfere with the rear and top panel ventilation openings.

Customer Service

We support you...

By Phone/Fax in the USA.

- You may reach our 24/7 Support Team anytime around the clock by calling +1 216-622-0247. For billing questions or other non-emergency technical questions, call +1 216-241-7225 between 9:30 AM to 6:00 PM USA Eastern Time, Monday through Friday.

By Phone in Europe.

- Service is available from Axia Europe in Germany at +49.8161.42467.

By E-Mail.

- Non-emergency technical support is available at support@telosalliance.com

Via World Wide Web.

- The Axia Web site has a variety of information which may be useful for product selection and support. The URL is telosalliance.com.

Feedback

We welcome feedback on any aspect of the Livewire products or this manual. In the past, many good ideas from users have made their way into software revisions or new products. Please contact us with your comments.

Trademarks

Telos Systems, Axia Audio, Livewire, the Livewire Logo, the Axia logo, Element, PowerStation, SmartQ, Status Symbols, Zephyr, Zephyr Xstream, Zephyr Xport, Omnia, the Omnia logo, and the Telos logo, are trademarks of TLS Corporation. All other trademarks are the property of their respective holders.



Axia Audio
1241 Superior Ave. Cleveland, OH 44114 USA
+1 (216) 241-7225
inquiry@telosalliance.com

Copyright © 2016 by TLS Corporation. Published by Axia Audio. We reserve the right to make improvements or changes in the products described in this manual, which may affect the product specifications, or to revise the manual without notice. All rights reserved.

Notice

All versions, claims of compatibility, trademarks, etc. of hardware and software products not made by Axia mentioned in this manual or accompanying material are informational only. Axia makes no endorsement of any particular product for any purpose, nor claims any responsibility for operation or accuracy.

Warranty

This product is covered by a Two Year limited warranty, the full text of which is included in the rear section of this manual.

Service

You must contact Axia before returning any equipment for factory service. Axia will issue a Return Authorization number, which must be written on the exterior of your shipping container. Please do not include cables or accessories unless specifically requested by the Technical Support Engineer at Axia. Be sure to adequately insure your shipment for its replacement value. Packages without proper authorization may be refused. US customers please contact Axia technical support at +1 (216) 241-7225. All other customers should contact their local representative to arrange for service.

We strongly recommend being near the unit when you call, so our Support Engineers can verify information about your configuration and the conditions under which the problem occurs. If the unit must return to Axia, we will need your serial number, located on the rear panel.

Credit Where Credit's Due

Much gratefulness and declarations of kinship to Bruce Wilkinson, Milos Nemcik, Gints Linis, Michael Dosch and the rest of the Axia team in helping to assemble this manual. Kudos, guys — you are owed more beers than I can count. - *c.n.*

About This Manual

This manual covers the details of the Element broadcast console, PowerStation and StudioEngine. However it is assumed in this document that you are familiar with Livewire's basic concepts, as outlined in the companion *Introduction to Livewire: System Design Reference and Primer* or *Audio Over IP: Building Pro AoIP Systems with Livewire* by Steve Church and Skip Pizzi, available from Elsevier Press.

If you have not done so, please review that material first. In it we explain the ideas that motivated Livewire and how you can use and benefit from it, as well as nitty-gritty details about wiring, connectors, and the like. Since Livewire is built on standard networks, we also help you to understand general network engineering so that you have the full background for Livewire's fundamentals. After reading *Introduction to Livewire* you will know what's up when you are speaking with the network guys that are often hanging around radio stations these days.

New in this Element v.2.0 Manual

This manual update, written in December 2011, details the workings of the Axia Element console when used with StudioEngine or PowerStation. Major changes in this manual are located in Appendix D: Working With Phones, where new methods of connecting to Telos IP phone systems are outlined.

Axia Audio

1241 Superior Avenue
Cleveland Ohio 44114 USA

Phone: +1.216.241.7225

Web: telosalliance.com

E-Mail: support@telosalliance.com

Table of Contents

| | |
|---|-----|
| <i>Customer Service</i> | iii |
| <i>Warranty</i> | iv |
| <i>Service</i> | iv |
| <i>Credit Where Credit's Due</i> | iv |
| <i>About This Manual</i> | iv |
| <i>New in this Element v.2.0 Manual</i> | iv |
| <i>A Note From Frank Foti</i> | vii |

Quickstart:

| | |
|--|-----------|
| Element with StudioEngine | ix |
| Making Connections. | ix |
| Software Setup. | ix |

Quickstart:

| | |
|--|----------|
| Element with PowerStation | x |
| Making Connections. | x |
| Software Setup. | x |

Chapter One: Element with StudioEngine 1

| | |
|--|---|
| Introduction | 1 |
| StudioEngine Quick Setup | 7 |
| <i>Connections</i> | 7 |
| <i>IP Configuration</i> | 7 |
| <i>StudioEngine Channel Settings</i> | 8 |
| <i>Set Your Console Type</i> | 9 |
| Advanced Settings. | 9 |

Chapter Two: Element with PowerStation 11

| | |
|---|----|
| Introduction | 11 |
| PowerStation Setup | 23 |
| <i>Connections and IP Configuration</i> | 23 |
| <i>Livewire Source Channels</i> | 23 |
| <i>Source Configuration - I/O Subsystem</i> | 24 |
| <i>Source Configuration - MixEngine</i> | 26 |
| <i>Destination Configuration</i> | 27 |
| Advanced Settings. | 28 |

Chapter Three: Working With Sources 29

| | |
|--|----|
| Understanding Source Profiles | 29 |
| Source Profile Setup. | 29 |
| <i>Source Profile Options</i> | 30 |
| <i>Adding Backfeeds and GPIO to a Source</i> | 37 |

Chapter Four: Configuring GPIO 41

| | |
|---|----|
| GPIO Port Definitions | 41 |
| <i>GPIO Operator's Microphone Logic</i> | 42 |
| <i>GPIO Control Room Guest Microphone Logic</i> | 43 |
| <i>GPIO Studio (Monitor 2) Guest Microphone Logic</i> 44 | |
| <i>GPIO Producer's Microphone Logic</i> | 45 |
| <i>GPIO Line Input Logic</i> | 46 |
| <i>GPIO Codec Logic</i> | 47 |
| <i>GPIO Telephone Hybrid Logic</i> | 48 |
| <i>GPIO Control Room Monitor Logic</i> | 49 |
| <i>GPIO Studio Monitor Logic</i> | 50 |
| <i>GPIO Computer Playback Device Logic</i> | 51 |
| <i>GPIO External Profanity Delay Logic</i> | 52 |
| <i>GPIO Film Legendable User Button Module / Accessory Panel / Rack Panel</i> | 53 |
| <i>GPIO Recording Device Logic</i> | 54 |
| <i>GPIO External Timer Control Logic</i> | 55 |
| Assigning GPIO to a Source. | 56 |
| A word about the GPIO Ports | 57 |
| <i>Input Connections</i> | 57 |
| <i>Output Connections</i> | 58 |

Chapter Five: Element Operations 59

| | |
|---|----|
| Overview | 59 |
| <i>Displays</i> | 59 |
| <i>Show Profiles</i> | 59 |
| <i>Sources, Channels and Faders</i> | 59 |
| <i>Mix-Minus</i> | 60 |
| <i>GPIO</i> | 60 |
| <i>Monitor Module and SoftKnobs</i> | 60 |
| <i>Software</i> | 60 |
| Control Callouts | 60 |
| Control Details. | 64 |
| <i>General Fader Controls</i> | 64 |
| <i>4-Phone Module Channel Controls</i> | 66 |
| <i>Call Controller + 2-Fader Phone Module</i> | 67 |
| <i>Production Module Controls</i> | 68 |
| <i>Standard Monitor Module Controls</i> | 69 |
| <i>2-Fader Monitor Module Controls</i> | 70 |
| <i>Source-Specific Channel Controls</i> | 87 |
| <i>Studio Microphone Channel Operation</i> | 88 |
| <i>Phone Channel Operation</i> | 88 |
| <i>Codec Channel Operation</i> | 89 |

| | | | |
|--|------------|---|------------|
| Chapter Six: Show Profiles | .91 | <i>The Diagnostics Menu</i> | <i>124</i> |
| Creating A Show Profile | 91 | <i>System Menu</i> | <i>124</i> |
| Show Profile Options | 92 | Chapter Ten: PowerStation Controls | 127 |
| <i>The Channel Description Screen</i> | <i>93</i> | PowerStation Configuration Screens | 127 |
| <i>The Aux Send / Return Description Screen</i> | <i>96</i> | <i>Home Page</i> | <i>127</i> |
| <i>Monitor Section Screen</i> | <i>96</i> | <i>Element Surface</i> | <i>129</i> |
| <i>Record Mode Screen</i> | <i>101</i> | <i>Mix Engine</i> | <i>129</i> |
| <i>Group Start Screen</i> | <i>102</i> | <i>Audio I/O Subsystems</i> | <i>132</i> |
| <i>Phone Screen</i> | <i>102</i> | <i>Ethernet Switch settings</i> | <i>135</i> |
| Chapter Seven: Virtual Mixer (VMIX). | 103 | Appendix A: Specifications. | 137 |
| What is VMIX? | 103 | Table of Inputs and Outputs | 138 |
| Constructing Virtual Mixes with VMIX. | 103 | Appendix B: CE Declaration of Conformity | 141 |
| Manipulating Streams With VMODE. | 106 | Appendix C: FAQ / Diagnostics / Maintenance. | 143 |
| Chapter Eight: Advanced Element Controls | 111 | Installing A New Module | 145 |
| Element Configuration Screens | 111 | Module Diagnostics | 148 |
| <i>The Element Control Center</i> | <i>111</i> | Fader Cleaning Procedures | 148 |
| <i>The Setup Menu</i> | <i>112</i> | Appendix D: Working With Phone Hybrids | 151 |
| <i>The Customize Menu</i> | <i>113</i> | Telos VX Broadcast VoIP System | 151 |
| <i>Log, Log History and Log Setup Menus</i> | <i>114</i> | Nx12, Nx6, TWOx12, Series 2101 systems. | 154 |
| <i>The Screenshot Menu.</i> | <i>114</i> | Call Controller Operation | 156 |
| <i>The Modules Menu</i> | <i>114</i> | Telos Two ISDN Hybrid | 158 |
| <i>CAN Bus Information Menu</i> | <i>115</i> | Telos One and Delta Hybrids | 159 |
| <i>Brightness Control Menu.</i> | <i>115</i> | Telos ONE-x-Six, Direct Interface and 1A2 Systems | 160 |
| <i>Phone Channels Menu</i> | <i>116</i> | Appendix E: Accessory Panels and User Panels | 163 |
| <i>User Modules Menu</i> | <i>116</i> | Appendix F: Channel / IP Worksheets | 167 |
| <i>GPIO Configuration Menu</i> | <i>116</i> | Warranty | 171 |
| <i>Script Information Menu</i> | <i>116</i> | | |
| <i>V-Mixer Menu</i> | <i>116</i> | | |
| <i>NTP Menu</i> | <i>116</i> | | |
| <i>Engine Menu</i> | <i>117</i> | | |
| <i>Sources & Profiles Configuration Menu</i> | <i>117</i> | | |
| Chapter Nine: StudioEngine Controls | 119 | | |
| StudioEngine Configuration Screens | 119 | | |
| <i>The Main Menu.</i> | <i>119</i> | | |
| <i>The Fader Channels Menu</i> | <i>119</i> | | |
| <i>The Return & Monitor Inputs Menu</i> | <i>119</i> | | |
| <i>The Program & Monitor Outputs Menu</i> | <i>120</i> | | |
| <i>The VMIX & VMODE Menu</i> | <i>121</i> | | |
| <i>The Intercom Menu.</i> | <i>121</i> | | |
| <i>The Options Menu</i> | <i>123</i> | | |
| <i>The Stream Statistics Menu.</i> | <i>123</i> | | |
| <i>The Network Menu</i> | <i>123</i> | | |

War of the Waves

Dear Valued Customer,

It's with great pride and a tip of the hat to an incredible team that I congratulate you on your new Telos Alliance product. Everything we do here at the radio division of the Telos Alliance is with one end goal in mind: To help broadcasters declare victory in extremely competitive environments. By purchasing this product from us, in essence, you have declared war on your competition.

After all, the majority of Telos Alliance employees were broadcasters themselves once, and the products we've developed over the years have been designed as solutions to specific issues faced on the front lines of our industry. We're right there in the trenches with you and have the weapons you need in your arsenal.

Telos Systems is a catalyst to out-of-this-world sound, with the most powerful and popular broadcast telephone systems in the industry; IP/ISDN codecs and transceivers; plus processing/encoding for streaming audio. We built an industry on the back of these amazing telephony systems, and they are still going strong.

While we at the Telos Alliance never forget our roots, we are also blazing trails in terms of new technologies like stream-encoding and AoIP, so that all types of broadcasters can excel in this ever-evolving digital world.

Omnia Audio not only lets you stand out on the dial with your unique signature sound via legendary audio processors, audio codecs, and microphone processing, it lets you give your listeners a better streaming experience across devices with innovative stream encoding/processing software and hardware.

Axia Audio is a driving force behind the AES67 AoIP standard, and its networked AoIP radio consoles, audio interfaces, networked intercom, and software products continue to move AoIP adoption forward and help broadcasters streamline operations with cohesive, smart, and feature-rich AoIP ecosystems.

Last, but certainly not least, **25-Seven** has traditionally been known for its audio delays, but its Voltair watermark monitor/processor has made a name for itself more recently as the disruptive product that helped broadcasters take back their ratings and harness the true power of their listening audiences.

You work so hard on your programming day-in and day-out, it deserves technology that will optimize sound and performance at every point in the airchain and online. Armed with Telos products, you have what you need to set your competition squarely in your crosshairs.

With that, I'll leave you to prep your armaments. I hope that you will enjoy your Telos Alliance products for many years to come!

Sincerely,
Frank Foti
CEO, The Telos Alliance



*Desk phone rings; you press
ignore." The G.M. can change
his own damned light bulbs.*

Quickstart :

Element with StudioEngine

The following chapters of this manual will give you an in-depth understanding of the capabilities of your new Element and StudioEngine, from installation to advanced functions. This Quickstart section isn't meant to take the place of the following chapters, but it will help you get everything connected fast, and point you to the parts of the manual you'll need to get up and running with a minimum of fuss.

Making Connections


You've probably unpacked your boxes and are sitting next to a pile of Axia gear, wondering what to do first.

Take a look at the diagram above: it represents a typical Livewire-connected studio. After configuring your Ethernet switch, here's what you should do to get going:

1. Using CAT.5e or CAT.6 Ethernet cable, connect all of your Axia Audio Nodes (Analog, AES/EBU, Microphone and Router Selector) to 100Base-T ports on your studio's Ethernet switch.
2. Use CAT.6 Ethernet cable to connect your StudioEngine to a Gigabit (1000Base-T) port on the switch.
3. Use another CAT.5e or CAT.6 cable to connect the Ethernet port on the back of the Element GPIO Node/Power Supply to a 100Base-T port on the switch.
4. Packed with your Element is a cable with 6-pin Molex™ connectors. This is the power/communications cable. Lift the Element meter panel and connect the end of the cable *without* the strain relief to the corresponding port on the Element connection panel. Connect the other end of the cable to one of the jacks labeled "48VDC OUTPUT & COMM" on the back of your Element

GPIO Node/Power Supply unit.

5. Connect all Audio Node power cords and plug them into your studio's power receptacles.
6. "Capture" your console using the instructions in Chapter 1 of this manual.
7. Follow the instructions found in Chapter 1 to configure IP address settings for Element and the StudioEngine.
8. Refer to the User's Manuals packed with your other Axia Audio Nodes for information on how to configure IP addresses for these units.

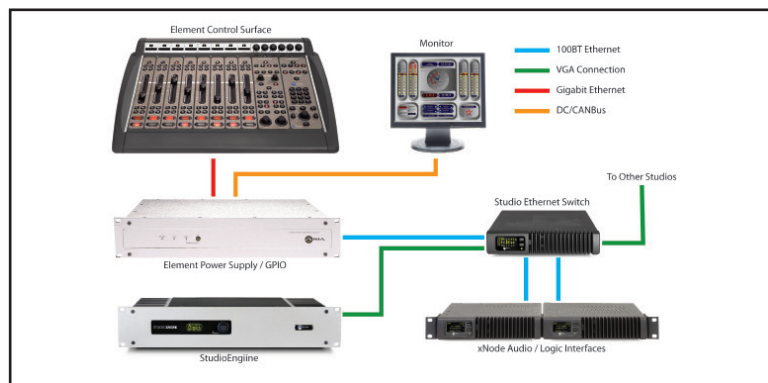

Software Setup

When you've completed physically connecting your Axia hardware, read through the remainder of this manual to begin configuring the software options that determine how your new Element will operate.


- Chapter 1: Element with StudioEngine
- Chapter 3: Working with Sources explains how to generate Source Profiles and construct backfeeds for selected sources.
- Chapter 4: Configuring GPIO tells how to associate routable logic commands with any audio source.
- Chapter 5: Element Operations takes you under the hood to explore in-depth software options.
- Chapter 6: Show Profiles illustrates how to set and save unique "snapshots" tailored for specific operational situations that can be recalled whenever the need arises.

Enjoy your new Element! 🎧

Quickstart :

Element with PowerStation

The subsequent chapters of this manual will give you an in-depth understanding of the capabilities of your new Axia Element and PowerStation, from installation to advanced functions. This Quickstart section isn't meant to take the place of the following chapters, but it will help you get everything connected fast, and point you to the parts of the manual you'll need to get up and running with a minimum of fuss.

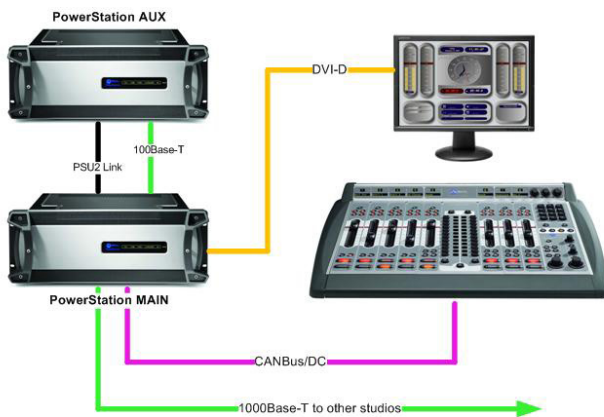

Making Connections

You've probably unpacked your boxes and are sitting next to a pile of Axia gear, wondering what to do first.

Take a look at the diagram above: it represents a typical Livewire-connected radio studio with the PowerStation at its core. Here's what you should do to get going:

1. Packed with your Element control surface is a cable with 6-pin Molex™ connectors. This is the power/communications cable. Lift the Element meter panel and connect the end of the cable *without* the strain relief to the corresponding port on the Element connection panel. Connect the other end of the cable to the jack labeled "DC/CAN" on the back of your PowerStation MAIN.
2. Connect the DVI output on the rear panel to a DVI-D compatible monitor before powering up

the PowerStation. Turn on the monitor.

3. If using an AUX, connect the MAIN and AUX PSU2 connectors with the special cable provided.
4. Connect the power cords to the PSU1 receptacles on the PowerStation's rear panels and power up.
5. "Capture" your Element control surface faders by holding the * and 2 keys for 5 seconds. Press # when you see the **CAPTURE** prompt above each channel.
6. Your hardware is now ready to go! However, some basic software configuration is also needed. Follow the instructions found in Chapter 2 to configure IP address settings for Element and the PowerStation. You will also need to setup Livewire channels and assign your audio inputs and outputs as described in Chapter 2. Factory default IP address is 192.168.2.50.

Software Setup

The configuration of your PowerStation is accomplished by accessing its web interface. No dedicated software is required. Configuration is not complicated, but does require a little planning and setup.

When you've completed physically connecting your Axia hardware, read through the remainder of this manual to begin configuring the software options that determine how your new PowerStation will operate when used in a Livewire network with your other Axia gear.

- Chapter 2: Setup and Connections
- Chapter 3: Working with Sources explains how to generate Source Profiles and construct backfeeds for selected sources.
- Chapter 4: Configuring GPIO tells how to associate routable logic commands with any audio source.
- Chapter 5: Element Operations takes you under the hood to explore in-depth software options.
- Chapter 6: Show Profiles illustrates how to set and save unique "snapshots" tailored for specific operational situations that can be recalled when needed.

Enjoy your new Element console! 🎧

Chapter One:

Element with StudioEngine

Introduction

There's nothing quite as much fun as taking something new out of its box. That sense of excitement as protective packaging is stripped away; that "new gear" smell... it's exhilarating!

If you're reading this, there's a 99.9836% chance that you've done just that, and are now sitting in the middle of a room surrounded by packing material and a large wooden crate, admiring your new Element, its GPIO Node/Power Supply and StudioEngine — and wondering what to do next.

But before you dig in, be advised that *you need to assemble the rest of your Livewire network first*. Because so much of the Element configuration process depends upon having access to audio sources and destinations, you *must* connect and configure your other Axia peripherals (Audio Nodes, GPIO Nodes, Router Selectors, etc.) prior to configuring Element, according to the instructions supplied with each. Once you've done that, come on back and we'll get started.

Getting Prepared

This chapter will show you how to get you up and running. We'll install the Element console and its power supply first, followed by the StudioEngine.

Before you dive into the hardware, you'll need to determine a range of IP addresses to assign to each studio and log each device's IP as you assign it; Appendix F contains an IP Assignment Worksheet you can use for this purpose. IP addresses used in an Axia network must be valid Unicast IP addresses. Determine your network's subnet mask settings at the same time (typically this value is set at 255.255.255.0 for intranet applications).

Unicast vs. Multicast IP Addresses: Data is routed over IP networks in one of two ways: point-to-point unicast or multicast.

Livewire devices use common TCP/IP unicast IP addresses for control and web browser access. These are numbers you assign within the range used by your network. Since most Livewire networks are not intended to be accessed via the Internet, we recommend you use the non-routable IP addresses in the range of 192.168.0.0 to 192.168.255.255. These IP addresses have been set aside specifically for use with local networks.

Multicast allows efficient one-to-many connections, so Livewire uses that for its audio streams, source advertising, and synchronization signals. You do not need to assign these multicast addresses because the system does this automatically.

For more information on network construction, please refer to our companion *Introduction to Livewire: System Design Reference and Primer* available at <https://www.telosalliance.com/Axia>.

To install Element in your studio furniture, you'll need to prepare a cutout in the counter top. A dimensional drawing with all pertinent measurements is found just prior to this manual's Appendix A. Make certain that there's adequate clearance inside the furniture for the required power cable entry into the console; knockout plugs are located at both bottom rear corners of Element for cable routing access.

To configure Element, you'll need a computer. Any Windows desktop or notebook PC with an Ethernet port and a standard Internet browser is acceptable.

For cable connections, CAT.5e Ethernet cable is required. Some use CAT.6 since the cost is only slightly higher than CAT.5e. For greater detail on cable selections, we again recommend you read *The Axia Guide to Choosing Category Cable* available from: <https://www.telosalliance.com/Axia>.

Always make certain that power has been applied to your studio's Ethernet switch and that the switch is properly configured for multicast as recommended by Axia before powering any other Axia components. It is essential that you use a qualified switch and that it has been configured in accordance with Axia's guidelines.

Most folks that encounter problems setting up a new system have not paid attention to this requirement. More information on switches can be found at <https://www.telosalliance.com/Axia/What-Ethernet-Switches-has-Axia-Approved>. Information on specific configurations is available in the user manuals section at <https://www.telosalliance.com/Axia>.

Element with StudioEngine: Setup

If you haven't done so yet, it's time to get your Element out of its packing crate. This is a two-person job, so grab a partner.

Important: Like any electronic device, Element can be affected by static electricity. Use of a personal grounding device is strongly recommended during transport.

Position one person at each end of Element and, grasping the metal enclosure at the bottom, simultaneously lift upward out of the shipping crate. Remove packing materials and store them in the crate for future use. Carefully lower Element into your counter top cutout, taking care to lower both sides at an equal rate to avoid becoming jammed in the cabinetry.

Important: Element is a drop-in style control surface and requires a counter top cutout. For cutout dimensions, please refer to Appendix A.

Unpack the GPIO Node/Power Supply that came

with your Element and place it in its rack ensuring adequate ventilation.

Connections

Cable connections for Element are entirely different from any other mixing surface you may be familiar with. There are no audio inputs; Element needs only a single data / power connection to operate.

Important: Your Element MUST be grounded. Grounding reduces the risk of electric shock by providing a "path of least resistance" for electric current. Improper grounding can result in a risk of electric shock.

Check with a qualified electrician if you are in doubt about how to properly ground this equipment. If your local electrical code prohibits the use of a Station Ground for this purpose, as described above, use the specific "Safety Ground" your local regulations mandate.

1. Rack-mount the GPIO Node/Power Supply unit and connect it to a 100Base-T port on your studio's Ethernet switch using CAT.5e or CAT.6 cable. Do not power up the Power Supply yet.



Figure 1-2: Accessing Element's connection panel.

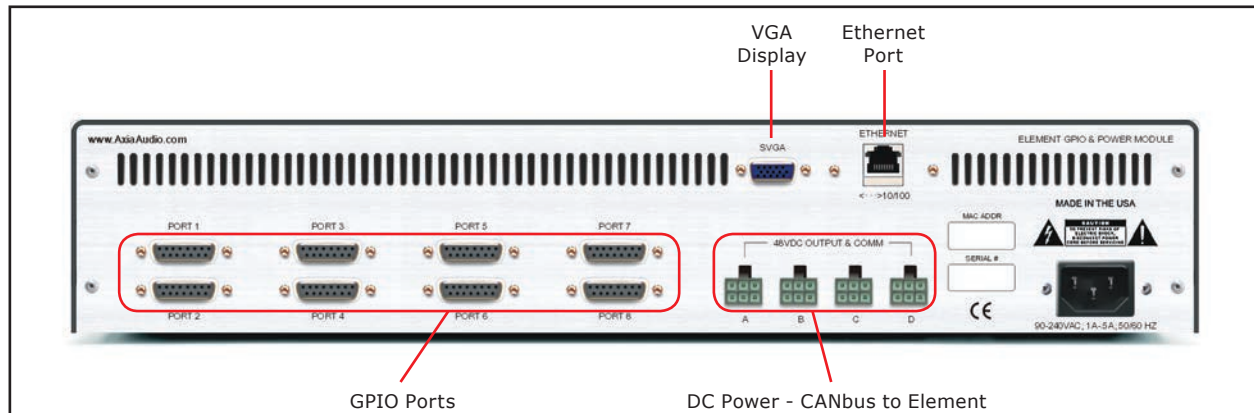


Figure 1-1: Rear panel of Element GPIO/Power Supply showing connections.

2. Element **must** be connected to a grounded metal permanent wiring system or other equipment grounding conductor using the threaded grounding stud located inside the connections bay. Open the bay by flipping open the overbridge above the faders, as shown in Figure 1-2. For ground sources, we recommend, in order of preference:

- » “Station Ground,” the heavy copper strap found in the walls and floors of many radio studios.
- » AC Safety Ground — the “3rd prong” of a nearby outlet.
- » A bonded electrical conduit.

#12 AWG GREEN stranded wire is the *minimum* wire gauge acceptable for grounding Element.

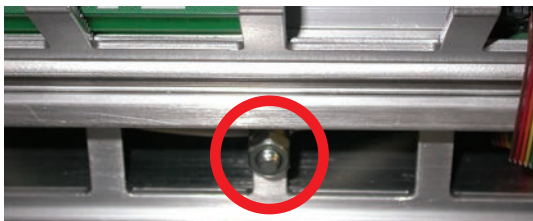


Figure 1-3: Locating the grounding stud.

3. One end of the Element power / communication cable is fitted with a strain relief. Connect this end to any one of the four Molex connectors on the back of the Element GPIO Node/Power Supply. Connect the other end to the Molex socket on the Element connection panel.

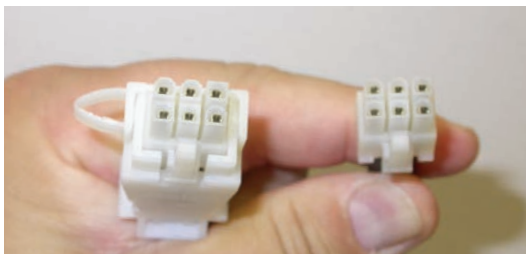


Figure 1-4: Detail of data/communication cable ends.

4. Connect a VGA monitor to the 15-pin VGA connector on the back of the Element GPIO/Power Supply.

IMPORTANT: Element’s power cable is also host to all data communication between the actual surface and its CPU (housed in the Element Power Supply/GPIO Node) by **CANbus** technology; it does not require a separate Ethernet connection. **Never connect any of the RJ-45**

ports on the Element connection panel to an Ethernet switch. These ports are for connection of Element fader and accessory modules only; connecting them to a powered Ethernet switch could damage the board’s electronics and **void your warranty.**



Figure 1-5: Element connection panel. Circled connector is for power/data cable; RJ-45’s connect to fader and accessory modules.

What is CANbus? Controller Area Network (CAN) is a multicast shared serial bus standard, originally developed in the 1980s by Robert Bosch GmbH, for connecting electronic control units (ECUs). Although initially created for automotive purposes, nowadays it is used in many embedded control applications. The CAN data link layer protocol is standardized in ISO 11898-1 (2003).

“Capturing” Your Console

Upon power-up of your Element, some or all of the alphanumeric displays above the faders may read **INACTIVE**. This means that the Element CPU must be initialized. To do this, you’ll need to enter Capture Mode.



Figure 1-6: Identifying the Standard Monitor Module (left) and Monitor + 2-Fader Module (right).

Press and hold both the ***** (**star**) and **"2"** keys on the Monitor Module numeric pad for 5 seconds. The alpha-numeric displays will change to read **Capture Mode**; this enumerates all of the installed faders in the control surface.

Now, make sure that LED displays above the faders display the channel numbers in the order you desire. If not, you can adjust them individually using the **PGM1** and **PGM2** buttons above each fader to change the channel number to the one you desire.

When you're done adjusting channel number displays, press the **↵(enter)** or **#** (if you have a Monitor +2-fader module) key to exit Capture Mode and your Element is ready to use.

Hello Moto: If you have motorized faders, you can "mirror" other motorized faders while you are in Capture Mode. A motorized fader that is "slaved" to a master fader will move automatically to mirror the movements of the master. Mirrored faders both control gain for the same source, but the master can override the setting of the slave — useful for "split" Element setups where talent has a local set of faders that may be used to control certain sources, but you still want the Board Operator to have master control.

To mirror a fader, press the **Options** key above the fader you wish to make the "slave". An apostrophe (') will be displayed next to its numeric indicator. Pressing the fader's **PGM1** and **PGM2** keys will change the numeric indicator, indicating the "Master" to which this fader is now slaved; a display reading 2' means that the fader is slaved to fader 2.

Pressing the **Options** key again returns the fader to non-mirrored mode.

Short Navigation Tutorial

There are several different ways to change on-screen options. The first way is with Element's SoftKnobs, located directly above the Monitor Module and shown in Figure 1-7.

Note that the functionality is the same but the menus are slightly different for the Element 2-Fader Monitor module. This module has only 3 SoftKnobs.



Figure 1-7: Element SoftKnobs.

These knobs are context-sensitive. When any of Element's setup modes are activated using the options keys on the faders or Master Module, you'll see a corresponding row of "knobs" represented onscreen, as shown in Figure 1-8.



Figure 1-8: On-screen SoftKnobs.

Note that there are sometimes functions shown both above and below the on-screen SoftKnobs. When a function is presented above the knob, turning that knob accomplishes that function. When a function is presented below the knob, pushing in gently on the corresponding SoftKnob activates that function. The example shown in Figure 1-8 is from the IP Address Book screen.

If your Element is equipped with the standard Monitor Module, you can also navigate using the control knob, directional keys and Enter key located at the lower right-hand corner of the module, as shown in Figure 1-6.



Figure 1-10: Master Module numeric keypad.

Additionally, whenever numeric input is required (like entering IP addresses), you can use the numeric keypad located just above the Navigation Keys (Figure 1-10) to enter numbers directly.

IP Address Configuration

Using your IP Assignment Worksheet, you'll now choose an IP address for both your Element and StudioEngine. You must make sure that IP addresses for both Engine and Surface are in the same IP network, and are both valid Unicast addresses. For example:

- » 192.168.0.10: Element
- » 192.168.0.11: Engine

Both addresses belong to 192.168.0.x IP network, and so will work for our application.

Note: "Gateway" settings on Livewire equipment are optional. They may be left blank unless you intend to access the StudioEngine's configuration utility remotely, from outside your network. Should you desire to do so, enter the IP address of your master router (the one with external network connections) whenever you're given the option to enter a gateway IP address.

Note: Element v2.x software supports redundant NTP servers. Use the second field in the IP Address Book to enter the address of a backup server.

Once you've determined the IP addresses you'll assign, turn on the Element power supply and the attached VGA monitor.

Setting IP using the Standard Monitor Module

When Element has completed its start cycle (meter screen appears), find the section marked **Global Options** on the Monitor Module. Press and hold the key marked **Fader Options** located in the top right corner of the module for five seconds to enter the IP Address Book (Figure 1-11).

To set the IP address, rotate the leftmost SoftKnob to highlight the line titled "Element IP Address" and push the knob to select that line. Now use the numeric pad to enter the IP address. Press the leftmost SoftKnob again to "take" the new IP value. Repeat this process to set the subnet mask value.

Continue down the screen and, in the same way, enter the other fields' values as appropriate.

- Rotate the **Select/Set** SoftKnob to scroll through

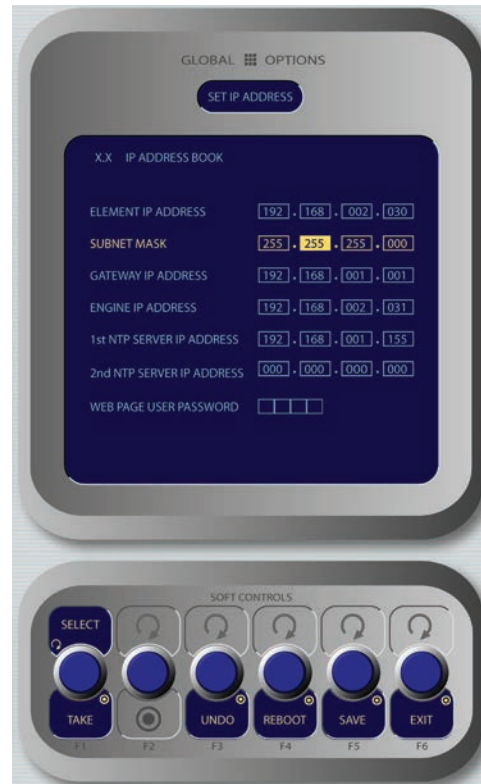


Figure 1-11: IP Address Book, Standard Monitor Module

the list of available options. To select an option to modify, push this knob. While modifying an options, rotate the knob to change an option's value, and push the knob to move to the next field. Available options include:

- » **Element IP Address:** Every piece of Livewire gear must have its own unique IP Address. Set the IP Address for each Element in this field.
- » **Subnet Mask:** Enter your network's subnet mask value here, usually 255.255.255.0
- » **Gateway IP Address:** To enable remote administration of your Livewire network or an external NTP server, you'll need a gateway. If you have one installed, enter its IP Address value here.
- » **Engine IP Address:** Each Axia control surface controls a unique Studio Engine. Enter the IP of the controlled Engine here.
- » **1st NTP Server IP Address:** Element supports NTP (Network Time Protocol) timekeeping to synchronize time-of-day clocks across your facility. If you have an NTP server, enter its IP Address here.

- » **2nd NTP Server IP Address:** Element v2.x software supports redundant NTP servers. Enter the IP Address of your backup server here.
- » **Web Page User Password:** You can password-protect your Element’s web server connection by entering a short numeric password here.

Note: If you set a password for HTTP access, you will not see your password displayed in this field upon re-entering the IP Address book. This is a security feature intended to prevent “over-the-shoulder” password theft.

- If you want to reverse changes you’ve made and haven’t saved, press the **Undo** knob to erase them.
- Press **Save** to save changes you’ve made.
- Press **Reboot** to immediately reboot the Element.
- You can press **Exit** to leave the IP Address Book at any time without saving your changes.

Note: After making changes to any Element IP address settings, you must reboot the console. Use the “REBOOT” soft key to begin an immediate reboot sequence.

Remember, you can even reboot Element while on-the-air, since the audio mixing is not done in the console but in the Studio Engine; your audio will continue to play without interruption.

Setting IP using the 2-Fader Monitor Module

When Element has completed its start cycle (meter screen appears), find the numeric keypad at the top right of the Monitor Module. Press and hold the ***** (**star**), **“7”** & **“4”** keys simultaneously for five seconds to enter the IP Address Book (Figure 1-12).

To set the IP address, rotate the left-most SoftKnob to highlight the line titled “Element IP Address” and push the knob to select that line. Now use the numeric pad to enter the IP address. Press the left-most SoftKnob again to “take” the new IP value. Repeat this process to set the subnet mask value.

Continue down the screen and, in the same way, enter the other fields’ values as appropriate.

- Rotate the **Select/Set** SoftKnob to scroll through

the list of available options. To select an option to modify, push this knob. While modifying an options, rotate the knob to change an option’s value, and push the knob to move to the next field. Available options include:

- » **Element IP Address:** Every piece of Livewire gear must have its own unique IP Address. Set the IP Address for each Element in this field.
- » **Subnet Mask:** Enter your network’s subnet mask value here, usually 255.255.255.0
- » **Gateway IP Address:** To enable remote administration of your Livewire network, you’ll need a network gateway. If you have one installed, enter its IP Address value here.
- » **Engine IP Address:** Each Axia control surface controls a unique Studio Engine. Enter the IP of the controlled Engine here.
- » **1st NTP Server IP Address:** Element supports NTP (Network Time Protocol) timekeeping to synchronize time-of-day clocks across your facility. If you have an NTP server, enter its IP Address here.



Figure 1-12: IP Address Book, Monitor Module

- » **2nd NTP Server IP Address:** Element v2.x software supports redundant NTP servers. Enter the IP Address of your backup server here.
- » **Web Page User Password:** You can password-protect your Element’s web server connection by entering a numeric password here.

Note: If you set a password for HTTP access, you will not see your password displayed in this field upon re-entering the IP Address book. This is a security feature intended to prevent “over-the-shoulder” password theft.

- Rotating the **Action** knob chooses between the following options:
 - » **Save** stores the changes you’ve made to the IP Address Book.
 - » **Undo** reverses any changes you’ve made if you haven’t yet saved them.
 - » **Reboot** immediately reboots the Element.
- Press the **Exit** knob to leave the IP Address Book.

Note: After making changes to any Element IP address settings, you must save the changes and reboot the console. Use the “REBOOT” soft key to begin an immediate reboot sequence.

Remember, you can even reboot Element while on-the-air, since the audio mixing is not done in the console but in the Studio Engine; your audio will continue to play without interruption.

What about monitors and meters, you may ask? The detailed configuration of timers, clock, monitors and metering is not included in this basic setup. Please refer to **Chapter 5 - Element Operation** where these topics are discussed in depth.

The next section will walk you through setting up your StudioEngine.

StudioEngine Quick Setup

Connections

Note: We recommend **leaving 1RU of “breathing space”** for ventilation above and below the StudioEngine when you rack-mount the unit.

Using the supplied AC power cord, connect the StudioEngine to the mains. Route a length of CAT-6 cable from StudioEngine to a **Gigabit** port on your studio’s Ethernet switch, but don’t connect it quite yet.

IP Configuration

1. Power on your StudioEngine; the front-panel display will indicate the boot-up sequence. When the screen displays IP address and network connection information, push the control knob to call the Main Menu.
2. Turn the control knob to highlight Option #4, **IP Settings** (Figure 1-14), and push to select.



Figure 1-14: StudioEngine IP configuration screen.

3. Push the control knob and you’ll see that the first line of the display (marked **Net Addr**) is underlined. Push the knob again to select this line.
4. You’ll see a flashing underline under the first digit of the IP address. Push and rotate the control knob to select the value for this digit. Push again to “take” the value.
5. Continue this sequence until your IP address is properly entered. When finished, turn the control knob until the check mark at the end of the line is highlighted, and push the knob to apply the new IP address value.
6. When you’ve set the subnet mask and gateway IP address, choose **OK** at the bottom of the screen.
7. You’ll be asked if you’d like to reboot for changes to take effect. select **YES** and connect the Ethernet cable to your StudioEngine.

Secret Button Function: Here it is, the first of many “secret” controls hidden about Element and meant for your Engineering eyes only.

If, during bootup, you press the StudioEngine’s control knob within 6 secs of the initial screen display, you’ll be asked if you want to reset the front panel and HTTP passwords to factory default. This is your “backdoor” into the system should you forget the login password to the front panel. Changing these passwords forces a reboot.

StudioEngine Channel Settings

For the next steps we’ll be using the StudioEngine’s HTTP interface, so connect a computer loaded with an Internet browser to the local switch. This computer should have an IP address in the same range assigned to the Element and StudioEngine.

Note: Axia web interfaces have been tested with Microsoft Internet Explorer, version 5 or later, but may also work with other browsers.

Whatever browser you choose, **Java must be enabled and your pop-up blocker, if any, must be disabled** in order to work with Axia equipment.

Note that Windows Vista versions *do not* have Java installed by default as in prior versions. You must install the Sun Java package found at <http://www.java.com>.

In a Livewire network, individual devices (audio nodes, studio controllers, etc.) are identified by unique IP addresses. But what about the audio streams these devices generate? Think about how many audio sources and destinations there are in even a small studio — there are a lot to keep track of. In the analog days, we’d affix a numbered label to each cable that entered the terminal room to identify each audio circuit. Obviously, we can’t attach pieces of paper to digital packet streams, but we can give each one a “label.”

We refer to these “labels” as Network Channel Numbers. Each Livewire system can support 32,766 channels of audio, which enables us to give each audio source or destination its own unique numeric channel number.

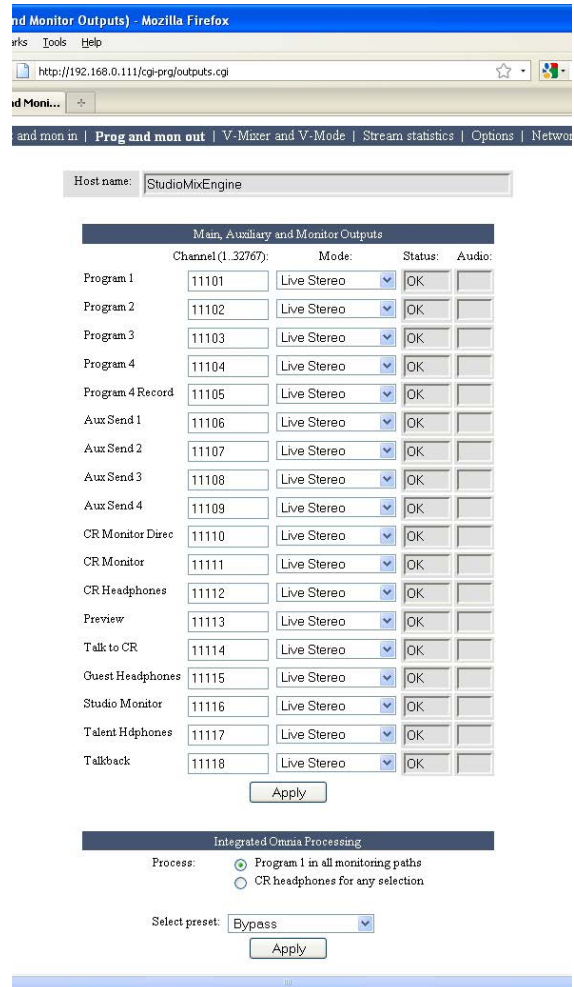


Figure 1-15: StudioEngine Output configuration

Note: 32,000+ channel numbers exceeds the average human’s RAM storage capacity. We recommend using a spreadsheet program — just to make sure you don’t generate painful read-memory register errors.

As soon as you connected your StudioEngine to the network (following the steps in the previous section), it began to generate audio using **factory default channel numbers**. To avoid conflict with other studios, you *must* change those default values to new channel numbers.

1. Open the browser on your computer and point it to the IP address you previously set for your StudioEngine. Choose the **Program And Monitor Outputs** menu option to configure the output buses of the Element.
2. You’ll be prompted to enter a user name and pass-

word. The default user name is “user”. Leave the password field blank.

3. You’ll see the screen shown in Figure 1-15. This screen allows you to set channel numbers for all of the audio outputs generated by Element; program and record busses, monitor feeds, and talkback destinations. Work down the list, assign each one a unique channel number and record them in your channel number log.
4. Find the column entitled **Mode**. Each Studio Engine is shipped with the most common streams enabled with **Live Stereo** mode. Make sure all of your desired streams are enabled.
5. Choose **Apply**.

A word about stream types: There are several different types of streams available in the **Mode** drop-down box: **Live Stereo and Standard Stereo**.

Live Stereo was previously referred to as **Livestreams**. Use Live Stereo streams whenever you need the lowest latency for on-air feeds, mic-to-headphone paths, etc.

Standard Stereo is intended to provide the best compatibility with older PC systems, but the trade-off is that these streams have a higher amount of latency.

Set Your Console Type

Note: Manual setting of console type is only necessary on Element consoles running software versions prior to v2.0. In Elements running v2.0 or higher, this setting will auto-detect.

Axia StudioEngines will work with different types of consoles, so you need to tell it which type you’re pairing it with.

1. Navigate to the “Engine ID” menu and find the “Application Interface Options” section. Be sure that **Element** is checked for the “Console Type”.
2. Click **Apply**.

Advanced Settings

You’ve no doubt noticed that there are many more options for your Element and StudioEngine than we’ve covered here. That’s because Chapter One was meant to get you up and running as quickly as possible. For an in-depth explanation of the other available settings, please refer to **Chapter 8: Advanced Element Controls** and **Chapter 9: StudioEngine Controls**.

What’s Next

Take a break! You’re done with initial set-up of your Element and StudioEngine.

When you’re ready, you may skip Chapter 2 (PowerStation setup) and jump to **Chapter 3: Working with Sources** for a walk through one of the most important Element concepts: Source Profiles. 🔄

Do digital streams

dream of electric DJs?

Just Bradbury knows.

Chapter Two:

Element with PowerStation

Note: Chapter Two of this manual discusses system setup when using the Axia Element console with PowerStation. If your Element is being used with a PowerStation, this section is for you.

If you are using the Axia StudioEngine with your Element, please refer to Chapter 1.

Introduction

If you are starting here, you are the proud owner of an Axia Element and a PowerStation. You have probably read the Quickstart section and are hungry for more knowledge.

If your system consists of more than just a basic Element console and PowerStation, you know there is more

to it than just plug-and-play. After admiring these beautiful pieces of hardware, you may be wondering what to do next.

But before you dig in, be advised that *you need to assemble the rest of your Livewire network first*. Because so much of the configuration process depends upon having access to audio sources and destinations, you *must have a plan* to connect and configure your other Axia peripherals (Audio Nodes, GPIO Nodes, etc.) according to the instructions supplied with each. You should do this prior to configuring the PowerStation,

The PowerStation Family

At this time, there are two products in the PowerStation family, PowerStation MAIN and PowerStation AUX. PowerStation AUX, normally used as an expansion unit, is similar to PowerStation MAIN but it does not contain the CPU/DSP module and has a single Ethernet port. PowerStation AUX can be used as a stand-alone IO unit if desired. PowerStation MAIN and AUX provide power supply redundancy to each other when connected. We will do our best to indicate where features apply to a specific model.

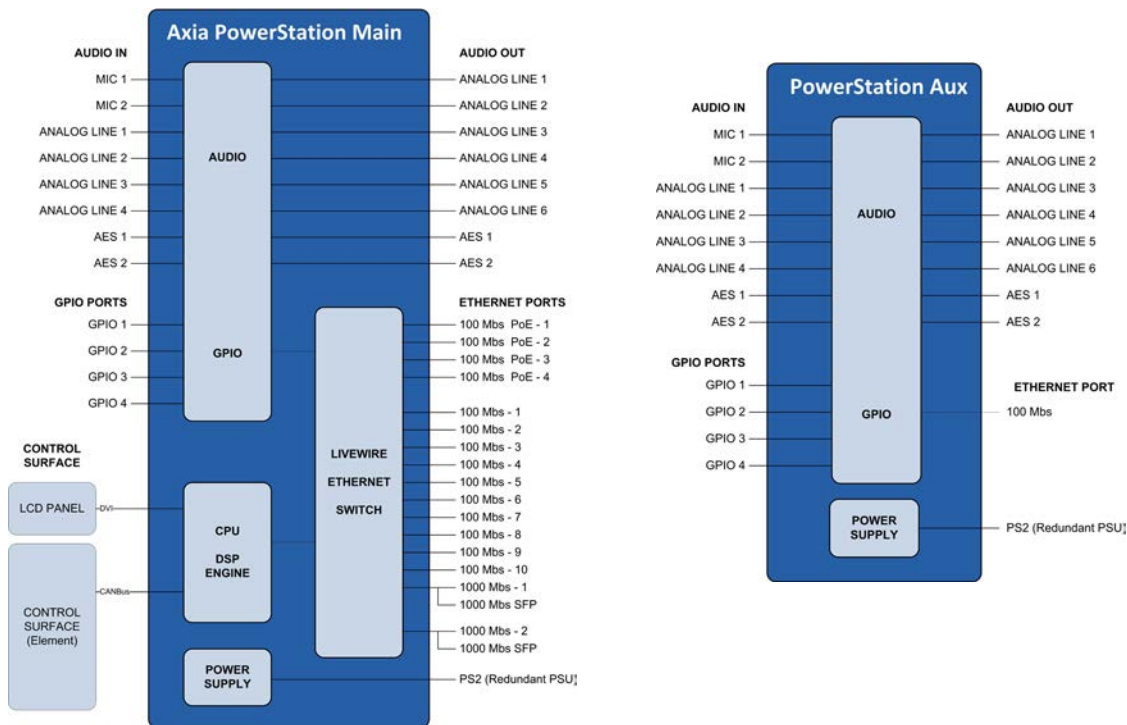


Figure 2-1: PowerStation MAIN and AUX - Block Diagrams

The Basics

If you are using a single PowerStation with an Element control surface, there is not too much planning required since the factory default configuration is designed for out-of-box stand-alone operation. If, however, you plan to interconnect your new PowerStation with other Livewire gear in a larger network, you will need to be organized. This is no different than any other studio project. Lets have a peek under the hood and see what the PowerStation can do. Figure 2-1 illustrates the building blocks of the PowerStation MAIN and PowerStation AUX.

The PowerStation inputs are the sources in your studio such as microphones, cd players and other audio playback devices. The audio outputs of the PowerStation will be connected to control room monitors, preview (cue) speaker, headphones amplifiers and possibly some audio recording devices. These external audio devices may be analog or AES devices as shown in Figure 2-1.

The GPIO ports are used for control interfaces with other external devices such as air lights, recorders and CD players,

The 100 Mbps Ethernet ports may be used to connect PCs running Axia's IP-Audio driver or expand your system by adding other Livewire devices such as Axia 8x8 nodes or a PowerStation AUX.

The 1000 Mbps Ethernet ports are used to connect to your PowerStation to other PowerStation MAIN units or an Ethernet core switch.

The remaining connectors are used to connect your control surface and its DVI-D monitor.

Getting Prepared

Before you dive into the hardware, you'll need to determine a range of IP addresses to assign to each studio and log each device's IP as you assign it; Appendix F contains an IP Assignment Worksheet you can use for this purpose. IP addresses used in an Axia network must be valid Unicast IP addresses. Determine your network's subnet mask settings at the same time (typically this val-

ue is set at 255.255.255.0 for intranet applications).

A PowerStation MAIN with a PowerStation AUX will require a range of four consecutive IP addresses. You will specify the first of these addresses and the others will be assigned automatically - be sure to accommodate these four consecutive addresses in your IP plan.

Unicast vs. Multicast IP Addresses: Data is routed over IP networks in one of two ways: point-to-point unicast or multicast.

Livewire devices use common TCP/IP unicast IP addresses for control and web browser access. These are numbers you assign within the range used by your network. Since most Livewire networks are not intended to be accessed via the Internet, we recommend you use the non-routable IP addresses such as the range of 192.168.0.0 to 192.168.255.255. These IP addresses have been set aside specifically for use with local networks.

Multicast allows efficient one-to-many connections, so Livewire uses that for its audio streams, source advertising, and synchronization signals. You do not need to assign these multicast addresses because the system does this automatically.

For more information on network construction, please refer to our companion Introduction to Livewire: System Design Reference and Primer available at <https://www.telosalliance.com/Axia>.

When you install the PowerStation, please mount it in an equipment rack that has free air flow. DO NOT obstruct the air flow to the PowerStation since it is dependent on convection cooling. The PowerStation does not have any fans so you can use it in a quiet studio environment but you MUST provide adequate ventilation. Do not obstruct the air flow above or below the PowerStation. Those vents serve a very important purpose.

To install the Element control surface in your studio furniture, you'll need to prepare a cutout in the counter top. A dimensional drawing with all pertinent measurements is found in **Appendix A: Specifications**. Make certain that there's adequate clearance inside the furniture for the required power cable entry into the console; knockout plugs are located at both bottom rear corners of Element for cable routing access.

PowerStation's configuration is web-based, so you'll need a computer with a web browser. Any current desktop or notebook PC with an Ethernet port and a standard Internet browser with Java support is acceptable.

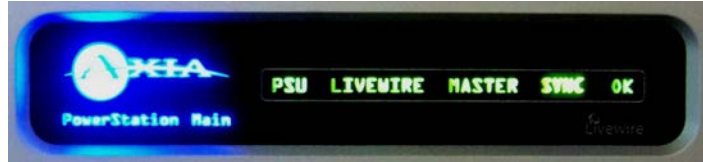


Figure 2-2: PowerStation Front Panel Indicators

For Livewire network cable connections, CAT-5e Ethernet cable is required however many use CAT-6 since it is readily available at a slightly higher cost. For greater detail on cable selections, we recommend you read *The Axia Guide to Choosing Category Cable* available from <https://www.telosalliance.com/Axia>.

In a larger network with a core switch, always make certain that power has been applied to your core Ethernet switch and that the switch is properly configured for multicast as recommended by Axia before powering your other Axia components.

PowerStation - Front Panel

The indicator panel of the PowerStation MAIN, shown here in Figure 2-2, is very clean. Sorry - there are no controls for you to push or turn. All configuration and setup is performed in software through the web browser interface. The PowerStation AUX is very similar. Differences are noted in the following section.

Front Panel Indicators

Even though there are no knobs or dials, the front panel has some very useful indicators that tell you about the health and status of your PowerStation. In all cases, solid GREEN indicates normal operating conditions.

PSU

This is a general health indicator for the PowerStation's power supply. Solid GREEN is the normal state. A RED LED indicates a power supply or fuse fault. If you are using the backup power provided by a PowerStation AUX, solid GREEN indicates normal health. If the AUX power LED is ORANGE, the fault is with the PowerStation MAIN. If a PowerStation MAIN is being used without an AUX unit, a configuration checkbox located in the MixEngine Options web page, will disable the check for

the redundant power supply and return a GREEN status for a single power supply.

LINK (PowerStation AUX only)

When illuminated continuously, this LED indicates that the PowerStation's Ethernet section is functioning and that the PowerStation's network devices are linked.

LIVEWIRE

This indicates that Livewire network traffic present and multicast streams are properly advertised.

MASTER

Solid GREEN indicates the PowerStation a synchronized as a Master clock to the Livewire network. All other devices should then be reporting Sync or Slave. There should be only one Master clock device in a Livewire network at any given time.

SYNC

Solid GREEN indicates the PowerStation a synchronized as a slave to the Livewire network and the clock is locked. Flashing GREEN indicates sync packets are being received, but not locked yet. For the sake of illustration, both Master and Sync are illuminated in Figure 2-2. This condition should never exist in the real world since a Livewire device is either a master or a sync slave; never both.

OK (PowerStation MAIN only)

Solid GREEN indicates the PowerStation MAIN is in a normal state of health. Since several internal conditions are monitored, a RED OK indicator can mean one or more of several abnormal conditions. A correctable fault condition will be an over-temperature alarm. Check to ensure the unit has adequate air flow and that the heat sinks are only slightly warm - never hot.

Contact Axia tech support for additional assistance.

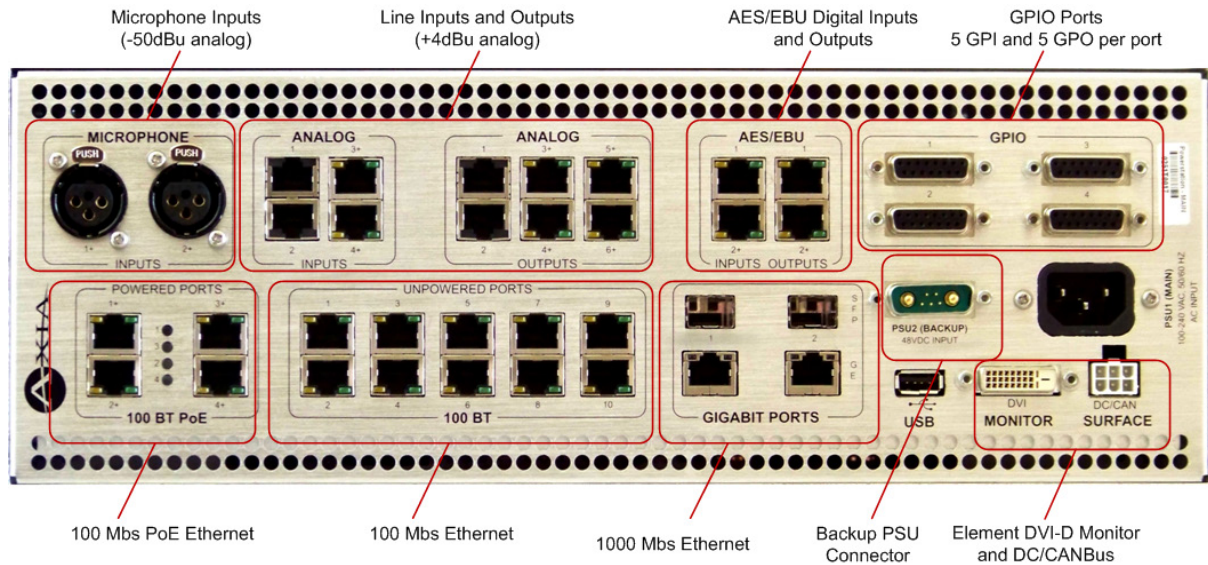


Figure 2-3: PowerStation MAIN Rear Panel Connections

PowerStation - Rear Panel

As you can see in Figure 2-3, there are no switches or controls on the PowerStation rear panel. All setup is performed with software. The rear panel consists of only connectors and indicators.

Power

There are two power connectors on the PowerStation. PSU1 (MAIN) is the standard IEC receptacle for your mains power. This is auto-sensing for voltages in the range from 100 to 240 VAC.

The second power supply connection is labelled PSU2 (BACKUP). It is to be used only in conjunction with a PowerStation AUX chassis. This is a type 7W2 DB-combo connector to be used exclusively for this purpose. If there is a failure of either the PowerStation MAIN or AUX's power supply, it will automatically utilize backup power provided by this connector and the PSU indicator on the front panel will indicate the failure condition.

Note: The PowerStation MAIN and AUX provide backup power to each other. The failure of a power supply in either a MAIN or AUX unit will cause it to automatically and seamlessly use the backup power supplied by the remaining healthy unit.

Do not connect the PSU2 connector to any device other than a PowerStation MAIN or AUX chassis. If you are connecting an AUX to a “hot” MAIN, be sure the AUX unit is powered up by first connecting PSU1 to your mains power supply.

Audio Connections

The PowerStation's rear panel contains all of the connectors used for audio I/O, Ethernet, GPIO, power supply and the connections to your Element control surface. Note that we use RJ-45 connectors are used for four purposes:

- Analog audio inputs and outputs
- AES audio inputs and outputs
- CANBus (Element internal modules and external accessory panels)
- Ethernet (some with PoE - Power over Ethernet)

It is important to follow the proper conventions for wiring these connectors and ensure that the connector functions are not confused as some damage may result with improper connections.

Analog and AES Audio

The connector pin functions shown in Figure 2-4 are the same for both the AES and Analog inputs and outputs.



| INPUT CONNECTORS | |
|------------------|--------------------------|
| Pin | Function Analog/AES |
| 1 | Left Ch. Input + / AES + |
| 2 | Left Ch. Input - / AES - |
| 3 | Right Channel Input + |
| 4 | Not Connected |
| 5 | Not Connected |
| 6 | Right Channel Input - |
| 7 | Not Connected |
| 8 | Not Connected |

Figure 2-4: Analog and AES Audio Connector Pin-Outs

Microphone

There are two XLR-F connectors on the rear panel that are designed for microphone inputs. These connectors use the standard wiring convention for a 3-pin XLR audio connector. These connectors may have 48-volt Phantom Power enabled via the PowerStation’s web page configuration so take appropriate precautions if you connect anything other than a microphone to these inputs when Phantom Power is enabled.

GPIO Connections

The PowerStation MAIN and AUX each include four GPIO ports wired in the same configuration as GPIO ports on other Axia products. Please refer to **Chapter 4: Configuring GPIO** for the functions of these ports and wiring diagrams for the DB-15 connectors.

In most cases, a GPIO port will be associated with a single source such as a cd player, studio microphone, profanity delay, etc. PathfinderPC may also be used to monitor and control GPIO for advanced applications.

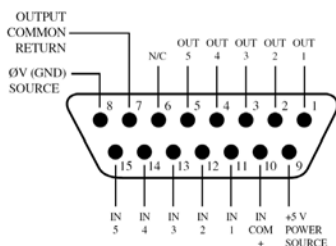


Figure 2-5: GPIO Connector Pin-Outs

The interconnections to GPIO ports will vary depending on the type external equipment being used and whether or not voltage is supplied by an external device.

Chapter 4: Configuring GPIO provides the details.

Ethernet Connections

The PowerStation MAIN has three types of Ethernet connections and it is important to use them as intended since the internal Ethernet switch is configured in a specific manner. The types of connectors available are:

- 100 Mbps PoE (Power-over-Ethernet) ports are designed to be used with future Livewire products that will not use an external power supply but rather obtain their power over Ethernet from one of these special Ethernet ports.
- 100 Mbps Ethernet standard ports are used to connect PC’s or other Livewire devices to your Livewire network. These devices might include additional Livewire nodes or PC’s running the Axia IP-Audio driver.
- 1000 Mbps ports (GIGABIT PORTS) are used for connections to other PowerStations or for connections to an Ethernet core switch as described below.

In addition to its audio and PSU connections, the PowerStation AUX unit has a single 100 Mbps Ethernet connection that is intended to be connected to a 100Mbps port on its associated PowerStation MAIN.

There are a few different configurations for the two 1000 Mbps Ethernet ports on your PowerStation MAIN.

PowerStation Ring

In this mode, the 1000 Mbps Ethernet ports will be looped to other PowerStation Main units in a ring configuration. Up to four PowerStation MAIN chassis may be connected in this manner. This mode provides for Ethernet fault tolerance using standard Spanning Tree Protocol. The failure or disconnection of any PowerStation will not affect the operation of others and any audio from common sources connected to an operating PowerStation will continue uninterrupted.

Ethernet Core Switch

Trunk mode for an uplink port supports the connection of a PowerStation to a 1000 Mbps port on a properly configured Ethernet core switch.

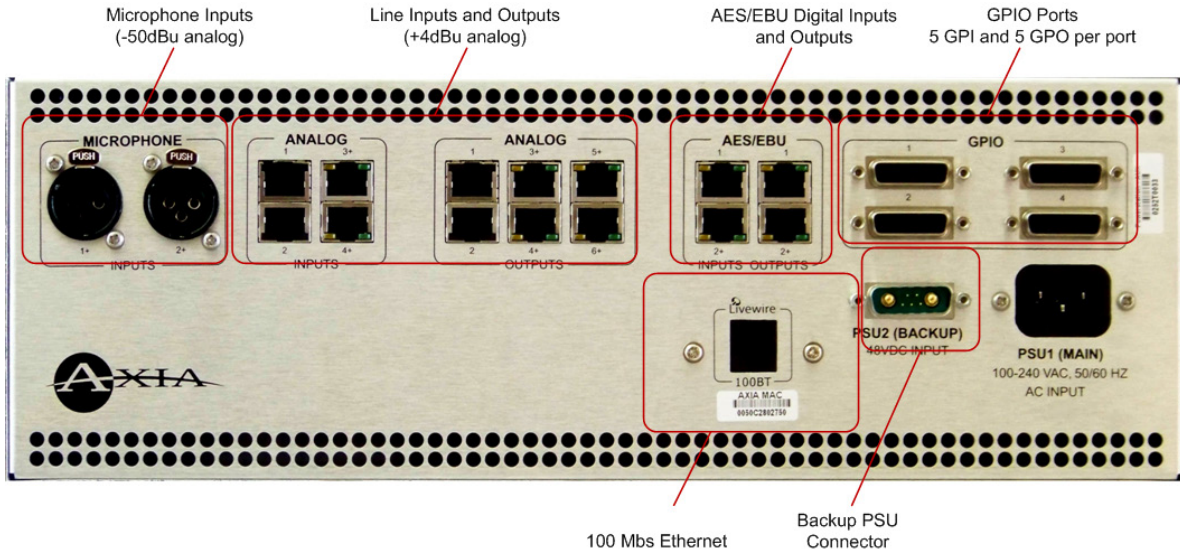


Figure 2-3: PowerStation AUX Rear Panel Connections

Other Ethernet Configurations

The configuration of a system using redundant core switches and other fault tolerant configurations is possible. Contact Axia technical support or your network administrator for guidance. See **Chapter 10: Power Station Controls** for more details on Ethernet.

SFP Modules

Both 1000 Mbps Ethernet ports are equipped with SFP (Small Form Pluggable) slots that can be used for media converters. Some facilities have Ethernet runs that could exceed 100 meters. Since 100 meters is the maximum distance allowed for UTP cable, a fiber trunk must be used in these cases and various SFP modules provide an inexpensive way to connect to this fiber-optic cable. Note that the SFP modules cannot be used at the same time as the 1000 Mbps copper ports since these are dual-purpose ports, not independent ports.

Please refer to **Chapter 10: PowerStation Controls** for more details on Ethernet port configuration.

USB

The USB port on the PowerStation MAIN will be used for other features that may be added in the future. USB features are not currently implemented.

Element Console Connections

PowerStation MAIN includes two connections for

use in conjunction with your Element control surface.

PowerStation AUX provides I/O expansion and redundant power capabilities only, and cannot be connected directly to an Element control surface.

DVI Monitor

This is a DVI-D connector used to connect the video display associated with your Element console.

Important: If your display has only analog VGA or DVI-A, it is not suitable for use with a PowerStation. DVI-D is required.

Most monitors currently available are equipped for DVI-D. Be sure to check this detail prior to purchasing a monitor for your PowerStation. The cable length should be a maximum 5 meters to be compliant with the DVI-D specification. The display resolution is 1024 x 768.

Note: Be sure your DVI-D monitor is connected and turned ON when the PowerStation is powered up. The PowerStation's video output may be disabled if a monitor is not detected on boot-up.

DC/CAN Surface

This connector is a 6-pin Molex connector that is used to provide DC power (48 vdc) plus CANBus data to your Element control surface. Use the cable provided with your control surface. If you require a longer cable

or a cable for a “split” console configuration, please contact your Axia sales representative.

Your control surface must be connected to a PowerStation MAIN using **only** the supplied 6-conductor cable. Refer to Figure 2-8 in the following section.

When you connected the cable to the Element as described above, you no doubt noticed some RJ-45 connectors in the vicinity. This is your CANBus distribution hub. Do NOT connect any Ethernet cables to the CANBus distribution hub that is inside the Element. This hub is for CANBus connections only and may cause damage to other equipment. The RJ-45 connector is used to distribute 48 VDC to the CANBus modules and accessory panels.

What is CANBus? Controller Area Network (CAN) is a multicast shared serial bus standard, originally developed in the 1980s by Robert Bosch GmbH, for connecting electronic control units (ECUs). Although initially created for automotive purposes, nowadays it is used in many embedded control applications.

The CAN data link layer protocol is standardized in ISO 11898-1 (2003).

Element with PowerStation: Setup

If you haven’t done so yet, it’s time to get your Element out of its packing crate. This can be a two-person job, so grab a partner.

Important: Like any electronic device, Element can be affected by static electricity. Use of a personal grounding device is strongly recommended while handling the unit.

Position one person at each end of Element and, grasping the metal enclosure at the bottom, simultaneously lift upward out of the shipping crate. Remove packing materials and store them in the crate for future use. Carefully lower Element into your counter top cutout, taking care to lower both sides at an equal rate to avoid becoming jammed in the millwork.

Important: Element is a drop-in style control surface and requires a counter top cutout. For cutout dimensions, please refer to Appendix A.

Connections

Cable connections for Element are entirely different from any other mixing surface you may be familiar with. There are no audio inputs or outputs; Element needs only a single data / power connection to operate.

Important: Your Element console MUST be grounded. Grounding reduces the risk of electric shock by providing a “path of least resistance” for electric current. Improper grounding can result in a risk of electric shock.

Check with a qualified electrician if you are in doubt about how to properly ground this equipment. If your local electrical code prohibits the use of a Station Ground for this purpose, as described above, use the specific “Safety Ground” your local regulations mandate.



Figure 2-6: Accessing Element’s connection panel.

Element **must** be connected to a grounded metal permanent wiring system or other equipment grounding conductor using the threaded grounding stud located inside the connections bay. Open the bay by flipping open the overbridge above the faders, as shown in Figure 2-7. For ground sources, we recommend, in order of preference:

- » “Station Ground,” the heavy copper strap found in the walls and floors of many radio studios.
- » AC Safety Ground — the “3rd prong” of a nearby outlet.
- » A bonded electrical conduit.

#12 AWG GREEN stranded wire is the *minimum* wire gauge acceptable for grounding Element.

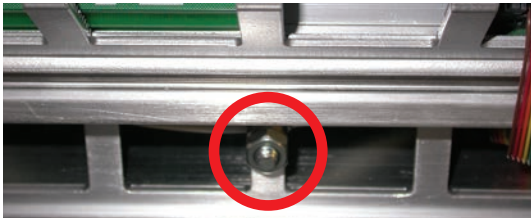


Figure 2-7: Locating the grounding stud.

One end of the Element power / communication cable is fitted with a strain relief. Connect this end to the Molex connector on the back of the PowerStation MAIN. Connect the other end to the Molex socket on the Element connection panel.

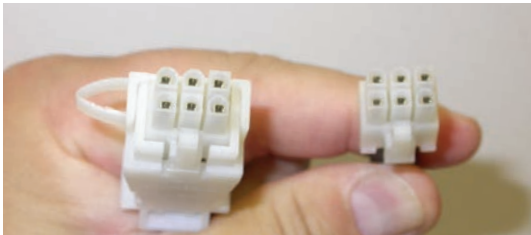


Figure 2-8: Detail of data/communication cable ends.



Figure 2-9: Element connection panel. Circled connector is for power/data cable; RJ-45's connect to fader and accessory modules.

A DVI-D compatible monitor must be connected to the DVI-D connector on the back of the PowerStation. This monitor displays metering, a clock and lots of other user interface information.

IMPORTANT: Element's power cable is also host to all data communication between the actual surface and its CPU (housed in the Element Power Supply/GPIO Node) by **CANBus** technology; it does not require a separate Ethernet connection.

Never connect any of the RJ-45 ports on the Element connection panel to an Ethernet switch. These ports are for connection of Element fader and accessory modules only; connecting them to a powered Ethernet switch could damage the board's electronics and **void your warranty.**

“Capturing” Your Console

If you have carefully followed to steps on the preceding pages, it is now time to apply power. Connect PSU1 and watch as your PowerStation and Element come to life.

Upon power-up of your Element, some or all of the alphanumeric displays above the faders may read **INACTIVE**. Before you can use your Element, you will need to run the **Capture** routine.



Figure 2-10: Identifying the Standard Monitor Module (left) and Monitor + 2-Fader Module (right).

“Press and hold” the ***** and **2** keys on the Monitor Module for 5 seconds. The alphanumeric displays above the faders will change to read **Capture**.

Now, you will want to verify that LED displays above the faders display the channel numbers in the order you desire. If not, you can adjust them individually using the **PGM1** and **PGM2** buttons above each fader to change the channel number to the one you desire.

When you're done adjusting channel number displays, press the **↵(enter)** or **#** (if you have a Monitor +2-fader module) key to exit Capture Mode. Your Element hardware is now ready to use.

Hello Moto: If you have motorized faders, you can “mirror” other motorized faders while you

are in Capture Mode. A motorized fader that is “slaved” to a master fader will move automatically to mirror the movements of the master. Mirrored faders both control gain for the same source, but the master can override the setting of the slave — useful for “split” Element setups where talent has a local set of faders that may be used to control certain sources, but you still want the Board Operator to have master control.

To mirror a fader, press the **Options** key above the fader you wish to make the “slave”. An apostrophe (‘) will be displayed next to its numeric indicator. Pressing the fader’s **PGM1** and **PGM2** keys will change the numeric indicator, indicating the “Master” to which this fader is now slaved; a display reading 2’ means that the fader is slaved to fader 2.

Pressing the **Options** key again returns the fader to non-mirrored mode.

Short Navigation Tutorial

There are several different ways to change on-screen options. The first way is with Element’s SoftKnobs, located directly above the Monitor Module and shown in Figure 2-11.



Figure 2-11: Element SoftKnobs.

If your Element is equipped the standard Monitor module, you will have six SoftKnobs as shown. The 2-fader Master module has three SoftKnobs. These knobs are context-sensitive. When any of Element’s setup modes are activated using the options keys on the faders or Master Module, you’ll see a corresponding row of “knobs” represented onscreen, as shown in Figure 2-12.



Figure 2-12: On-screen SoftKnobs.

Note that there are sometimes functions shown both above and below the on-screen SoftKnobs. When a function is presented above the knob, turning that knob accomplishes that function. When a function is presented below the knob, pushing in gently on the corresponding SoftKnob activates that function. The example shown in Figure 2-14 is from the IP Address Book screen - rotate to “select”; push to “take”.

If your Element is equipped with the standard Monitor Module, you can also navigate using the control knob, directional keys and Enter key located at the lower right-hand corner of the module, as shown in Figure 2-10.

Additionally, whenever numeric input is required (like entering IP addresses), you can use the numeric keypad located just above the Navigation Keys (Figure 2-13) to enter numbers directly.



Figure 2-13: Master Module numeric keypad.

IP Address Configuration

Using your IP Assignment Worksheet, you’ll now choose an IP address for your PowerStation. Note that since the PowerStation MAIN is a multi-function unit, it will actually utilize three IP addresses. The first address is assigned to the Element console. Once this assignment has taken effect, the next two addresses will be assigned to the PowerStation Ethernet switch and the I/O section. For example, if you assign 192.168.0.100 to the Element, the PowerStation will automatically assign 192.168.0.101 to its internal Ethernet switch and 192.168.0.102 to its I/O module. If a PowerStation AUX is connected, 192.168.0.103 would automatically be assigned to the AUX unit. Be sure to accommodate these IP addresses in you IP scheme.

A PowerStation AUX may be used as a standalone

unit. In this case, you will use its factory-assigned IP address to access the unit for configuration with your web browser. You may change the standalone PowerStation AUX IP address to match your IP scheme.

Factory default IP address is 192.168.2.50.

Multiple PowerStations? If you are configuring multiple units, we strongly recommend that you proceed by connecting only one system at a time. That way you will not have IP conflicts and any PowerStation AUX units will automatically be paired with the correct PowerStation MAIN.

If your system employs an Ethernet core switch, it must have an IP address that is lower than any PowerStation units. This function of the IGMP standard ensures that the multicast querier is handled by the core switch if one exists and passed off transparently to another switch should the core switch fail or be disconnected.

Note: “Gateway” settings on PowerStation equipment are required. The Gateway may be used by PowerStation during IP address setup. A valid Gateway also enables access the PowerStation’s configuration utility remotely, from outside your network and the use of an external NTP server. Enter the IP address of your master router (the one with external network connections) whenever you’re given the option to enter a gateway IP address.

Note: Element v2.x software supports redundant NTP servers. Use the second field in the IP Address Book to enter the address of a backup server.

Setting IP using the Standard Monitor Module

When the PowerStation has completed its start cycle (meter screen appears), find the section marked **Global Options** on the Monitor Module. Press and hold the key marked **Fader Options** located in the top right corner of the module (or press * and **4** and **7**) for five seconds to enter the IP Address Book (Figure 2-14).

To set the IP address, rotate the left-most SoftKnob to highlight the line titled “Element IP Address” and push the knob to select that line. Now use the numeric pad to enter the IP address. Press the leftmost SoftKey

again to “take” the new IP value. Repeat this process to set the subnet mask value.

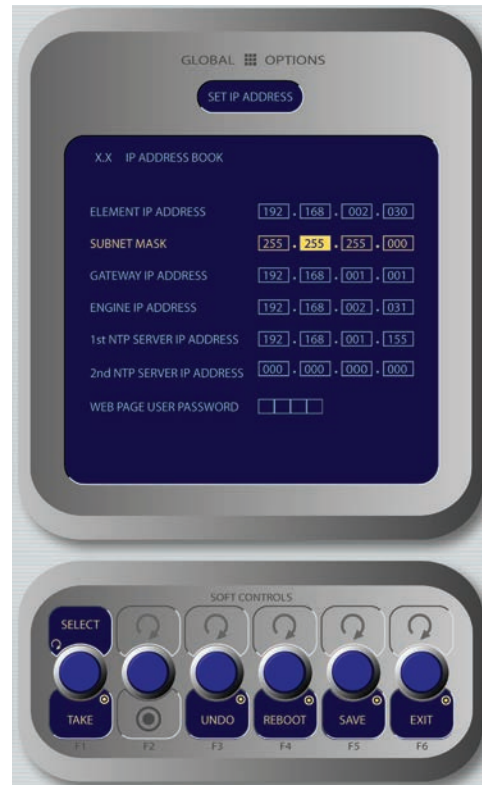


Figure 2-14: IP Address Book

Continue down the screen and, in the same way, enter the other fields’ values as appropriate.

- Rotate the **Select/Set** SoftKnob to scroll through the list of available options. To select an option to modify, push this knob. While modifying an options, rotate the knob to change an option’s value, and push the knob to move to the next field. Options include:
 - » **Element IP Address:** Every piece of Livewire gear must have its own unique IP Address. Set the IP Address for each Element in this field.
 - » **Subnet Mask:** Enter your network’s subnet mask value here, usually 255.255.255.0
 - » **Gateway IP Address:** To enable IP configuration and remote administration of your Livewire network or an external NTP server, you’ll need a network gateway. Usually this will be the IP address of your router.

Important: Your Gateway Subnet Mask should be set within the same subnet as the PowerStation, even if you have no gateway installed.

- » **Engine IP Address:** Not required for PowerStation - do not change the factory default value.
- » **1st NTP Server IP Address:** Element supports NTP (Network Time Protocol) timekeeping to synchronize time-of-day clocks across your facility. If you have an NTP server, enter its IP Address here.
- » **2nd NTP Server IP Address:** Element v2.x software supports redundant NTP servers. Enter the IP Address of your backup server here.
- » **Web Page User Password:** You can password-protect your Element's web server connection by entering a numeric password here.

Note: If you set a password for HTTP access, you will not see your password displayed in this field upon re-entering the IP Address book. This is a security feature intended to prevent "over-the-shoulder" password theft.

- If you want to reverse changes you've made and haven't saved, press the **Undo** knob to erase them.
- Press **Save** to save changes you've made.
- **Reboot** immediately reboots the PowerStation.

Note: After making changes to any Element IP address settings, you must reboot the console. Use the "REBOOT" soft key to begin an immediate reboot sequence.

Setting IP using the Monitor+ 2-Fader Module

When the PowerStation has completed its start cycle (meter screen appears), find the numeric keypad at the top right of the Monitor Module. Press and hold the * (star), "7" & "4" keys simultaneously for five seconds to enter the IP Address Book (Figure 2-15).

To set the IP address, rotate the left-most SoftKnob to highlight the line titled "Element IP Address" and push the knob to select that line. Now use the numeric pad to enter the IP address. Press the leftmost SoftKey again to "take" the new IP value. Repeat this process to set the subnet mask value.



Figure 2-15: IP Address Book

Continue down the screen and, in the same way, enter the other fields' values as appropriate.

- Rotate the **Select/Set** SoftKnob to scroll through the list of available options. To select an option to modify, push this knob. While modifying an options, rotate the knob to change an option's value, and push the knob to move to the next field. Available options include:
 - » **Element IP Address:** Every piece of Livewire gear must have its own unique IP Address. Set the IP Address for each Element in this field.
 - » **Subnet Mask:** Enter your network's subnet mask value here, usually 255.255.255.0
 - » **Gateway IP Address:** To enable IP configuration and remote administration of your Livewire network, you'll need a network gateway. Usually this will be the IP address of your router.

Important: Your Gateway Subnet Mask should be set within the same subnet as the PowerStation, even if you have no gateway installed.

- » **Engine IP Address:** Not required for PowerStation - do not change the factory default value.
- » **1st NTP Server IP Address:** Element supports NTP (Network Time Protocol) timekeeping to synchronize time-of-day clocks across your facility. If you have an NTP server, enter its IP Address here.
- » **2nd NTP Server IP Address:** Element v2.x software supports redundant NTP servers. Enter the IP Address of your backup server here.
- » **Web Page User Password:** You can password-protect your Element's web server connection by entering a numeric password here.

Note: If you set a password for HTTP access, you will not see your password displayed in this field upon re-entering the IP Address book. This is a security feature intended to prevent "over-the-shoulder" password theft.

- Rotating the **Action** knob chooses between the following options:
 - » **Save** stores the changes you've made to the IP Address Book.
 - » **Undo** reverses any changes you've made if you haven't yet saved them.
 - » **Reboot** immediately reboots the PowerStation.
- Press the **Exit** knob to leave the IP Address Book at any time without saving your changes.

Note: After making changes to any IP address settings, you must save your changes and reboot the PowerStation. Use the "REBOOT" soft key to begin an immediate reboot sequence.

Other Advanced Options

What about making changes to monitors and meters, you may ask? The detailed configuration of timers, clock, monitors and metering is not necessary for basic setup but this is important stuff too! Please refer to **Chapter 5 - Element Operation** where these topics are discussed in depth.

Now that your Element has a basic configuration, the next section will walk you through setting up your PowerStation.

PowerStation Setup

Connections and IP Configuration

In previous sections we discussed the physical connections to your PowerStation. In the last section, we discussed how to assign an IP address to your PowerStation. Once you have assigned an IP address, you can

connect a PC to a port on the PowerStation's Ethernet switch. Make sure the IP address of the PC is in the same range of the address as that chosen for your PowerStation. For example, if the address chosen for the PowerStation is 192.168.0.100, the address chosen for your PC must also start with 192.168.0 followed by 3 digits that are not already in use by another device.

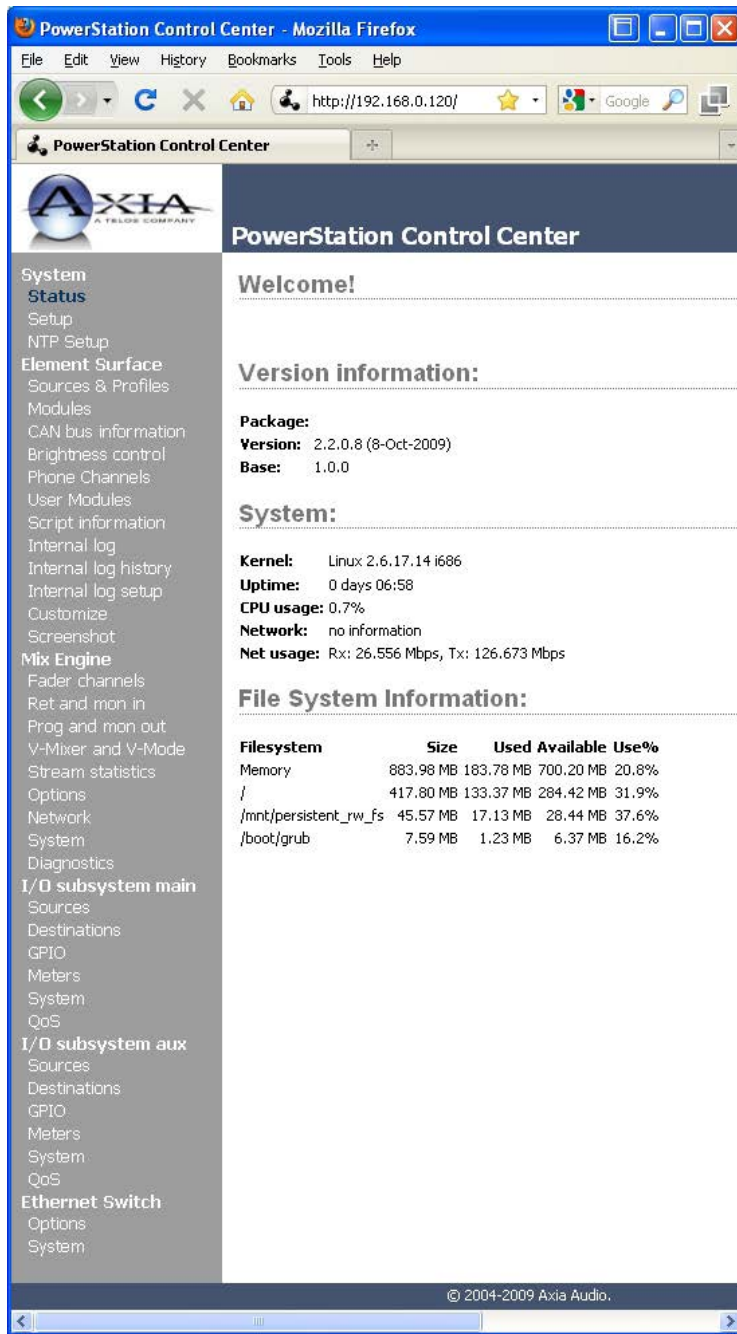


Figure 2-17: PowerStation Home Page

There are no switches or knobs on the PowerStation, all settings are configured in the PowerStation's web pages. No specialized software is required and you can use any PC (Windows, Mac or Linux) to configure your PowerStation through the HTTP interface.

All Axia IP addresses are assigned and managed manually. This gives you complete control of your address scheme and also permits you to set up a series of browser bookmarks to quickly access your PowerStation and other Axia devices. Obviously, your PC's network connection is an important connection since it is through the PowerStation's web pages that all other settings are manipulated.

Note: Axia web interfaces have been tested with Microsoft Internet Explorer (version 5 or later) but also work with other browsers including Firefox.

Whatever browser you choose, **Java must be enabled and your pop-up blocker, if any, must be disabled** in order to work with Axia equipment.

Note that Windows Vista versions *do not* have Java installed by default as in prior versions. You must install the Sun Java package found at <http://www.java.com>.

Livewire Source Channels

The first step to setting a networked audio system is to identify the network audio sources. The PowerStation's home page is shown in Figure 2-17.

In a Livewire network, individual devices (audio nodes, studio controllers, etc.) are identified by unique IP addresses. But what about the audio streams these devices generate? Think about how many audio sources and destinations there are in even a small studio — there are a lot to keep track of. In the analog days, we'd affix a numbered label to each cable that entered the terminal room to identify each audio circuit. Obviously, we can't attach pieces of paper to digital packet streams, but we can still give each one a unique "label."

We refer to these "labels" as Network Channel Numbers. Each Livewire system can support up to 32,766 channels of audio, which enables us to give each audio source its own unique numeric Livewire channel number.

Note: 32,000+ channel numbers exceeds the average human's RAM storage capacity. We recommend using a spreadsheet program — just to make sure you don't generate painful read-memory register errors.

As soon as you power up your PowerStation, it may begin to generate audio using **factory default channel numbers**. These numbers are acceptable for a stand-alone, single studio however if you have more than one studio, you *must* change those default values to new channel numbers to avoid conflict with other studios. All Livewire Channel numbers within a Livewire network **must** be unique.

Lets take a look at the HTTP interface to the PowerStation and discuss the Livewire Channel settings. Figure 2-17 shows the "home page" of the PowerStation. From here we can navigate to other pages where we will configure Sources, Destinations, GPIO and other system parameters. In this chapter, we will concentrate on the Sources and Destinations. See **Chapter 10: PowerStation Controls** for other advanced settings.

Let's proceed to configure our sources!

Source Configuration - I/O Subsystem

1. Open the web browser on your computer and point it to the IP address you previously set for your PowerStation MAIN.
2. You'll be prompted to enter a user name and password. The default user name is "user". Leave the password field blank.
3. Choose the **I/O Subsystem - MAIN** or **AUX** menu option to configure the I/O sections of the PowerStation. The user interface for **MAIN** or **AUX** units is identical.
4. Select **Sources** to proceed to the source setup page. You will now see the Sources section as shown in Figure 2-18. By default some source channel numbers and types may already be assigned; you can change these to fit into your own channel numbering plan.

Note: The PowerStation has two different types of audio sources. Some audio sources originate with the rear panel input connectors. Other audio sources (PGM1, PGM2, etc) are generated internally by the PowerStation's DSP - the MixEngine. There are several parameters associated with the PowerStation Sources. This section will discuss each of these in detail. We recommend that you configure all Livewire sources before you attempt to configure any Destinations. First we will consider the sources that originate at the rear panel connectors; the PowerStation I/O.

Source Name

Each Source needs a name so you will know what it is and where it is located. We suggest that you make this name as descriptive as possible. Don't make it too brief. As an example, don't just name **MIC-3** because that doesn't tell you enough. Use something more descriptive like **Studio-4 Mic-3** since this will tell you the location of the source as well as describe the type of source. Livewire names can contain any printable character and can be up to 24 characters long.

Channel

This is where you will enter the unique Livewire channel number we discussed briefly a couple of pages back. This number must be unique and must be less than

32,766. Many Axia users find it helpful to choose a number that is related to the unit's IP address. For example, if the IP address of the PowerStation I/O is 192.168.0.123, you might assign Livewire channels 12301 through 12308 to these sources.

Sharable

This setting is for backward compatibility only. It should always be set to **No** for your PowerStation.

Stream Mode

This setting determines the type of stream that you will be delivering to the Livewire network. As a general guideline, microphones, codecs and phone sources are usually **Live Stereo** for lowest latency. CD's, satellite feeds and computer sources are usually set to **Standard Stereo**.

A word about stream types: There are currently three choices available in the **Mode** drop-down box: **Live Stereo** and **Standard Stereo** and **Disabled**.

Live Stereo was previously referred to as **Livestreams**. Use Live Stereo streams whenever you need the lowest latency for on-air feeds, mic-to-headphone paths, etc.

Standard Stereo is intended to provide the best compatibility with older PC systems, but the trade-off is that these streams have a higher amount of latency.

We suggest that any sources not in use should be set to **Disabled**. This will preserve bandwidth plus make your setup less complicated.

Input Gain

This setting allows you to match the level of your source so that the levels of the Livewire streams are standardized within the system. A gain of 0 can be used for sources that are already operating at +4dB. Microphones

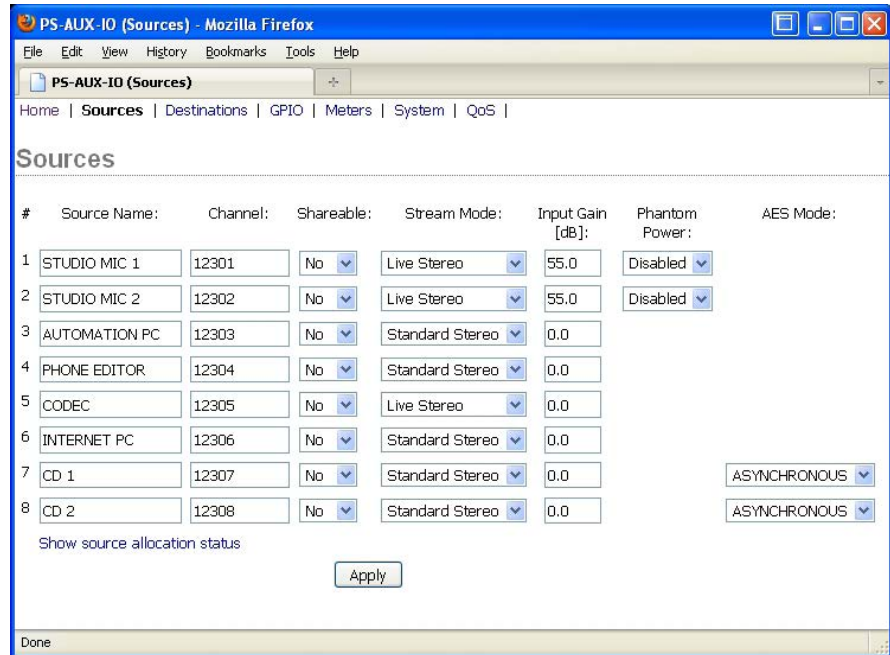


Figure 2-18: PowerStation AUX I/O Source Configuration

need approximately 50 dB of gain however this varies widely depending on the microphone. Other sources may need a bit of gain tweaking to get their levels normalized. Be sure to click **Apply** before you wander off to another page - this will save your settings.

You may find it more convenient to use the **Meters** page to set your Source Input Gain. This page provides you with a visual reference.

Phantom Power

If you are using condenser microphones and you are not using outboard microphone processors, you will probably need to enable Phantom Power. While it is not necessary to use Phantom Power with dynamic microphones, it should not be harmful to dynamic microphones if Phantom Power is enabled. Do not enable Phantom Power on channels using external microphone processors as this may cause damage to those units. Consult the technical manuals for your microphones and any outboard processors to ensure you have correctly configured the PowerStation's Phantom Power option.

AES Mode

AES sources include an additional setting that configures the sample-rate convertors for these sources.

There are two possible settings:

- Asynchronous – this is the usual setting and enables sample rate conversion. Any valid AES source can be used in this mode without concerns about dropouts due to mismatched clocks.
- Synchronous – This setting may be used for standalone AES nodes but is not suitable for a standalone PowerStation since the PowerStation cannot sync to an external AES clock.

Source Configuration - MixEngine

The PowerStation includes an integrated Studio Mix Engine. This section of the PowerStation creates all of the Program Bus sources that are delivered to the network as well as those sources associated with monitor and headphone feeds. Figure 2-19 shows the configuration web page for this section. To get to this page, select **Mix Engine - Prog and Monitor Out**.

Channel Name and Number

This section is where you specify the Livewire channel number. You will observe that the names are predetermined and cannot be changed. As discussed in the previous section, the channel number can be any number from 1 to 32,766. You may wish to follow the convention of using the last octet as a “base” for your Livewire channel numbers. For example, if the Element IP address is 192.168.0.100, you may use 10001 through 10018 for the Livewire channel assignments of the Program and Monitor channels. The numbering convention easily extends to the VMIX and VMODE sections that are discussed later in **Chapter 7: Virtual Mixer (VMIX)**.

Mode

The Mode function here is identical to that described in the I/O section. **Live Stereo** should be used for any sources in your air chain or monitoring chain as this will minimize latency. **Standard Stereo** is frequently used for Record busses, Talkback and Studio functions. Other options include **Surround** and **Disabled**.

Status

This box allows you to view the status of the Program and Monitor audio streams. You should see OK for streams that are enabled and the box should be blank for

Host name: Pwr_Stn_Studio_1

| | Channel (1..32767): | Mode: | Status: | Audio: |
|------------------|---------------------|-----------------|---------|--------|
| Program 1 | 12001 | Live Stereo | OK | Green |
| Program 2 | 12002 | Live Stereo | OK | Grey |
| Program 3 | 12003 | Live Stereo | OK | Grey |
| Program 4 | 12004 | Live Stereo | OK | Grey |
| Program 4 Record | 12005 | Standard Stereo | OK | Grey |
| Aux Send 1 | 12006 | Disabled | Grey | Grey |
| Aux Send 2 | 12007 | Disabled | Grey | Grey |
| Aux Send 3 | 12008 | Disabled | Grey | Grey |
| Aux Send 4 | 12009 | Disabled | Grey | Grey |
| CR Monitor Direc | 12010 | Live Stereo | OK | Yellow |
| CR Monitor | 12011 | Live Stereo | OK | Green |
| CR Headphones | 12012 | Live Stereo | OK | Yellow |
| Preview | 12013 | Standard Stereo | OK | Grey |
| Talk to CR | 12014 | Live Stereo | OK | Grey |
| Guest Headphones | 12015 | Live Stereo | OK | Yellow |
| Studio Monitor | 12016 | Live Stereo | OK | Green |
| Talent Hdphones | 12017 | Live Stereo | OK | Green |
| Talkback | 12018 | Live Stereo | OK | Grey |

Apply

Integrated Omnia Processing

Process: Program 1 in all monitoring paths
 CR headphones for any selection

Select preset: SmoothHeadphones

Apply

Figure 2-19: PowerStation Engine Source Configuration

any streams that are disabled.

Audio

This area provides you with a visible indicator for the presence or absence of audio as well as an overall indication of level. In Figure 2-19 you can observe several busses that are active and levels are normal as indicated by the **green** color. If levels are high, the **audio** box is **yellow**. If levels are excessive, the color will change to **red**.

Other Sources: The PowerStation has other sources that may be configured in its VMIX and VMODE sections. Please see **Chapter 7: Virtual Mixer** for more details.

Integrated Omnia Processing

Some of the PowerStation's DSP has been assigned the task of audio processing. Some of the famous Omnia technology has been incorporated into this section.

You have two **Process** options: You may process only CR headphones for any selection (PGM-1, PGM-2, etc) or you may process PGM-1 in all monitoring paths. This second selection is commonly used since it allows you to process all PGM-1 monitoring whether it is CR monitors, CR headphones, CR guest headphones or Studio guests. This simulates a processed off-air feed that most radio personalities will prefer.

There are currently three **Preset** processing options: **Bypass**, **SmoothHeadphones** and **HotHeadphones**. These descriptions are self-explanatory.

Destination Configuration

Each PowerStation I/O section has eight local audio outputs to which you may deliver various Livewire audio streams. This concept of delivering streams to a physical output is the reason we prefer to use the term **Destinations** to describe these outputs. As you might have guessed, there are other places where we use destinations and they are not associated with a physical output.

The setup of the PowerStation destinations is very similar to an Axia 8x8 node. The configuration page for Destinations is shown in Figure 2-20.

Name

User-defined. Most people find it useful to describe the equipment to which the destination is connected, for

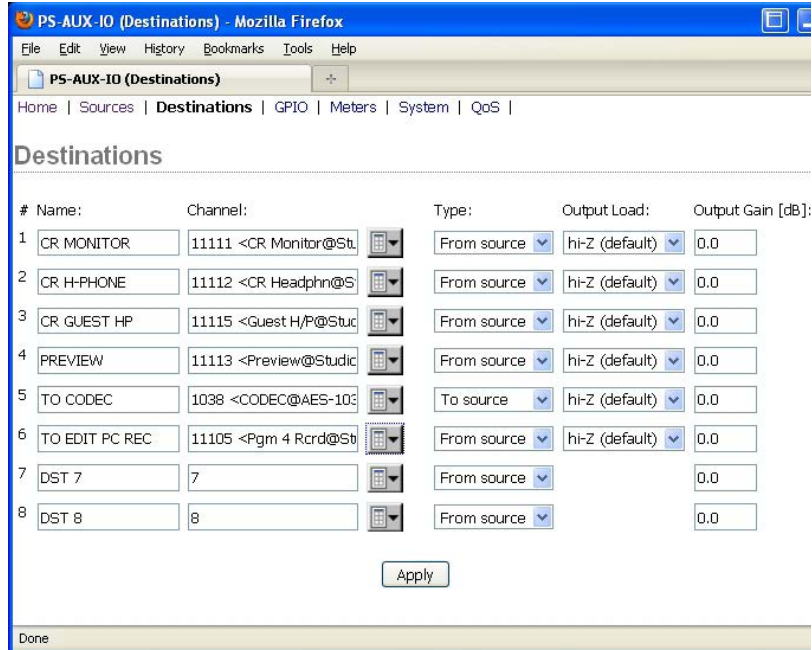


Figure 2-20: PowerStation I/O Destination Configuration

example **Studio 4 CR Monitor**.

Channel

The Channel will be determined by the Livewire channel you wish to deliver to this destination. You may enter the Channel Number directly if you happen to know the Livewire channel number or you may use the pop-up box to select the appropriate Livewire source. Once you make your selection (and appreciate the descriptive name you used to identify the source!), click **Apply** to confirm and save the Destination setting.

Type

The Type field identifies whether the destination is a “from source” or “to source” output. Let's briefly review this concept.

You will recall from the *Introduction to Livewire; System Design Reference & Primer* manual that Livewire permits special bidirectional streams for use in cases where a source and destination are associated, such as a codec or hybrid. The return feed to such devices is usually a mix-minus (clean feed) generated by a mixer or mix engine *fed back to the device* that is the primary audio source (and usually the name of the stream in question). You can create a bidirectional Livewire channel (includ-

ing associated GPIO) with a single channel number!

What does this all mean in practice? If the destination is a codec or hybrid you'll set the Destination Type to **To Source** and use the same Channel number as the stream representing the Codec or Hybrids output (the caller or far end codec audio). This sends a backfeed to that device. Other destinations such as CR Monitor, Program feeds to processor, etc will always be designated as **From Source**.

Output Load

This option is only available on the analog destinations screen. This setting has two options. The usual selection is Hi-Z and is used when the outputs are fed to High impedance destination devices. This has been the normal case for many years. When the node is feeding legacy equipment with 600 Ohm inputs, the 600 ohm option should be selected. This boosts the node's output level by ~1 dB to maintain true +4 dB levels into 600 Ohm equipment to ensure unity gain. The audio clipping point remains at 24 dB.

Note that output load is not configurable for AES destinations.

Gain

Not all equipment is designed to operate at our nominal system level of +4 dBv. This setting allows to you trim the output level +/- 12 dB to ensure that you are feeding your external equipment with the correct signal level. It is considered good practise to normalize all levels coming into your system first and then adjust output gains only when necessary.

Meters

The meters configuration page may be helpful in setting up destinations and their levels. Remember you need to install Java before these meters can be displayed. Note that the nominal signal level should be approximately -20 dBFS. This corresponds to the industry standard level of +4 dBv since our "full scale" or 0dBFS is +24 dBv.

Advanced Settings

You've no doubt noticed that there are many more options for your PowerStation than we've covered here. That's because Chapter 2 was meant to get you up and running as quickly as possible. For more advanced information, please refer to:

Chapter 4: GPIO Configuration

Chapter 7: Virtual Mixer (VMIX)

For an in-depth explanation of the other advanced settings for your Element, StudioEngine and PowerStation, please refer to Chapters 8, 9 and 10, respectively, of this manual.

What's Next?

Take a break! You're done with initial set-up. When you're ready, continue to Chapter 3 to walk through one of the most important Element concepts: Source Profiles.



Chapter

Three: Working With Sources

In this chapter we'll discuss how to set up inputs for your Element console- we call them Sources. You'll be using the HTTP servers built into the Element and StudioEngine (or PowerStation) to do this.

In the Element console's design, there are two types of profiles. One is called SHOW profile and this type of profile contains all of the "snapshot" settings that would be associated with a scene or preset which is the terminology used in the sound reinforcement or recording studio industry. The SHOW profile keeps track of monitor bus settings, fader channel assignments, processing settings, feature lockouts and many other parameters.

SOURCE profiles are the topic of this chapter. A source profile is used to identify the parameters that are unique to a specific Livewire source as it applies to a specific Element console.

You will use your web browser directed at the IP address of your Element to setup SOURCE profiles.

Note: Axia web interfaces have been tested with Microsoft Internet Explorer, version 5 or later, but also work with other browsers.

We also like Mozilla's Firefox browser, especially with regards to its "tabbed browsing" capabilities. With tabbed browsing, it's possible to bookmark the IP addressees of entire rooms worth of Audio Nodes, then recall them in tabbed groups with a single click.

Whatever browser you choose, Java must be installed and enabled, and your pop-up blocker must be disabled. The latest Java package is available at <http://www.java.com> .

Understanding Source Profiles

One of the most repetitive and tedious parts of studio building has always been tying "data" to audio sources. Consider the wiring of line selector modules: you need a cable for the remote audio source, a set of wires for a "start" closure, another set for "stop" — even with TDM routers, an operation as seemingly simple as logic-follows-audio often turns out to be not so simple.

Mix-minus and IFB generation has also been a problem in the past. Too often it's a complicated process that requires air talent to correctly determine source and bus assignments at a moment's notice. How many times has unwanted audio made air thanks to this error-prone procedure?

Your Element eliminates these headaches by automatically merging audio, logic and program data into a single, routable information stream. Since audio in a Livewire network is transported as packetized data, it's easy for us to "piggyback" other data along with audio. This is accomplished through the use of Source Profiles.

Element Source Profiles allow you to specify which network audio sources are to be used on each console in your facility. They also assign modifiers to an audio input. Characteristics like EQ curves, Pan trim, voice dynamics, even mix-minus source selections, can all be set in the Source Profile and are then automatically loaded whenever that source is assigned to an Element fader.

The result of all this is that Element is always presented with complete, consistent information about how you want a given audio source handled.

Note: Source Profile settings do not transfer between studios. In other words, a mic in Studio A that has EQ and dynamics applied through a Source Profile on the Studio A Element will not have those settings automatically applied if that mic is loaded on the Element in Studio B. We are, however, planning on this capability in future versions.



Figure 3-1: Source Profile options (the whole picture!)

Source Profile Setup

Now that you understand what Source Profiles do, let's set one up. You'll use the Element and StudioEngine HTTP interfaces to do this, so connect a computer with an Internet browser to your Livewire switch.

Note: You can't construct Source Profiles unless you've already configured the inputs (sources) of your studio's Audio Nodes. Be sure you've assigned Livewire channel numbers and enabled all sources in your Nodes, Engine, and PC drivers. This will make your sources visible on the selection list in the source profile setup screen. Make sure you've done this before proceeding further through this chapter.

Your computer must be assigned a valid network IP address in order to "see" Livewire web pages. Livewire networks do not usually contain DHCP servers, so you must manually assign your computer an available, fixed IP address within the range you previously determined for your network. Different operating systems use different methods to do this; please consult your OS's documentation for specific instructions.

Source Profile Options

1. Enter the IP address of your Element or PowerStation in your browser; you'll see the **Element Control Center** or **PowerStation Control Centre** displayed onscreen. Choose the "Sources & Profiles" menu item (choose the Configuration submenu for the Element). Enter the user name "user", leave the password field blank, and click **OK**.
2. Choose the **Source Profiles** menu item from the main screen, and click the **New Source Profile** link at the bottom of the screen. You're now in the Source Profile creation screen. It will look something like the image in the previous frame - Figure 3-1.

We are showing you the entire web page so you can see it all at once and appreciate the power of source profiles. Let's now break it down into smaller sections so you can actually read the text in the figures and consider those logical blocks with the explanation following the Figure. We will start with Figure 3-2 and the descriptions that

Figure 3-2: Source Profile General Settings

follow.

Reminder: Did you define your audio sources from the Engine and Nodes as outlined in Chapter One or Two? If not, go no further – you’ve got to do that before you can continue with Source Profile setup.

- **PRIMARY SOURCE:** All of the audio sources that you previously defined (during Audio Node or PowerStation I/O setup) are available in this drop-down box; pick one.
 - **SOURCE PROFILE NAME:** Type a 10-character descriptive name for your source. This is the description that will appear on the LED display above the console fader.
 - **SOURCE NAME OVERRIDE:** If the source you’re defining can supply Program Associated Data (for instance, a computer playout system that sends song/artist information), you can choose to have that text dynamically substituted in the alphanumeric display of the fader the source is assigned to. Instead of reading `PROPHET_1`, for example, it could scroll `FERGIE`.
 - » Choose **Show Sourcename** to have the channel alpha display the name you typed into the Source Profile Name field above.
 - » Choose **Allow Application to Override** if you’d like the PAD text displayed instead.
 - » Choose **Show Both** to have the Source Name and PAD text alternately display on a 3-second interval.
 - **SOURCE AVAILABILITY:** These check boxes determine which faders (or other inputs) you’ll allow this source to be assigned to. For example, if your source is a Control Room mic, and you only want it to appear on the left-most fader, you would check only the box marked **Channel 1**. You might want to make a CD player available on any fader, so you’d check the boxes for all faders. Some sources – especially air monitors – you might wish to prevent from ever being assigned to a fader, so you would uncheck the boxes for all faders. The number of fader checkboxes show will vary depending upon the number of faders installed in your Element.
- The three final check boxes, **CR monitor inputs**, **Studio monitor input** and **V-Mixer input** determine whether the board op will be able to assign this source to the CR and Studio monitor and headphone buses or the Virtual Mixer (please see Chapter 7: Virtual Mixer for details on this feature).

To prevent a source from appearing on these inputs' selection lists, uncheck the desired box. Generally speaking, normal sources such as computers and CD players will have fader assign capability only while sources such as off-air receivers will have monitor-only capability.

About Mics and Headphone Feeds: Element provides you with several headphone options, all selectable from Element's Monitor Module. The *Monitor 1* (control room) headphone output provides a feed intended for the Host (board-op's) mic position and includes the ability to monitor the Preview bus in headphones. Guests can talk to the host directly using the **Talkback** keys on their remote control panels.

The *Monitor 2* headphone output sends audio to talent and guest mic positions. Talent positions include a talkback channel that the host or board op can use to communicate using the **Talk To Monitor 2** function (guest positions do not have this Talkback channel).

An *individual headphone feed* can also be constructed to associate a dedicated headphone channel with a specific mic. This allows the board op to send individual, targeted talkback to a specific individual (using the **Talkback** keys) without other talent or guests hearing.

- **SOURCE TYPE:** Define your source as a microphone, a line input, a telephone input, a codec or a computer source.
 - » **Operator** is the board operator's mic. It is the source mic for Element's **TALK TO** functions. Its **On** button serves as a **COUGH/MUTE** button. Its associated logic mutes the CR monitors when **On**.
 - » **CR Producer** is used for in-studio Producer's mic positions. It has associated GPIO logic which can operate **Talk to...** functions from a remote producer's panel. It also mutes CR monitors when **On**.
 - » **CR Guest** is used for any other guest mic in the control room. Its associated logic port mutes the CR monitors when **On**. It can have an individual headphone feed.
 - » **Studio Guest** is used for any mic located in a separate studio. Its logic mutes the Studio monitors when **On**. It can have an individual headphone feed.

- » **Line** is used for any line input audio source, analog or digital. A GPIO logic port can be used to provide machine start/stop pulses if desired.
- » **Phone** defines this source as a hybrid or broadcast phone system input. A summed mono mix-minus is automatically provided.
- » **Codec** marks this source as a codec. A dual-mono mix-minus is provided; one PA feed (right) + one talent feed with talkback (left).
- » **Computer Player** defines this source as originating from a PC. Associated GPIO logic can be used to send start/stop signals to a playout system.

- **Fader Mode:** Defines fader start actions and states:
 - » **Normal** conforms to the US method of requiring talent to manually turn the channel on and off.
 - » **Fader Start** follows the common European standard of activating the channel and associated machine logic when the fader is raised from ∞ .
 - » **Fader Start with Arm** works just like the **Normal** setting when the fader is not set to minimum position. When the fader is set to the minimum position, it can be in an **Armed** state.

Armed state is entered by pressing the **ON** Button when the fader is down. The armed state means that the channel will go to the **ON** state when the fader is moved up. When in **Arm** state, the channel OFF lamp will be illuminated. The channel ON lamp will flashing in "wink" mode - a long on-time and short off-time.

For all fader modes, pressing the **OFF** button at any time will place the channel in the **OFF** state.

About Telos Phone System Modes: Telos multi-line broadcast phone systems work in two different modes: **US Mode** and **Euro Mode**.

In **US Mode**, one of the phone system's hybrids is assigned to a console faders, and taking a caller to air is accomplished by using a switching control to select a line on that hybrid and turning its fader **ON**.

In **Euro Mode**, the switching control is not used; instead, each line from the phone system is permanently assigned to a separate fader, which

may be turned **ON** or **OFF** at will.

Element supports both US and Euro modes. The next few settings are used for setting up the desired style of phone operation.

| | |
|---|--|
| Phone hybrid ip: | <input type="text" value="192.168.230.7"/> |
| Phone line: | <input type="text" value="7"/> |
| Phone hybrid (for Nx12): | <input type="text" value="1"/> |
| Use 2 nd show (split mode for Nx12): | <input type="checkbox"/> |
| Phone Module ID: | <input type="text" value="No"/> |
| Hybrid Nr.(0 - None): | <input type="text" value="0"/> |
| Conferencing allowed: | <input type="text" value="No"/> |
| Fixed line (1 to 24, 0 - No): | <input type="text" value="0"/> |

Figure 3-3: Settings for configuring Element for operation with Telos phone systems

Note: For complete instructions on how to use these options when setting up a phone system with Element, please refer to **Appendix D: Working With Phone Hybrids**.

| | |
|--|---|
| Preview routing: | <input checked="" type="radio"/> Pre-fader listen <input type="radio"/> After-fader listen (Solo) |
| Preview switching mode: | <input type="checkbox"/> CHANNEL ON turns Preview OFF <input type="checkbox"/> Preview ON turns CHANNEL OFF |
| Hybrid answer mode: | <input checked="" type="radio"/> Normal, auto answer disabled <input type="radio"/> Channel ON answers hybrid <input type="radio"/> Channel ON or Preview ON answer hybrid |
| Knob function: | <input type="radio"/> None <input checked="" type="radio"/> Fader Trim Level <input type="radio"/> PreAmp Gain Adjust |
| Backward feed enabled/disabled: | <input type="radio"/> Disabled <input checked="" type="radio"/> Enabled |
| Backward feed dim gain (-30 ... 0 dB): | <input checked="" type="radio"/> Off <input type="radio"/> Use: <input type="text" value="0.0"/> |
| Logic port: | <input type="radio"/> Disabled <input checked="" type="radio"/> Exclusive mode <input type="radio"/> Shared mode |
| GPIO Ready enabled/disabled: | <input checked="" type="radio"/> Disabled <input type="radio"/> Enabled |
| Feed to source mode: | <input checked="" type="radio"/> Auto (PGM1/PHONE) <input type="radio"/> PHONE <input type="radio"/> PROGRAM 1 <input type="radio"/> PROGRAM 2 <input type="radio"/> PROGRAM 3 <input type="radio"/> PROGRAM 4 <input type="radio"/> AUX SEND A <input type="radio"/> AUX SEND B <input type="radio"/> AUX SEND C <input type="radio"/> AUX SEND D |

Figure 3-4: More Source Profile Settings

- **PREVIEW ROUTING:** Determines where the **Preview** signal originates.
 - » **Pre-fader listen** is the legacy CUE function that most broadcasters use.

- » **After-fader listen (SOLO)** is preferred by some users and is selected here.

- **PREVIEW SWITCHING MODE:** Determines what will happen to a source's off-air **Preview** assignment when that source is taken to air.
 - » **Normal, Auto-Switching Disabled:** The **Preview** bus assignment will be retained even after the fader is turned **ON**.
 - » **CHANNEL ON turns Preview OFF:** If this source is assigned to **Preview** for off-air auditioning, turning its channel **ON** will cancel its **Preview** assignment.
 - » **Preview ON turns Channel OFF:** Does just what it says - sometimes used for Phone channels.

- **HYBRID ANSWER MODE:** This setting allows you to tailor Element's Hybrid Answer mode to suit your facility's operating style. It is intended for hybrids that use external GPIO for device control.
 - » **Normal, Auto Answer Disabled:** Element provides no auto-answer logic when a fader with a hybrid assigned is turned **On**.
 - » **Channel ON Answers Hybrid:** When a hybrid has an incoming call, turning its assigned fader **ON** will answer the call.
 - » **Channel ON or Preview ON Answers Hybrid:** When a hybrid has an incoming call, turning its assigned fader **ON** or pressing that channel's **Preview** key will answer the call.

- **Knob Function:** Allows you to specify the function of a SoftKnob that can be used for tweaking the channel gain structure. The SoftKnob is accessed by pressing the **Options** button on the fader channel.
 - » **None** - disables this function
 - » **Fader Trim Level** - adjusts trim gain in the channel's signal path just before the channel fader.
 - » **Pre-Amp Gain** - adjusts the source gain of the Axia node or PowerStation I/O source associated with this source.
- **BACKWARD FEED ENABLED/DISABLED:** Allows you to enable or disable backfeeds to this audio

source.

- **BACKWARD FEED DIM GAIN:** This is a feature unique to Element: Talkback is sent over dimmed backfeed audio. If you want a hard interruption (Talkback interrupts Program audio), set it to **OFF**, which mutes the audio. But maybe your jocks would like to just have their program audio dimmed, and the Talkback come over it so they can still monitor air while they're being talked to. In this case, input a value by which the program audio will be dimmed. Adjustment range is 0dB to -30dB.
- **LOGIC PORT DISABLED/EXCLUSIVE MODE/SHARED MODE:** Allows you disable GPIO machine logic to this audio source device or enable it in two modes. **Exclusive** mode permits GPIO control associated with only a single fader. **Shared** mode allows more than one user to send on/off/start signals to a source via GPIO.
- **GPIO READY ENABLED/DISABLED:** Allows devices such as CD players or tape machines to signal their **READY** state to the operator through the OFF button LED. If a device is cueing, its OFF lamp will not be lit. Tying the device's OFF lamp to the Ready command means that a machine must be cued and ready before the OFF lamp illuminates. If **Enabled**, the OFF lamp illuminates only when the fader is OFF *and* the Ready command is active on the GPIO. If **Disabled**, the OFF lamp illuminates normally whenever the fader is turned OFF.
- **FEED-TO-SOURCE MODE:** If there is a backfeed associated with this source, this option determines what content is fed back from the board.
 - » **Auto (Pgm-1/Phone)** feeds the Program 1 bus (minus the source) when this source's fader is ON, and feeds the Phone bus (minus the source) when the fader is OFF. The **Phone** bus is actually a special variant of PGM4. The Phone bus is pre-fader and pre-on/off to allow speaker-phone style operation thru the Operator's mic.
 - » **Phone** feeds the Phone bus, minus the source. Phone is a mono-sum, pre-fade and pre-on/off variation of PGM4

- » **PGM1** feeds the Program 1 bus, minus the source.
- » **PGM2** feeds the Program 2 bus, minus the source.
- » **PGM3** feeds the Program 3 bus, minus the source.
- » **PGM4** feeds the Program 4 bus, minus the source.
- » **AUX SEND A** feeds the Aux Send A bus, minus the source.
- » **AUX SEND B** feeds the Aux Send B bus, minus the source.
- » **AUX SEND C** feeds the Aux Send C bus, minus the source.
- » **AUX SEND D** feeds the Aux Send D bus, minus the source.

About the PHONE, RECORD and PROGRAM 4 buses: Element's PGM-4 mix bus is a special multi-purpose bus that does several things at once to make life easier for the operator.

Sources assigned to PGM-4 are also sent to the RECORD bus, a special post-fader, pre-on/off output that can be used to feed recording devices.

At the same time, sources assigned to PGM-4 are mixed and sent to the PHONE bus. PHONE is an internal bus which does not feed a separate output; instead, it picks up PGM-4 audio pre-fader and pre-On/Off and backfeeds it callers (minus themselves, of course) when the channel is **OFF** and **AUTO** is selected as the **Feed To Source Mode**.

| | |
|--------------------------------|---|
| Signal mode: | <input checked="" type="radio"/> Stereo <input type="radio"/> Left <input type="radio"/> Right <input type="radio"/> Sum |
| Signal mode lock: | <input checked="" type="radio"/> Unlocked <input type="radio"/> Locked |
| Signal phase: | <input checked="" type="radio"/> Normal <input type="radio"/> Invert left <input type="radio"/> Invert right <input type="radio"/> Invert left and right |
| Fader trim gain (-25 .. 25dB): | <input type="text" value="0.0"/> |
| Fader trim lock: | <input checked="" type="radio"/> Unlocked <input type="radio"/> Locked |
| Panorama position (-24 .. 24): | <input type="text" value="0"/> |
| Auto-start timer: | <input checked="" type="radio"/> Disabled <input type="radio"/> Enabled |

Figure 3-5: Mode and Trim Source Profile Settings

- **SIGNAL MODE:** Determines whether source will be treated as mono or stereo, and how.
 - » **Stereo** feeds incoming L/R signal to left and right channels of assigned bus(es).
 - » **Left** feeds incoming left channel to both channels of assigned bus(es).

- » **Right** feeds incoming right channel to both channels of assigned bus(es).
- » **Sum** creates L+R mono mix of incoming stereo source and feeds it to both channels of assigned bus(es).
- **SIGNAL MODE LOCK:** Allows or disallows user's ability to change the source's signal mode (as set above) using controls on Element's surface.
 - » **Unlocked** allows the user to change modes if needed.
 - » **Locked** prevents changes to the signal mode.
- **SIGNAL PHASE:** Allows for correction of out-of-phase program material.
 - » **Normal** assumes correct phase polarity of source input material.
 - » **Invert left** reverses phase on the left channel input.
 - » **Invert right** reverses phase on the right channel input.
 - » **Invert left and right** reverses phase on both channel inputs.
- **FADER TRIM GAIN:** Lets you specify an amount of from -25 to +25 dB that is applied to the signal just before the fader. Note that this parameter may be controlled by a SoftKnob as described earlier.
- **FADER TRIM LOCK:** Prevents operators from making changes to the above trim gain setting.
- **PANORAMA POSITION:** Lets you preset pan settings for this input. Pan is variable in 49 steps, center being **0**, far left **-24** and far right **+24**. This setting can be adjusted on the fly by the operator if permitted by show profile settings.
- **AUTO-START TIMER:** Determines whether the event timer found in Element's right-hand meter display will reset to zero when this source's fader is turned on.
 - » **Disabled:** timer will not reset when this source is activated.
 - » **Enabled** timer resets when the source is activated.

About Element EQ: Equalization is available for all audio sources, and can be pre-defined or adjusted on-the-fly. Our EQ model is three-band quasi-parametric. Controls are provided for center frequency and boost/cut, with a unique SmartQ™ automatic bandwidth system.

SmartQ works by varying the Q of the selected parametric band proportional to the amount of boost or cut you specify. A small amount of boost or cut will affect a broader range of frequencies for a warm, musically-pleasing effect. As gain is increased the Q sharpens, affecting a narrower range of frequencies for tighter control of target bands. At aggressive cut levels, the EQ becomes a tunable notch filter. SmartQ keeps the EQ sounding natural at virtually all settings.

Pre-defined EQ can be entered during Source Profile construction, and will be automatically applied whenever that source is assigned to a Element fader; i.e., a -2 dB 12 kHz high shelf filter pre-set in a microphone's Source Profile will be applied when any surface, in any studio, loads that mic for use.

At-will EQ is set by talent using Element's **Channel Options** controls, and can be employed to trim EQ on-the-fly .

EQ status: Bypass Active

EQ high mode: Shelf Peak

EQ high frequency (1250 .. 20000Hz):

EQ mid frequency (125 .. 2000Hz):

EQ low frequency (20 .. 320Hz):

EQ high gain (-25 .. 15dB):

EQ mid gain (-25 .. 15dB):

EQ low gain (-25 .. 15dB):

Noise gate status: Bypass Active

Compressor status: Bypass Active

De-esser status: Bypass Active

Noise gate threshold (-50 .. 0dB):

Noise gate depth (-30 .. 0dB):

Compressor threshold (-30 .. 0dB):

Compressor ratio (1:1 .. 16:1), use values 1.0 to 16.0:

De-esser threshold (-20 .. 0dB):

De-esser ratio (1:1 .. 8:1), use values 1.0 to 8.0:

Compressor mode: No Freeze Freeze

Post-processing trim gain (-20 .. 20dB):

Record mode: Stereo If Phone or Codec Left, otherwise Right Summed-Mono to Left Summed-Mono to Right

Figure 3-6: Processing- Source Profile Settings

- **EQ STATUS:** **Bypass** or make **Active** EQ for this source.
- **EQ HIGH MODE:** Choose between **shelf** or **band pass** filter for high-frequency EQ.
- **EQ HIGH FREQUENCY:** Sets the active frequency for high-band EQ. Variable from 1.25 kHz to 20 kHz. If **EQ HIGH MODE** is set to **Shelf**, this setting determines the top of the shelf. If **EQ HIGH MODE** is set to **Band pass**, this sets the center frequency of the BP filter (SmartQ determines the width of the BP filter, as described above).
- **EQ MID FREQUENCY:** Sets the center frequency of the midrange parametric band. Variable from 125 Hz to 2.0 kHz.
- **EQ LOW FREQUENCY:** Sets the center frequency of the low parametric band. Variable from 20 Hz to 320 Hz.
- **EQ HIGH, MID & LOW GAIN:** Provides 40 dB of adjustment range for boost or cut of the three parametric bands, from -25 dB to +15 dB.

The following options dealing with dynamics processor settings apply to Mic, Codec and Phone sources only. If applied to other source types, these settings will be ignored.

- **NOISE GATE STATUS:** Turns the voice processor's noise gate on and off. Choose **Bypass** or **Active**.
- **COMPRESSOR STATUS:** Turns the voice processor's compressor functions on and off. Choose **Bypass** or **Active**.
- **DE-ESSER STATUS:** Turns the voice processor's de-esser module on and off. Choose **Bypass** or **Active**.
- **NOISE GATE THRESHOLD:** Determines the point at which the Noise Gate will operate (if set to **Active**). Adjustment range is between 0dB and -50dB.
- **NOISE GATE DEPTH:** Sets the amount of noise reduction that will be applied to the mic audio if the noise gate is set to **Active** and the Noise Gate

Threshold is reached. Adjustment range is between 0dB and -30 dB.**COMPRESSOR THRESHOLD:** Determines the point at which the Compressor will operate (if set to **Active**). Adjustment range is between 0dB and -30dB.

- **COMPRESSOR THRESHOLD:** Sets the threshold at which compression will be applied to the mic audio. Adjustment range is between -30 and 0 dB.
- **COMPRESSOR RATIO:** Sets the amount of compression that will be applied to the mic audio. Adjustment range is between 1:1 and 16:1.
- **DE-ESSER THRESHOLD:** Determines the point at which the De-Esser will operate (if set to **Active**). Adjustment range is between 0dB and -20dB.
- **DE-ESSER RATIO:** Sets how aggressively the de-esser will remove sibilance from the mic audio. Adjustment range is between 1:1 and 8:1.
- **COMPRESSOR MODE:** Toggles the voice compressor between **Freeze** and **No Freeze** modes.
- **POST PROCESSING TRIM GAIN:** Some processing settings will result in a reduction of overall signal level. This setting allows you to adjust the amount gain to compensate for any gain lost by compressor processing.

What is this stuff? Radio engineers don't need a lesson in dynamics processing, but for the benefit of any jocks reading this, here's a quick explanation of what these controls can do.

A **Gate** is a dynamics device whose function is to remove unwanted audio material below a certain threshold. A gain circuit is employed to raise or lower the volume of the audio signal; when the signal falls below a certain set threshold, the audio level drops down to a predetermined level. The reason they are called gates is because when they "close" it sounds as if the audio has suddenly stopped, or has been "gated." You might use this on a mic channel to eliminate background noise during times when you're not speaking.

Threshold settings determine at what level the processor will begin working. For example, on

a compressor, when signal level exceeds the threshold setting, it will be compressed; below the threshold the signal will remain uncompressed. On a gate, threshold determines the minimum input level required to cause the gate to open up and pass signal; when input level drops below the threshold, the gate will be closed preventing signal from passing. Carefully setting the threshold allows you to very specifically control when processing is being applied to a signal.

Compression controls the dynamic range of an audio signal. It generally reduces the volume of very loud audio, helping to keep from “blowing out” the mic channel with too much volume. It can be used to make your mic channel sound “fatter,” evening out the highs and lows of your vocal pattern. It can also increase the overall perceived fullness of your voice. Too much compression, however, can make your voice sound hard and “squashed.” Use it sparingly!

To use compression, you must first set your threshold value (usually expressed in dB). When the audio signal is louder than this threshold, its gain is reduced. The amount of gain reduction applied depends on the **Compression Ratio** setting. For example, with a 2:1 ratio, for every 2 decibels the input signal increases, the output is allowed to increase only 1 decibel.

The **Freeze Gate** is used to prevent “suck-up” of room noise during speech pauses. When active, gain is not increased by the compressor when audio is absent. “Freeze” would be the default, since it almost always improves results.

De-Essing is just what you think it is - a way to electronically remove extra sibilance from your mic channel. If your mic is particularly sensitive to “s” and “th” sounds and accentuates them on-air, De-Essing helps reduce these sounds to more manageable levels. As with compression, too much de-essing will produce annoying and unnatural results - you’ll wind up sounding like you’re talking through a cotton sock! Stick to small amounts to get the effect you want.

- **RECORD MODE:** This option allows you to define how this source is sent to the **PGM-4/Record** bus. (**Record** is a special pre-on/off, post-fader bus with a special output for a dedicated recording device.)
 - » **Stereo** sends both sides of the source to both sides of the recording device, as normal.
 - » **If Phone or Codec Left, otherwise Right** sends the source to the recorder’s left channel ONLY if the Source Type

is defined as **Phone** or **Codec**. Any other Source Type will be fed to the recorder’s right channel.

- » **Summed-Mono to Left** sums the left and right sides of the audio source and sends the summed signal to the recorder’s left channel.
- » **Summed-Mono to Right:** Same as above, but sends summed audio to the recorder’s right channel.

That’s the last option. Click on the **Save Changes** button at the bottom of the page.

Congratulations — now you know how to create Source Profiles! You can now bring up your new sources on the Element faders.

Adding Backfeeds and GPIO to a Source

Since making a mix-minus and mapping contact closures is often done at the same time a new Source Profile is constructed, let’s briefly recap those procedures. (Detailed setup and operation instructions for your GPIO Nodes and Audio Nodes are found in their respective User Manuals.)



Figure 3-7: PowerStation I/O Destinations screen

Let's say you've connected a hybrid to your Analog Node, named it "Studio 1 Phone", and assigned it a channel number of 12205. You've constructed a Source Profile for it, and you now want to give it a mix-minus backfeed and set up a GPIO contact closure for the "take" and "drop" functions. Here's how:

1. Make sure that, in your hybrid's Source Profile, the **Source Type** option is set to "Phone" and the **Feed to Source Mode** is set to "Auto". Also set the **Backfeed Enabled/Disabled** option to "Enabled".
2. Use your Web browser to connect with the Audio Node or PowerStation I/O you'll be sending your backfeed to. Choose **Destinations** from the main menu to enter the Destinations screen (Figure 3-7); we'll set up our mix-minus for output #5.
3. Just to the right of each **Channel** name box, you'll see a "list" icon. Click on the list icon for output #5. A list of available sources will pop up (Figure 3-8). Notice that the names and channel numbers of the sources are both displayed for easy identification. We'll choose **Studio 1 Phone** from the list; the list window closes and you're returned to the **Destinations** screen. The line for output #5 now displays the channel number and name of the source.
4. Now comes the step that makes this output a mix-minus. Each **Destination** entry line has a drop box at the end; click on the drop-down and choose **To source**.

Automagic: If the hybrid source is loaded to an Engine and the engine is generating a mix minus source already, the list box will show TWO identical channels for the source — but one will have a description of "TO:" in front of it. Selecting this source automatically selects TO SOURCE in the TYPE box.



Figure 3-8: Picking a source from the list box

5. Click **Apply**.

6. Now point your browser back to your Element Control Center page (or IO Subsection if you are using a PowerStation) and choose **GPIO Configuration** from the menu sidebar. (You may also use a GPIO Node other than the Power Supply/GPIO or PowerStation that shipped with your Element, just point your browser to that node's IP address instead.)

7. The GPIO setup screen uses the same method of assigning devices to ports as the Analog Node. Pick a port to map your hybrid's contact closures to, using the list tool, and click **Apply**. Figure 3-9 shows the four port GPIO section of a PowerStation MAIN. The Element and GPIO node are similar but have eight ports.

IO Subsystem Main

Home | Sources | Destinations | **GPIO** | Meters | System | QoS |

GPIO Configuration

| | Port 1 | Port 2 | Port 3 | Port 4 |
|---------|--------|--------|--------|--------|
| Inputs | ■ | ■ | ■ | ■ |
| Outputs | ■ | ■ | ■ | ■ |

| # | Name: | Channel: |
|---|------------|-------------------------------------|
| 1 | CR Monitor | 12011 <CR Monitor@Pwr_Stn_Studio_1> |
| 2 | Hybrid | 12205 <Studio 1 Phone@PS-MAIN-IO> |
| 3 | CD 1 | 12207 <Studio 1 CD 1@PS-MAIN-IO> |
| 4 | CD 2 | 12208 <Studio 1 CD 2@PS-MAIN-IO> |

Figure 3-9: GPIO Port Assignment

The process is complete: you've made a Source Profile for your phone hybrid, created a mix-minus, mapped it to an audio output (destination), and associated a GPIO port for contact closures associated with the source.

To confirm, choose **Options** at the top of any Element fader channel and load your new Phone source. Press the **Talk** key just below the fader; you'll see the Status Symbol shown in Figure 3-10 appear in the window above the channel to indicate that the operator's mic is talking to this telephone hybrid through its backfeed

channel. (Status Symbols are described in detail at the end of **Chapter 5: Element Operations**.)



Figure 3-10: Status Symbol indicates mix-minus/
talkback feed to phone source.

Also, take another look at the GPIO screen on your browser. Note the green indicators that have appeared on the port representing your hybrid; switch the Element channel on and off and you'll observe the active tally change pins (as shown in Figure 3-9).

What's Next

When you're ready, join us in **Chapter Four: Configuring GPIO** for more detail about setting up logic commands and GPIO ports for your audio sources. 🎧

*CAT.6, small and light
yet sound and data pour forth.
What magic is this?.*

Chapter Four:

Configuring GPIO

Since the days of rotary-switch source selectors, it's been a challenge to properly route machine logic along with audio. Some complicated schemes have been devised over the years, but broadcasters wanted a simple, fast way to associate logic with audio in a routable environment.

Since the Axia IP-Audio system was designed as a true computer network, we were able to start with a clean sheet of paper to design the first truly routable machine logic/audio interface. Unlike conventional logic connections which require each command circuit to be wired individually, Axia sends machine controls over the same Ethernet your audio travels on, further reducing infrastructure, cost and tedium.

Along with controlling external audio devices, Element's GPIO (General Purpose Input/Output) interface also includes logic commands for routine studio/control room operations such as tally lights, monitor muting, On-Air lights and more.

The last chapter explained source profiles and showed you how you can associate GPIO with a source. This chapter explains how to set up Element or PowerStation GPIO to handle these functions. We also invite you to read the [GPIO Node User's Manual](#), for more in-depth information on the topic of GPIO.

Note: The Element console can be used with:

- a combination 8-port GPIO Node/PSU that also contains the Element CPU
- a PowerStation that includes four GPIO ports
- one or more standalone 8-port GPIO node.

These units are all convection cooled, and we strongly recommend that when rack-mounting these units, you leave at least 1RU of space **above and below** to ensure adequate ventilation.

GPIO Port Definitions

Each Axia GPIO device has either four or eight DB-15 connectors on its back panel. Each connector (also known as a GPIO port) can be associated with a device in your studio, and provides five opto-isolated inputs and five opto-isolated outputs per device for machine control, lamp drives and remote channel controls. GPIO ports can also be monitored and controlled by our PathfinderPC software.

GPIO ports are programmed to support several different types of devices. How does a GPIO port “know” which type of device is assigned to it?

Back in Chapter 3, when you constructed a Source Profile for a telephone hybrid, you defined the source type (see “Adding Backfeeds and GPIO to a Source Profile” in Chapter 3). This is important, because when that source is assigned to a console fader, Element uses this Source Profile selection to tell the GPIO Node what sort of command to send to the attached device.

If Element “sees” in the Source Profile that the assigned device is a microphone, it tells the GPIO Node to send logic for **On, Off, Remote Mute** and Remote **Talk** commands on the appropriate pins. If it “sees” a line input, it tells the GPIO Node to send **Start, Stop** and **Reset** commands, plus closures for **Ready** lights, etc.


Axia GPIO ports can deliver unique command sets for the following types of devices:

1. Microphone (Operator, Guest or Producer)
2. Line Input
3. Codec
4. Telephone Hybrid
5. Computer Playback Device
6. Control Room Monitor
7. Studio Monitor
8. Profanity Delay Device
9. Recording Device
10. Accessory Button Panel Device

The next few pages contain tables that explain what function the pins provide in each different device mode.

GPIO Operator's Microphone Logic


| Name | Pin | Type | Notes |
|------------------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turn channel OFF |
| TALK (to Monitor 2) Command | 13 | Active Low Input | Activates the Element TALK TO MON2 function and routes mic audio to the Talkback bus. |
| MUTE Command | 14 | Active Low Input | Mutes channel outputs |
| TALK (to PREVIEWED SOURCE) Command | 15 | Active Low Input | Activates the TALK button on every source currently in preview and routes mic audio to the Talkback bus. |
| OUTPUTS | | | |
| ON Lamp | 1 | Open Collector to Logic Common Return | Illuminates when channel is ON unless TALK or MUTE is active |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF |
| TALK (to Monitor 2) Lamp | 3 | Open Collector to Logic Common Return | Illuminates when TALK TO MON2 is active |
| MUTE Lamp | 4 | Open Collector to Logic Common Return | Illuminates when MUTE is active |
| TALK (to PREVIEWED SOURCE) Lamp | 5 | Open Collector to Logic Common Return | Illuminates when TALK to PREVIEWED SOURCE is active. |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic +5 Volt Supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Input Common | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

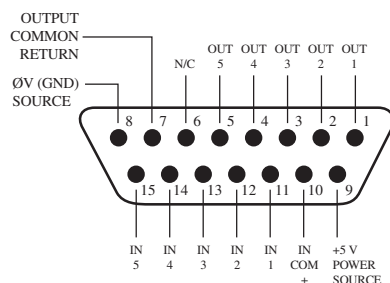

GPIO v."ZA" 4/2009

GPIO Control Room Guest Microphone Logic


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turn channel OFF |
| TALK (to CR) Command | 13 | Active Low Input | Mutes channel outputs and routes source audio to PVW speakers |
| MUTE Command | 14 | Active Low Input | Mutes channel outputs |
| TALK (to SOURCE) Command | 15 | Active Low Input | Allows an external button to activate channel TALK TO SOURCE function. (Element only; SmartSurface not used) |
| OUTPUTS | | | |
| ON Lamp | 1 | Open Collector to Logic Common Return | Illuminates when channel is ON unless TALK or MUTE is active |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF |
| TALK (to CR) Lamp | 3 | Open Collector to Logic Common Return | Illuminates when TALK is active |
| MUTE Lamp | 4 | Open Collector to Logic Common Return | Illuminates when MUTE is active |
| TALK (to SOURCE) Lamp | 5 | Open Collector to Logic Common Return | Illuminates when the channel TALK TO SOURCE function is active. (Element only; SmartSurface not used) |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

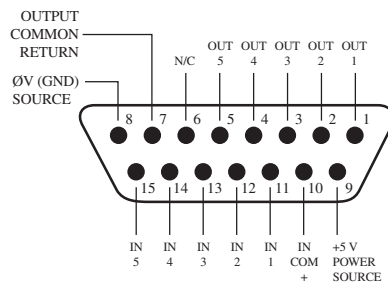

GPIO v."ZA" 4/2009

GPIO Studio (Monitor 2) Guest Microphone Logic


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turn channel OFF |
| TALK (to CR) Command | 13 | Active Low Input | Mutes channel outputs and routes source audio to PVW speakers |
| MUTE Command | 14 | Active Low Input | Mutes channel outputs |
| TALK (to SOURCE) Command | 15 | Active Low Input | Allows an external button to activate channel TALK TO SOURCE function. (Element only; SmartSurface not used) |
| OUTPUTS | | | |
| ON Lamp | 1 | Open Collector to Logic Common Return | Illuminates when channel is ON unless TALK or MUTE is active |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF |
| TALK (to CR) Lamp | 3 | Open Collector to Logic Common Return | Illuminates when TALK is active |
| MUTE Lamp | 4 | Open Collector to Logic Common Return | Illuminates when MUTE is active |
| TALK (to SOURCE) Lamp | 5 | Open Collector to Logic Common Return | Illuminates when the channel TALK TO SOURCE function is active. (Element only; SmartSurface not used) |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

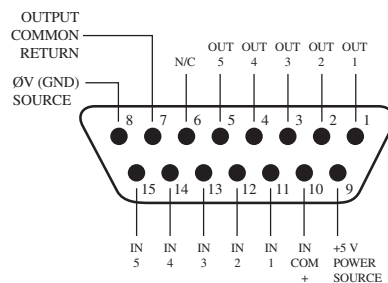

GPIO v."ZA" 4/2009

GPIO Producer's Microphone Logic


| Name | Pin | Type | Notes |
|------------------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turn channel OFF |
| TALK (to MONITOR 2) Command | 13 | Active Low Input | Activates the Element TALK to MON2 function and routes mic audio to the Talkback bus. |
| MUTE Command | 14 | Active Low Input | Mutes channel outputs |
| TALK (to PREVIEWED SOURCE) Command | 15 | Active Low Input | Activates the TALK button on every source currently in Preview and routes mic audio to the Talkback bus. |
| OUTPUTS | | | |
| ON Lamp | 1 | Open Collector to Logic Common Return | Illuminates when channel is ON unless TALK or MUTE is active |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF |
| TALK (to MONITOR 2) Lamp | 3 | Open Collector to Logic Common Return | Illuminates when TALK to MON2 is active. |
| MUTE Lamp | 4 | Open Collector to Logic Common Return | Illuminates when MUTE is active |
| TALK (to PREVIEWED SOURCE) Lamp | 5 | Open Collector to Logic Common Return | Illuminates when TALK to PREVIEWED SOURCE is active. |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

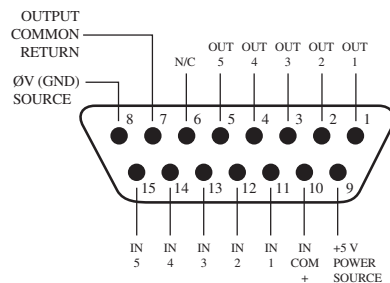

GPIO v."ZA" 4/2009

GPIO Line Input Logic


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turns channel OFF & sends 100 msec STOP pulse |
| PREVIEW Command | 13 | Active Low Input | Turns preview ON |
| RESET Command | 14 | Active Low Input | Turns channel OFF, while not sending a STOP pulse |
| READY Command | 15 | Active Low Input | Illuminates OFF lamp to indicate source's readiness |
| OUTPUTS | | | |
| ON Lamp | 1 | Open Collector to Logic Common Return | Illuminates when channel is ON |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF and READY is active |
| PREVIEW Lamp | 3 | Open Collector to Logic Common Return | Illuminates when PREVIEW is ON |
| START Pulse | 4 | Open Collector to Logic Common Return | A 100 msec pulse when the channel status changes from OFF to ON |
| STOP Pulse | 5 | Open Collector to Logic Common Return | A 100 msec pulse when the channel status changes from ON to OFF |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

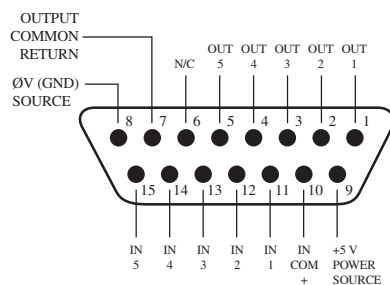

GPIO v."ZA" 4/2009

GPIO Codec Logic


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turns channel OFF |
| TALK (to CR) Command | 13 | Active Low Input | Mutes channel outputs and routes source audio to PVW speakers |
| MUTE Command | 14 | Active Low Input | Mutes channel outputs |
| TALK (to SOURCE) Command | 15 | Active Low Input | Allows an external button to activate channel TALK TO SOURCE function. |
| OUTPUTS | | | |
| ON Lamp | 1 | Open Collector to Logic Common Return | Illuminates when channel is ON unless TALK or MUTE are active |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF. |
| TALK (to CR) Lamp | 3 | Open Collector to Logic Common Return | Illuminates when TALK is active |
| MUTE Lamp | 4 | Open Collector to Logic Common Return | Illuminates when MUTE is active |
| TALK (to SOURCE) Lamp | 5 | Open Collector to Logic Common Return | Illuminates when the channel TALK TO SOURCE function is active. |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

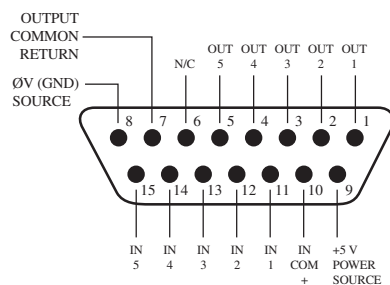

GPIO v."ZA" 4/2009

GPIO Telephone Hybrid Logic


| Name | Pin | Type | Notes |
|----------------------------|-----|---------------------------------------|---|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turns channel OFF |
| PREVIEW Command | 13 | Active Low Input | Turns preview ON |
| RESET Command | 14 | Active Low Input | Turns channel off while not sending a STOP pulse |
| READY Command | 15 | Active Low Input | Illuminates OFF lamp to indicate source's readiness |
| OUTPUTS | | | |
| ON Lamp | 1 | Open Collector to Logic Common Return | Illuminates when channel is ON |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF |
| PREVIEW Lamp | 3 | Open Collector to Logic Common Return | Illuminates when PREVIEW is ON |
| START Pulse | 4 | Open Collector to Logic Common Return | A 100 ms PULSE is sent when channel is first turned ON or when PVW is first selected (if "PVW answers" option is selected). |
| STOP Pulse | 5 | Open Collector to Logic Common Return | A 100 ms PULSE sent when channel is turned OFF. |
| POWER & COMMAND | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

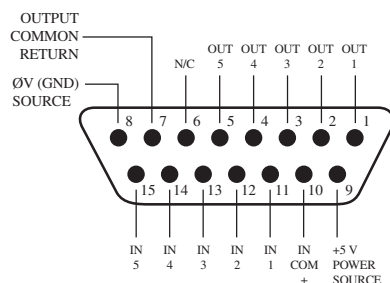

GPIO v."ZA" 4/2009

GPIO Control Room Monitor Logic


| Name | Pin | Type | Notes |
|--------------------------------|-----|--|--|
| INPUTS | | | |
| MUTE CR Command | 11 | Active Low Input | Mutes CR monitors and Pre-view speakers |
| DIM CR Command | 12 | Active Low Input | Allows external dimming of CR monitor speakers. |
| Enable EXT PREVIEW Com-mand | 13 | Active Low Input | Feeds External Audio Input to PREVIEW |
| TALK TO EXT Command (Element). | 14 | Active Low Input | Turns on Talk to External Audio on Element. |
| Not used. | 15 | Active Low Input | |
| OUTPUTS | | | |
| CR ON AIR Lamp | 1 | Open Collector to Logic Com-mon Return | Illuminates whenever CR monitors are muted |
| DIM CR Lamp | 2 | Open Collector to Logic Com-mon Return | Illuminates whenever control room monitors are DIMMED |
| PREVIEW Lamp | 3 | Open Collector to Logic Com-mon Return | Illuminates when PREVIEW is active. |
| TALK TO EXT Lamp (Element). | 4 | Open Collector to Logic Com-mon Return | Illuminates when Talk to External is active. |
| TALK (to CR) Active Lamp | 5 | Open Collector to Logic Com-mon Return | Active whenever a source has activated its TALK (to CR) function |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

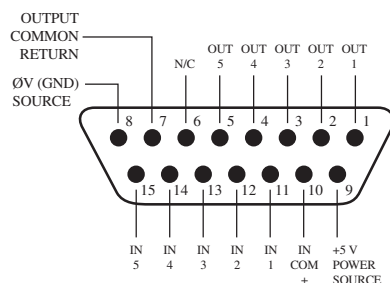

GPIO v."ZA" 4/2009

GPIO Studio Monitor Logic


| Name | Pin | Type | Notes |
|--|-----|---------------------------------------|--|
| INPUTS | | | |
| MUTE Studio Command | 11 | Active Low Input | Allows external muting of Studio monitor speakers. |
| DIM Studio/Monitor 2 Command | 12 | Active Low Input | Allows external dimming of Studio monitor speakers. |
| Remote Event Timer Trigger Command | 13 | Active Low Input | Resets Count-up Event Timer to zero and starts timer. |
| Remote Countdown Timer Trigger Command | 14 | Active Low Input | Resets Countdown timer to preset max time and starts timer (Element only). |
| Not Used | 15 | Active Low Input | |
| OUTPUTS | | | |
| Studio ON AIR Lamp | 1 | Open Collector to Logic Common Return | Illuminates whenever Studio monitors are muted |
| DIM Studio/Monitor 2 Lamp | 2 | Open Collector to Logic Common Return | Illuminates whenever Studio monitors are DIMMED |
| Event Timer Trigger Output | 3 | Open Collector to Logic Common Return | A 100 ms PULSE sent when event timer is started from zero. |
| Countdown Timer Trigger Output | 4 | Open Collector to Logic Common Return | A 100 ms PULSE sent when countdown timer is started from preset max (Element only). |
| TALK TO STUDIO/MONITOR 2 Active Lamp | 5 | Open Collector to Logic Common Return | Illuminates whenever the TALK TO STUDIO/MON2 function is active. |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

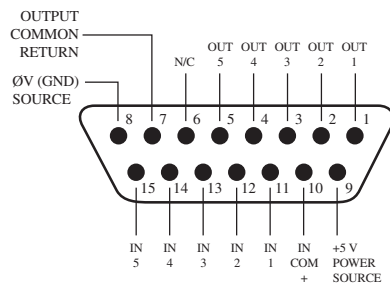

GPIO v."ZA" 4/2009

GPIO Computer Playback Device Logic


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| ON Command | 11 | Active Low Input | Turns channel ON |
| OFF Command | 12 | Active Low Input | Turns channel OFF & sends 100 msec STOP pulse |
| PREVIEW Command | 13 | Active Low Input | Turns preview ON |
| Not Used | 14 | Active Low Input | |
| READY Command | 15 | Active Low Input | Illuminates OFF lamp to indicate source's readiness |
| OUTPUTS | | | |
| NEXT Pulse | 1 | Open Collector to Logic Common Return | A 100 mS PULSE sent when ON button is depressed, except when initially turned ON. |
| OFF Lamp | 2 | Open Collector to Logic Common Return | Illuminates when channel is OFF and READY is active |
| PREVIEW Lamp | 3 | Open Collector to Logic Common Return | Illuminates when PREVIEW is ON |
| START Pulse | 4 | Open Collector to Logic Common Return | A 100 ms PULSE sent when channel is first turned ON. |
| STOP Pulse | 5 | Open Collector to Logic Common Return | A 100 ms PULSE sent when channel is turned OFF. |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

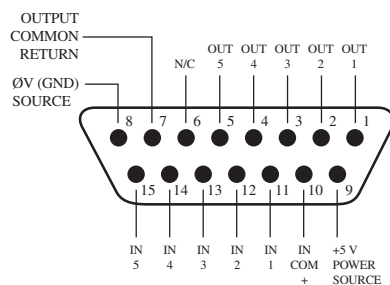

GPIO v."ZA" 4/2009

GPIO External Profanity Delay Logic


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| DUMP Lamp | 11 | Active Low Input | Illuminates DUMP lamp (located on Element Monitor Module). |
| EXIT Lamp | 12 | Active Low Input | Illuminates EXIT lamp. |
| PAUSE Lamp | 13 | Active Low Input | Illuminates PAUSE lamp. |
| ENGAGE Lamp | 14 | Active Low Input | Illuminates ENGAGE lamp. |
| DELAY ANNUNCIATOR Command | 15 | Active Low Input | Illuminates the DELAY annunciator on the Element main screen. |
| OUTPUTS | | | |
| DUMP Switch | 1 | Open Collector to Logic Common Return | Active when DUMP button is depressed. |
| EXIT Switch | 2 | Open Collector to Logic Common Return | Active when EXIT button is depressed. |
| PAUSE Switch | 3 | Open Collector to Logic Common Return | Active when PAUSE button is depressed. |
| ENGAGE Switch | 4 | Open Collector to Logic Common Return | Active when ENGAGE button is depressed. |
| Not Used | 5 | Open Collector to Logic Common Return | |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

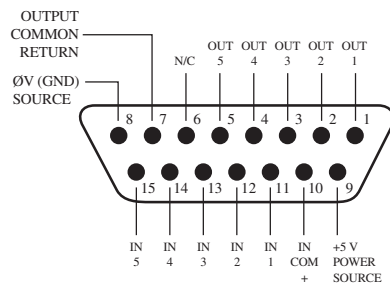

GPIO v."ZA" 4/2009

GPIO Film Legendable User Button Module / Accessory Panel / Rack Panel


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| User Button 1 Lamp | 11 | Active Low Input | Illuminates User Button 1 Lamp |
| User Button 2 Lamp | 12 | Active Low Input | Illuminates User Button 2 Lamp |
| User Button 3 Lamp | 13 | Active Low Input | Illuminates User Button 3 Lamp |
| User Button 4 Lamp | 14 | Active Low Input | Illuminates User Button 4 Lamp |
| User Button 5 Lamp | 15 | Active Low Input | Illuminates User Button 5 Lamp |
| OUTPUTS | | | |
| User Button 1 Switch | 1 | Open Collector to Logic Common Return | Active when User Button 1 is pushed |
| User Button 2 Switch | 2 | Open Collector to Logic Common Return | Active when User Button 2 is pushed |
| User Button 3 Switch | 3 | Open Collector to Logic Common Return | Active when User Button 3 is pushed |
| User Button 4 Switch | 4 | Open Collector to Logic Common Return | Active when User Button 4 is pushed |
| User Button5 Switch | 5 | Open Collector to Logic Common Return | Active when User Button 5 is pushed |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

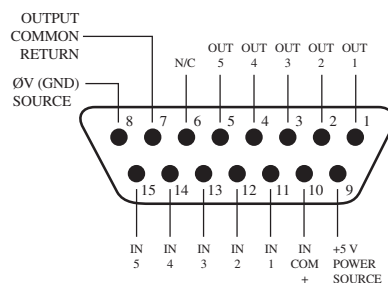

GPIO v."ZA" 4/2009

GPIO Recording Device Logic


| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| OUTPUTS | | | |
| Rec ON Lamp | 1 | Open Collector to Logic Common Return | Active whenever Record Mode is engaged. |
| Rec OFF Lamp | 2 | Open Collector to Logic Common Return | Active whenever Record Mode is NOT engaged. |
| Not used | 3 | Open Collector to Logic Common Return | n/a |
| START Pulse | 4 | Open Collector to Logic Common Return | A 100 mS PULSE sent when Record Mode is engaged. |
| STOP Pulse | 5 | Open Collector to Logic Common Return | A 100 mS PULSE sent when Record Mode is disengaged. |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

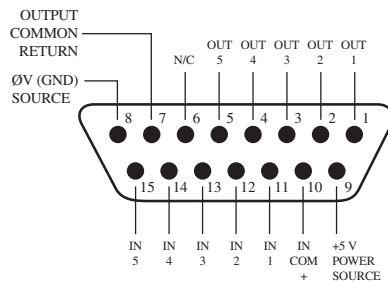

GPIO v. 1/2012

GPIO External Timer Control Logic

| Name | Pin | Type | Notes |
|---------------------------|-----|---------------------------------------|--|
| INPUTS | | | |
| START Command | 11 | Active Low Input | Starts timer. |
| STOP Command | 12 | Active Low Input | Stops timer. |
| RESET Command | 13 | Active Low Input | Resets timer. |
| FREEZE Command | 14 | Active Low Input | Holds timer display while active |
| FREEZE Lamp | 15 | Active Low Input | Illuminates while timer is frozen |
| OUTPUTS | | | |
| START Pulse | 1 | Open Collector to Logic Common Return | A 100 mS PULSE sent when Timer is started. |
| STOP Pulse | 2 | Open Collector to Logic Common Return | A 100 mS PULSE sent when Timer is stopped. |
| RESET Pulse | 3 | Open Collector to Logic Common Return | A 100 mS PULSE sent when Timer is reset. |
| FREEZE Pulse | 4 | Open Collector to Logic Common Return | A 100 mS PULSE sent when Timer is frozen. |
| Not used. | 5 | Open Collector to Logic Common Return | |
| POWER & COMMON | | | |
| Source Common | 7 | Logic Common | Connect to ground of source device or to Pin 8 |
| Logic Common | 8 | Internal 5 Volt return | Can be connected to Pin 7 if source is not providing common |
| Logic + 5 Volt supply | 9 | Logic Supply, Individually Fused | Can be connected to Pin 10 if source is not providing voltage; active only when source has been assigned to channel. |
| Source Supply | 10 | Common for all 5 inputs | Connect to power supply of source device or to Pin 9 |
| NOT CONNECTED | 6 | | |

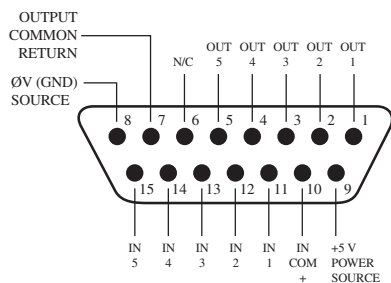

GPIO v."ZA" 4/2009

Assigning GPIO to a Source

As you've seen by studying the previous pages, a lot of the work of assigning logic to a source is done for you; once a GPIO port is linked with a Source Profile, all that remains to do is to solder cables connecting the GPIO's DB-15 connectors to the device's control interface.

So, how *do* you link a GPIO port with a Source Profile? It's very easy; let's do it step-by-step.

Note: This procedure assumes that you have already defined at least one Source Profile using the instructions outlined in Chapter 3.

1. Open your Web browser and enter the IP address of your Element console or, if so equipped, your PowerStation. Choose **GPIO Configuration** from menu. Enter your password if prompted (default log-in is "user", leave the password field blank).

Note: If your system includes a PowerStation, you will have four GPIO ports. If your system uses an Element Power Supply/GPIO unit, you have eight GPIO ports as shown in Figure 4-1.

2. If you haven't previously assigned any GPIO ports, the GPIO definitions screen will be blank. Notice the status indicators at the top of the page, showing the state of the input and output pins of each port. Click on the list icon to the right of an unused line.

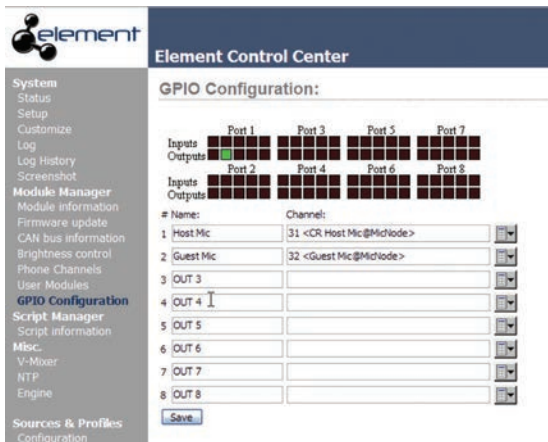


Figure 4-1: GPIO definitions page

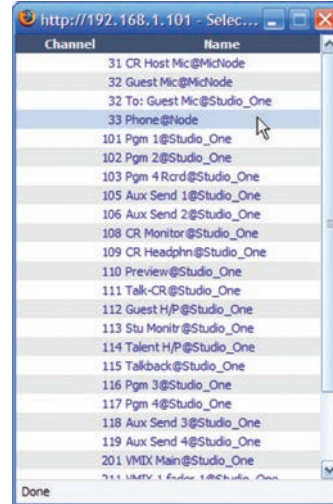


Figure 4-2: GPIO Select Source popup list

3. When you click on any list icon, a small popup window will open, enumerating all of the audio sources available on the Livewire network (Figure 4-2). Choose the source you wish to associate with a GPIO port by clicking on it; the window will close and the source's name and channel number will appear in the **Channel** box.
4. Type a descriptive name in the **Name** field, and click on the **Save** button at the bottom of the page.
5. Look at the page-top status indicator for Port 1. You'll see that one of the pin status indicators is lit in green; this means that the port is now sending a GPIO logic state of "true" through this pin. Assign the source for which you just created a GPIO link to an Element channel; operate the **On** and **Off** keys for the channel and watch the pin status indicators change as you do so.

The source we've been using for this demonstration is a telephone hybrid; we can now observe the pin status indicators change as we turn the channel on and off, as shown in Figure 4-3.

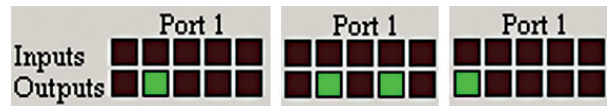


Figure 4-3: Pin status indicators showing GPIO port activity

Referring to the Hybrid Logic Chart on Page 48, we can see that when the Element channel is **Off**, the

indicator representing Output Pin 2 – the **Off Lamp** logic command – is high. Turning the channel **On**, we see Pin 4 pulse briefly before Pin 1 goes high: the GPIO has just sent a **Start** pulse, then lit the **On Lamp**. If you turn the channel **Off** again, you'll observe a **Stop** pulse, and the **Off Lamp** command once again become active.

See how easy that was? Simply assigning an existing audio source to a GPIO port automatically configures the port for the type of device supplying the audio, and send the appropriate logic commands to that port when the source is assigned to a Element channel.

A word about the GPIO Ports

Input Connections

Current on these inputs must be limited to 20 mA or less, through the use of a current-limiting resistor. An external power source (24 volts DC maximum) is recommended for all inputs and outputs, to prevent ground loops between equipment. However, if customer equipment is completely isolated, using power from the GPIO port connectors is acceptable. Figure 4-4 shows details for both types of connections:

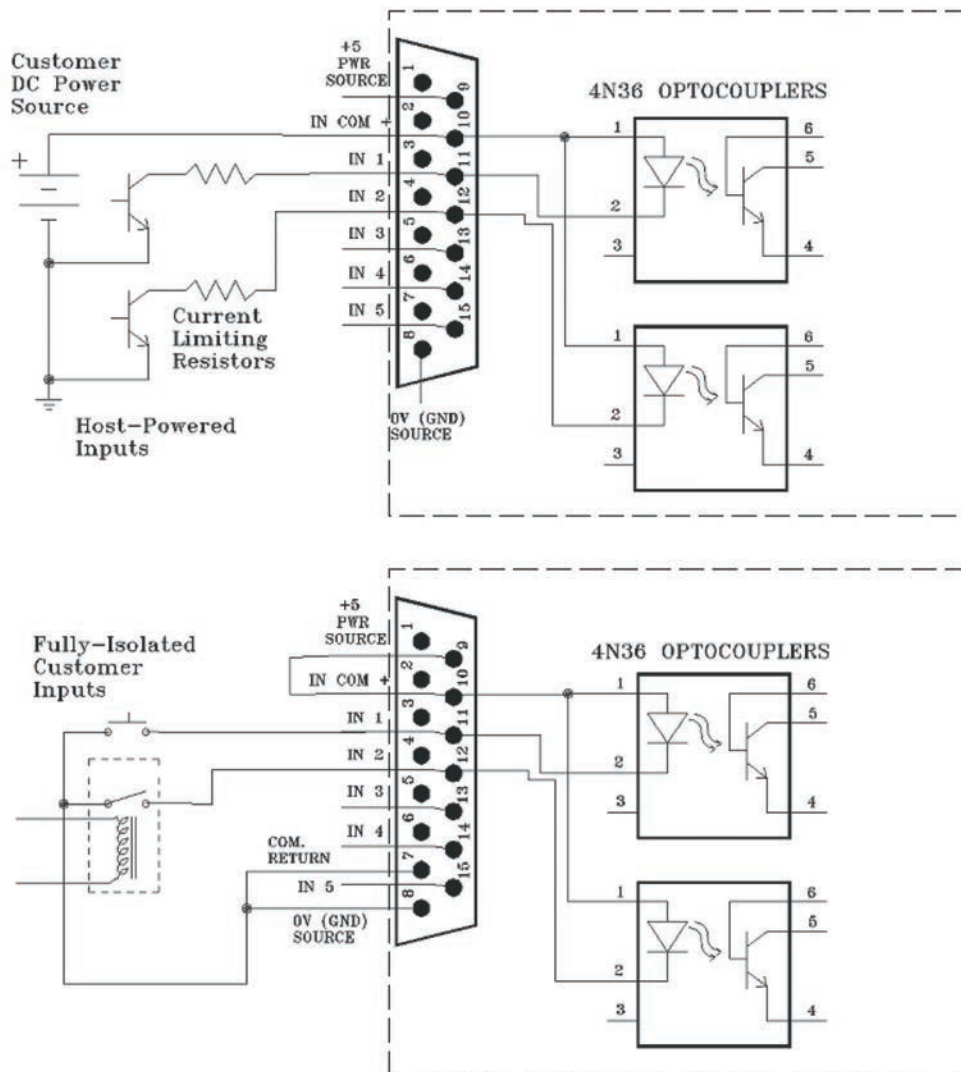


Figure 4-4 GPIO input connections

Output Connections

The GPIO port's outputs are opto-isolated. Current should be limited 100 mA through each output, with the total current draw from the +5 Volt supply not to exceed 3 amps. Figure 4-5 shows the recommended connections for outputs:

Note: Some external devices will allow a logic control input "sink to ground" to activate. Thus, some devices may not work with an Axia GPO control, because they may not fully achieve ground through the output transistor. The voltage drop between the collector and emitter may not be low enough to activate the device, so an external relay controlled by the GPO may need to be used to provide a "dry" contact closure to the external device.

Please note that this section is provided as a "jump-start" introduction to Axia GPIO nodes. For a fuller understanding of the GPIO node's options and requirements, you may wish to read the GPIO Node User's Manual that is available for download at <https://www.telosalliance.com/Axia>.

What's Next

When you're ready, join us in Chapter Five for a comprehensive walk-through of Element operations. 🌀

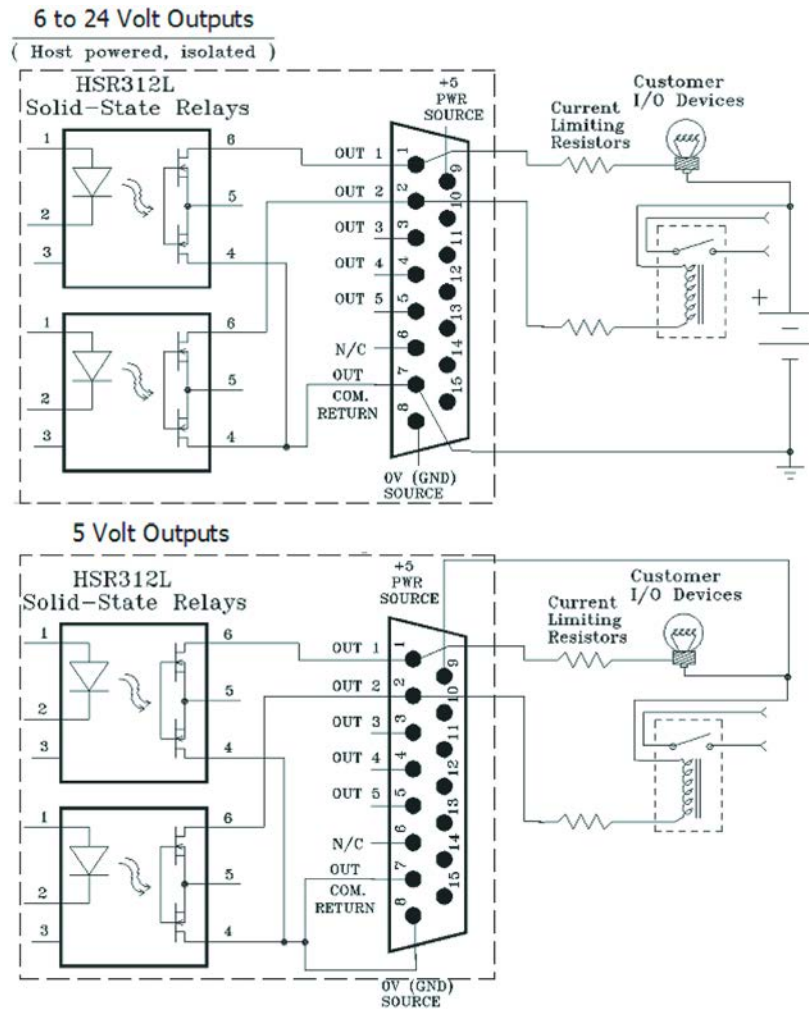


Figure 4-5: GPIO output connections

Chapter Five:

Element Operations

Once it's installed in your studio, Element looks a lot like a traditional radio broadcast console — but that's where the resemblance ends.

Element isn't a console; it doesn't actually mix or process audio. It would be more accurate to say that Element is a control center, a very fancy keyboard if you like, allowing the operator to take charge of the delivery system, the PowerStation or StudioEngine mixing/routing engine, the phone system, the recorder/editor and other sources.

With Element, our goal is to provide you with the most efficient human-machine interface possible for fast-paced, complex programs where board operators must multi-task without error. As such, Element brings a whole new level of control and sophistication to the broadcast studio, while providing very intuitive operation.

Overview

Element was designed to perform equally well in air or production studios. In the air studio, the clean interface enhances speed and accuracy without clutter or confusing controls. In the production room, deeper levels of sophistication are accessible with the touch of a button.

Because different people work differently, we've made it possible to access many functions in multiple ways. By providing several paths to access a function, the board operator has less to remember and is less likely to get trapped. This also serves to bring new operators up to speed easily.

In this chapter we'll first give you a high-level overview of Element capabilities to help convey exactly what Element is capable of. Then, we'll give you detailed explanations of the various controls and functions.

Displays

Unlike other control surfaces, Element does not include built-in meters or other displays. Instead, Element GPIO/Power Supply Node provides a VGA output to feed your choice of display monitors. If you are using the PowerStation, the video is provided for your video monitor on a DVI-D connector. Both deliver the same graphical display at 1024 x 768 resolution.

Element's display normally shows meter levels for all four PGM buses, a time of day clock, countdown and time-remaining timers, and well as important status messages. When the operator adjusts console options using the Direct Access Keys on the Master Module, the screen helps navigate the options and, in the case of audio dynamics and EQ adjustment, shows graphic representations of the effects of changes.

Show Profiles

Element can be completely reconfigured, instantly, to suit different types of shows. By using pre-defined Show Profiles, talent can change board settings from a phone and microphone intensive morning show to a personality-based music show — or any other kind — at the touch of a button. Some users may be familiar with this concept since many digital consoles are capable of storing multiple “scenes” which are very similar in function to Element's Show Profiles.

Show Profiles are easily accessed by pressing the **Profile** key located at the top of the **Global Options** section of the Monitor Module. Element's on-screen display will change to display a list giving instant access to all stored Profiles. Construction and administration of Show Profiles is covered in **Chapter 6: Show Profiles**.

Sources, Channels and Faders

During the course of this manual, we'll refer often to **sources** and **channels**. *These are not the same!* “Sources” are microphones, CD players, outputs from the playout system, telephone hybrids, etc. Your Livewire network may have a very large number of sources, in different locations, used in various studios at various times.

“Channel” would normally be used when referring to

Element’s linear pots and associated on/off controls, alpha displays, bus assignment keys, etc. But “Channel” is also used when discussing numbered Livewire network audio streams. To avoid confusion, we’ll call Element channel strips “Faders”.

Sources are assigned to faders for use on-air or in production. During initial configuration, the Source Profiles are programmed by the engineer for appropriate logic and options (as outlined in previous chapters); afterwards, whenever that source is assigned to a fader, source logic follows.

Fader settings are instantly reconfigured whenever a source is selected, to accommodate the unique requirements of the source. For example, a fader controlling a microphone source also controls appropriate monitor mutes. A fader controlling a line source sends “start” and “stop” commands when the channel is turned on and off.

Sources such as an off-air feed, can also be fed directly to the monitors for auditioning without being assigned to a fader.

Mix-Minus

Mix-minus setup, especially for live broadcasts, has always been one of the most confusing aspects of running a radio console. Element makes mix-minus easy by automating it. The operator never has to worry about sending a source back to itself — it just can’t happen!

Several mix-minus choices – fixed and switching – are possible, and are configured for each source when Source Profiles are defined by the engineer (see Chapter 3 for details). Once this setup is done, no further tweaking is needed; the operator simply uses the source. A Status Symbol display on each fader tells operators when a particular source has a mix minus output, and even tells them which audio mix is being backfed.

Element will support as many outputs as there are installed faders, each with its own automated mix minus feed. Got 24 faders? You can have 24 mix-minuses!

GPIO

Chapter 4 explained how sources can have associated GPIO (General Purpose Input/Output) control associated with them. Element GPIO interfaces are connected to Element via the Livewire network, so you can locate the actual machine connections either physically close to source equipment or in a central equipment room.

During installation, the engineer configures sources to accept and provide logic commands by selecting various options. Example: studio microphones may be set up to automatically mute the studio monitor speakers and illuminate an on-air warning light when turned on. The same sources can be configured to accept GPIO logic inputs from buttons so each studio guest can have their own **On**, **Off**, **Talk**, and **Mute** keys.

Line sources can be configured to receive *start* and *stop* commands from the Element as well. *Start/stop* messages can also be passed, via Ethernet, to a computer-based playout system.

Monitor Module and SoftKnobs

The Monitor Module and SoftKnobs contain Element’s operating controls. This is where you’ll find volume and selection controls for monitors and headphones, as well as keys that provide fast access to show profiles, EQ & dynamics, Aux feeds and more. There are two different type of Monitor Modules: one that contains only monitor and option controls, and one that has fewer monitor controls but adds two channel faders.


Software

The Element operating system uses a high-performance embedded Linux kernel to help ensure bullet-proof, 24/7 operation. Software updates can be obtained from Axia via the Internet and applied by the station engineer. Axia Support recommends performing backups or making printouts of Show Profiles and other configuration data before applying new software updates.

Control Callouts


On the following pages are a “bird’s-eye view” of Element, with major controls and their functions.

Element with Standard Monitor Module

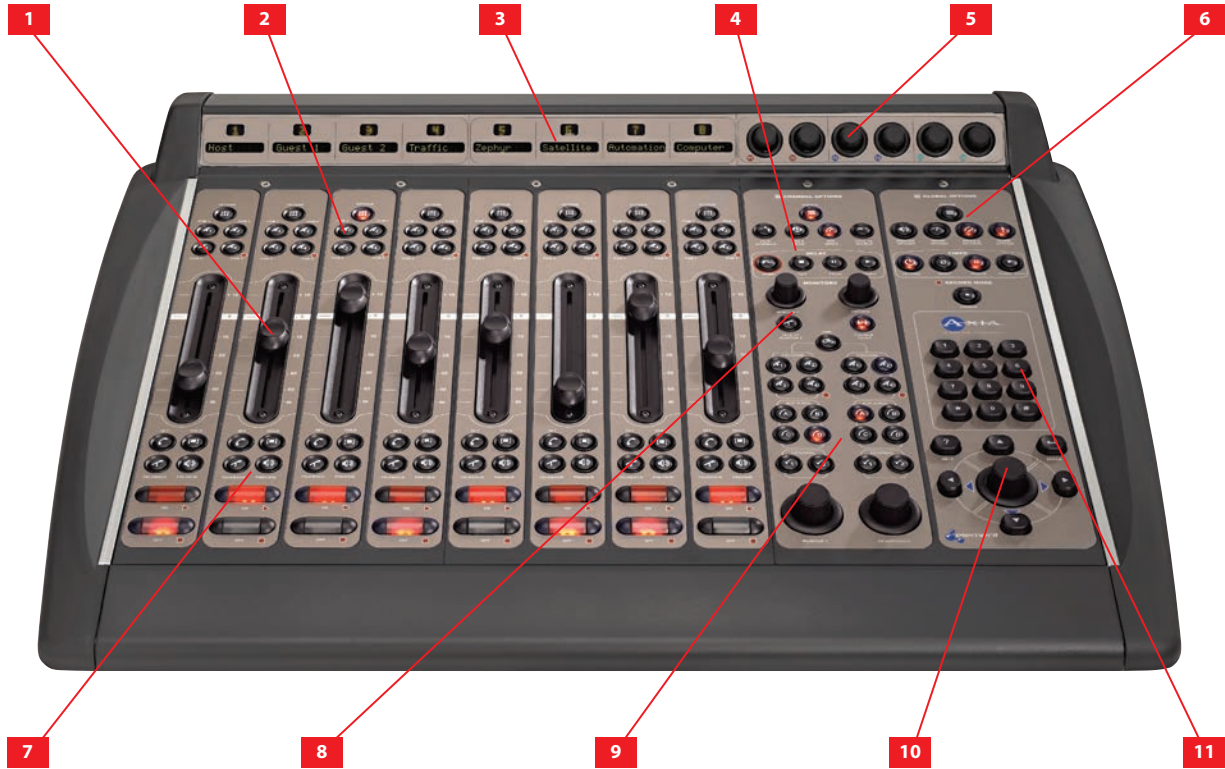


1. **Faders** can accommodate any input source. Each channel's **Options** button (at the top of the fader strip) lets operators change sources and call up expanded channel features.
2. **Assignment Buttons** for the four stereo main output buses – **Program-1**, **Program-2**, **Program-3** and **Program-4/Record** – are located atop each fader strip.
3. **Channel Displays** contain a 10-character text readout and a window for fader position numbers and Status Symbol icons. Text is fixed for static sources like microphones and CD players, but can be set to show song/artist information, etc., when computer-based audio sources are connected.
4. **Monitor Module Options & Profanity Delay Controls.** Channel Options section contains Direct Access Keys for quick access to a channel's Source assignment, EQ, Dynamics, Pan, Mix-Minus and Aux Sends settings. These keys become active whenever a channels Options key is pressed. Below the Channel Options keys, a set of keys are provided for convenient on-console control of external profanity-delay units.
5. **Six SoftKnobs** are context sensitive; when any Direct Access key is pressed, the on-screen display shows the function affected by rotating and/or pushing each knob.
6. **Monitor Module Global Options & Timer Control Keys** let operators recall Show Profiles, select monitor and metering preferences and affect other Element behaviors. Timer controls help keep track of on-screen elapsed and remaining time displays.
7. **Talkback & Preview Keys** let operators preview (cue) selected sources off-air, or quickly talk to any source(s) with associated backfeed(s).
8. **Monitor 2 Talkback & Volume Controls** let operators easily talk to hosts and guests in a second studio, and control their monitor volume.
9. **Monitor Assignment Section** contains volume and selection controls for monitors, headphones, Aux Send buses and Preview.
10. **Control Knob/Nav Keys** help navigate through on-screen options.
11. **Numeric Keypad** lets operators dial phone systems or codecs directly. Also provides numeric input during surface setup.

Element with 2-Fader Phone Module and 2-Fader + Monitor Module

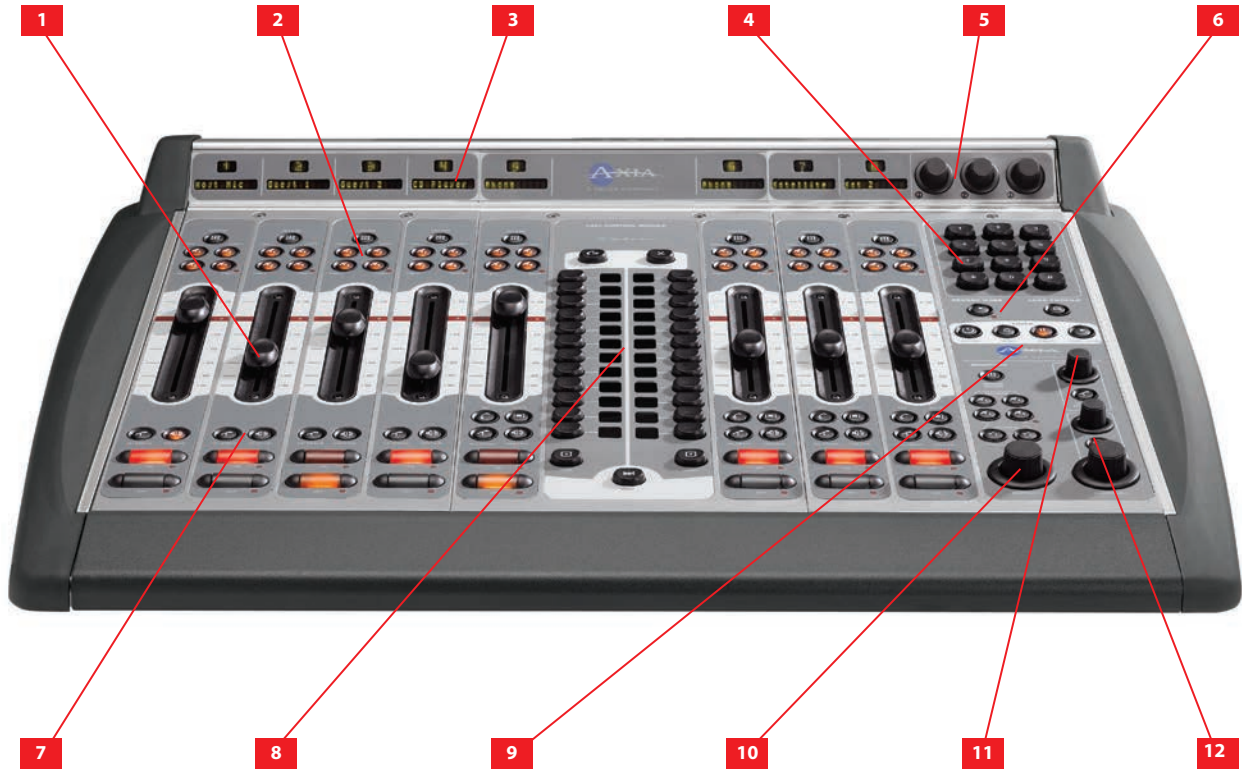

1. **Faders** can accommodate any input source. Each channel's **Options** button (at the top of the fader strip) lets operators change sources and call up expanded channel features.
2. **Assignment Buttons** for the four stereo main output buses – **Program-1**, **Program-2**, **Program-3** and **Program-4/Record** – are located atop each fader strip.
3. **Channel Displays** contain a 10-character text readout and a window for fader position numbers and Status Symbol icons. Text is fixed for static sources like microphones and CD players, but can be set to show song/artist information, etc., when computer-based audio sources are connected.
4. **Numeric Keypad** lets operators dial phone systems or codecs directly. Also provides numeric input during surface setup.
5. **Three SoftKnobs** are context sensitive; when any Direct Access key is pressed, the on-screen display shows the function affected by rotating and/or pushing each knob.
6. **Record Mode and Load Profile Keys** let operators recall customized Show Profiles and activate Record Mode to quickly capture off-air bits to an external recording device.
7. **Talkback & Preview Keys** let operators preview (cue) selected sources off-air, or quickly talk to any source(s) with associated backfeed(s).
8. **2-Fader Phone Module** provides direct control of all hybrid and line control functions for Telos Nx12, TWOx12 or Series 2101 Broadcast Talk-show Systems.
9. **Timer Controls** help keep track of on-screen elapsed and remaining time displays.
10. **Monitor 1 Section** contains volume and selection controls for monitors, headphones, Aux Send buses and Preview.
11. **Monitor 2 Talkback & Volume Controls** let operators easily talk to hosts and guests in a second studio, and control their monitor volume.
12. **Headphone and Preview Volume Controls** let operators adjust Host headphone volume and control Preview (cue) volume and options.

Element Stereo Main Screen Overview

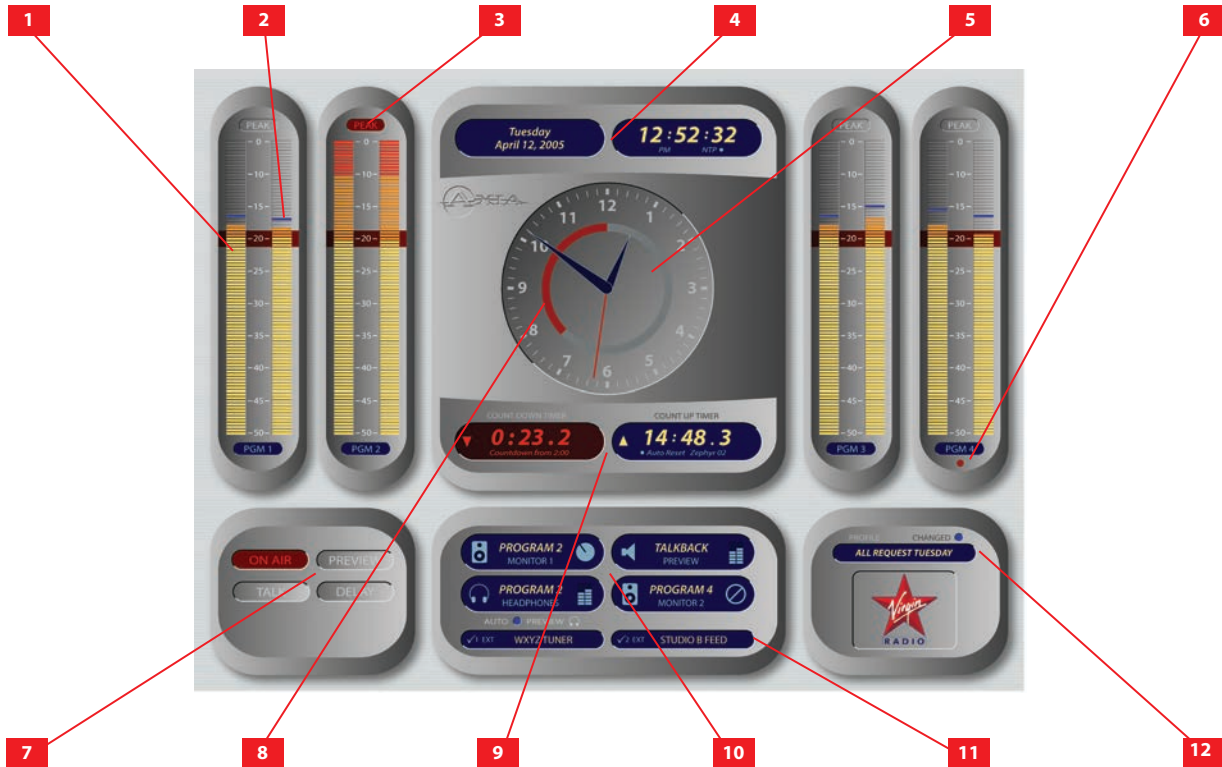

- Program Meters** for each of Element's four stereo Program buses feature true VU meter ballistics with an expanded scale. Solid bar graphs indicate average level; the red line at -20dBFS corresponds to the 0dB mark on a traditional analog meter. Other international standards are available.
- Peak Indicator** indicates absolute peaks to show talent where the loudest portions of program material are landing on the VU scale. (This indicator may be switched off if desired.)
- Peak Indicator Warning** illuminates when peaks reach or exceed 0dBFS.
- Day/Date and Digital Clock** keep operators informed of what day it is (in case they forget, which is entirely normal). Clock can be set for 12- or 24-hour operation, and can be slaved to a networked NTP server if desired.
- Analog Clock** presents a traditional clock face with second hand for fast orientation.
- Utility Meter** normally shows the volume of sources assigned to the **PGM-4/Phone/Record** multifunction bus, but can optionally be slaved to meter whatever source is auditioned in the Control Room Monitors.
- Annunciator Panel** informs operators when Mic channels are open, when audio is being auditioned in the Preview (cue) channel, when Talkback is active in either direction, and when external profanity delay units (if any) are active.
- Countdown Ring** appears when Element's Countdown Timer is active, and decreases during the last :60 seconds as a visual prompt.
- Count Up and Countdown Timers** provide an automatic event timer with manual elapsed-time function, and a countdown timer to assist in back timing live program material.
- Monitor Selection Indicators** show talent what source is being presented in the Control Room and Studio Monitor channels, the CR Headphone channel and the Preview channel, and shows the position of each volume control when adjusted.
- External Monitor Indicators** show what sources are assigned to each of the two programmable External Monitor channels.
- Show Profile Indicator** tells talent what Show Profile is currently loaded, and whether the console has been changed from Profile settings.

Control Details

General Fader Controls

Although any Element faders can handle any type of audio source, some fader functions change their behavior depending upon the type of source assigned. Also, certain fader modules have “extra” controls for specific uses. The controls found on the Element 4-Fader Line Module (Figure 5-1) are common to all Element modules, so we’ll look at these first.

- **Fader Assignment Display** 

The 10 character alpha display shows the source presently assigned to this channel. If the fader’s **Options** button is pressed and the operator changes sources, this display changes too.

If a channel is ON and the operator changes its source, the display will flash between the source currently on-air and the newly selected source. The fader will not “take” the new source until the operator has turned the channel off, preventing on-air errors. If a Show Profile is loaded that specifies an unavailable source, the display reads *Requested source not found*.

Just above the alpha display is a Status Symbol display. This display indicates the fader’s channel number or presents a Status Symbol to indicate when backfeed or talkback is active.




- **Channel Options Key** 

Pressing this key activates the **Channel Options** keys located on Element’s Master Module. Refer to the sections on Monitor Module controls later in this chapter for detailed functions.

New in version 2.1 is an **A/B switch** function. This function enables operators to quickly toggle through sources available to any particular fader by holding the Options key and pressing the OFF key. Each time the OFF key is pressed, the fader will take the next source from that fader’s list of available sources.



Figure 5-1: Line Module Fader Channel

- **PGM-1, -2 & -3 Keys**   

Each channel is assigned to any of the three main output buses by selecting any (or all) of these program keys. Generally, PGM-1 is the main air bus and other buses are used for production or other programming requirements. All program outputs are post-fader and post on-off function.

- **PGM-4 / Record / Phone Bus Key** 

The fourth bus functions as a regular output bus, but any sources feeding PGM-4 are also sent to a special **Record** bus that feeds a dedicated recording device, as well as to the **Phone** bus that sends mix-minus audio to any phone callers. These buses operate independently but simultaneously, allowing jocks plenty of operational flexibility.

PGM-4 bus audio output is post-fader, post-on/off; **PGM-4 Record** bus audio output is post-fader, pre-on/off, and **Phone** bus audio is sent to callers pre-fader, pre-on/off.

- **Talkback Key** 

Each fader is equipped with a **Talkback** key, located between the bottom of the fader and the channel **ON/OFF** keys. If the source assigned to a fader has an associated backfeed, pressing this key will allow the board operator to communicate with the person at the other end of the backfeed; the fader’s Status Symbol display will change to show that Talkback is active.

Multiple **Talkback** keys can be selected to talk to more than one source at a time.

Auto-Talkback: If a source’s Backfeed mode is set to “Auto”, the caller or remote talent will hear PGM-1 minus himself (mix-minus) whenever the fader he’s assigned to is **ON**, and will have his Talkback channel automatically activated when the channel is turned **OFF**. See Chapter 3: “Configuring Sources” for more information on configuring backfeeds.

- **Channel Preview Key**



Preview (called “cue” in the old days) allows the operator to listen to sources before they air. Element’s **Preview** bus allows auditioning in full stereo. Individual source profiles can change Preview to **Solo** (Post-Fader) operation.

The **Preview** key acts like a latching switch. *Momentarily* pressing any channel’s **Preview** key assigns that channel to the Preview bus; pressing it again removes the channel from Preview. To enable an operator to quickly listen to various sources, the Preview function can be interlocked: pressing **Preview** on any channel will remove any other channel from Preview mode.

If you want to preview multiple channels, pressing and *holding* any **Preview** key disables the interlock; other sources can be added to the Preview mix by pressing them. Conversely, channels can be removed from a multiple Preview selection by pressing and *holding* any lit **Preview** key and deselecting the individual channels you wish to remove from Preview. A *momentary* press of any lit **Preview** key will remove all channels from Preview.

The interlock option for Preview can be disabled in any Show Profile’s Monitor section so that users can gang preview sources without the need to press and hold the preview button.

The audio from the Preview bus feeds any speakers dedicated to Preview, and can also be routed to the operator’s headphones if desired. Preview speakers will be muted whenever the board operator’s microphone is **ON**, or is assigned to the Preview or Record buses.

New Feature: If you press **Talk** on a fader that hosts a source with a backfeed and, while holding it, press the Preview button, both will latch on, making it easy to have a hands-free off-line chat using the CR Mic. Pushing either one clears both.

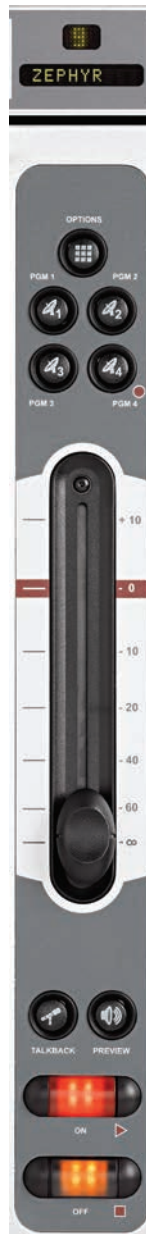


Figure 5-1: Line Module Fader Channel

- **Fader**



The fader controls the volume of the input source. There are two modes for the fader: **fader-start** and **fader-normal**:

1. When the channel is used in **fader-start** mode, pushing the fader all the way to the bottom of its travel turns the module off, and sends appropriate logic commands to source equipment. Moving the fader up turns the channel on and sends logic commands. In **fader-start** mode, the **On** and **Off** keys act more as indicators of channel status; the **On** key will not turn the channel on if the fader is at the bottom of its travel.
2. In **fader-normal** mode, on/off status and start/stop commands follow the channel ON/OFF buttons independent of fader position.

For information on how to switch between **fader-start** and **fader-normal** modes, see the Monitor Module Controls section later in this chapter.

- **On and Off Keys**



When the channel is in **fader-normal** mode the **On** key (▶) turns the channel on and the **Off** key (■) turns it off. The channel **On** and **Off** functions also provide logic (start and stop pulses, monitor muting, etc.) appropriate to the selected source.

If a control-room mic is assigned to a fader, the CR monitors and Preview speakers will mute when that fader is turned on and when CR microphone sources are Previewed. If a fader is hosting a microphone source, pressing the **On** button when the fader is already on mutes the channel, providing a “cough” function, until the button is released.

New Feature: In fader-start mode, holding the **Off** button while moving the fader up temporarily overrides fader-start; the channel won’t turn on or send GPIO commands.

4-Phone Module Channel Controls

You can assign any type of source to any Element fader module, but some fader modules include special keys that provide extra functions for certain types of sources. The 4-Phone Fader Module (Figure 5-2) is one of these modules. If a normal line source is assigned to a Phone Fader, the fader and its controls operate exactly like a standard 4-Fader Module (described in the previous section). But when a **Telos** telephone hybrid is assigned to one of these faders, extra functionality is enabled.

Taking Calls

The Status Symbol box above the alpha display indicates an available line by displaying a single dot. A call ringing in shows a “ringing” icon. It is answered by pushing either the **On** or **Preview** button. If **Preview** is already on, toggling to **Off** and then **On** answers the call. When the call is answered, an “up arrow” icon displays. Also, a window on Element’s screen will show call status and incoming caller ID (if available).

When the phone channel is off and in Preview, press **Off** to drop the call. When the channel is on, press **Off** *once* to put the caller on hold; *twice* to drop.

Making Calls

To dial out from the console, press any control key (**Off**, **On**, **Hold**, **Set**, or **Preview**) on a fader that hosts a Phone source. This assigns the Keypad on the Monitor Module to that fader. Dialing works like a mobile phone: enter all digits, then press the **Enter** (↵) or **Pound** (#) key to place the call. The Status Symbol icon above the fader indicates first that a line is active and then that the call is proceeding. The Element display screen will also indicate the numbers dialed and call status.

• Set Key



If you’re using certain Telos broadcast phone systems, pressing the **Set** key transfers the phone line assigned to that fader to a handset. These buttons are mutually exclusive across all faders; touching a **Set** key on any Phone Fader switches the handset to the line assigned to that fader and cancels any previous line selection. For details on Telos phone systems that utilize the **Set** key, please refer to **Appendix D: Working With Phone Hybrids**

• Hold Key



Pressing **Hold** sends a hold command to the connected Telos phone system. When connected to European ISDN lines, a hold signal is sent to the network. With USA ISDN lines, no network hold function is available, so the hybrid enters a virtual hold state.

Note: The Element’s 2-Fader Monitor Module also includes two Phone faders complete with **Set** and **Hold** buttons.

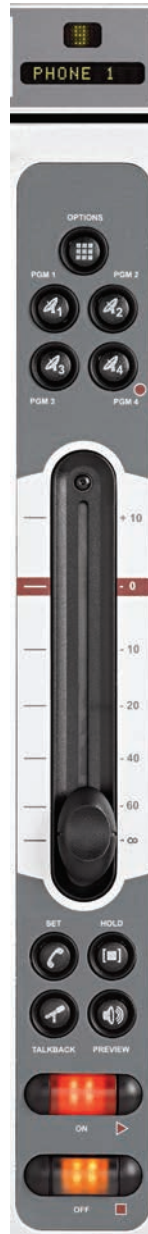


Figure 5-2: Phone Fader Module Channel

Call Controller + 2-Fader Phone Module

The faders on this module can be used as faders for any console source however they are most commonly associated with phone hybrids.

This module (Figure 5-3) has a high level of integration with Telos multi-line talk show systems. It features the hybrid controls found on Telos talk show controllers, flanked by two faders. Typically, the left fader is linked to the left hybrid control, and the right fader to the right hybrid control. The faders and controls are identical to those described for the 4-Phone Module in the previous section.

For details on hybrid control operation and description of Status Symbols used, please refer to the Operator's Manual supplied with your Telos phone system.

Tip: If the caller cannot hear the operator, the most common cause is having the phone channel turned ON. Remember - when the phone channel is ON, the backfeed to caller is a mix-minus of PGM-1 (default). Only when the phone channel is OFF will the caller hear what is assigned to PGM-4 (Phone)

Appendix D: Working With Phone Hybrids provides details on the configuration of various Telos phone systems when used with your Element console.

Note: The Element's 2-Fader Monitor Module also includes two Phone faders complete with **Set** and **Hold** buttons.



Figure 5-3: Call Controller + 2-Fader Phone Module

Production Module Controls

The Element Production Module gives production-room gurus quick access to often-used EQ and positioning controls for each loaded source. Its controls provide direct access to the options presented in the **EQ & DYNAMICS** options screens detailed later in this chapter.

About Element EQ: Our EQ model is three-band quasi-parametric. Controls are provided for center frequency and boost/cut, with a unique SmartQ™ automatic bandwidth system.

SmartQ works by varying the Q of the selected parametric band proportional to the amount of boost or cut you specify. A small amount of boost or cut will affect a broader range of frequencies for a warm, musically-pleasing effect. As gain is increased the Q sharpens, affecting a narrower range of frequencies for tighter control of target bands. At aggressive cut levels, the EQ becomes a tunable notch filter. SmartQ keeps the EQ sounding natural at virtually all settings.

To activate the Production Module, press the **Options** key on any fader strip. The Production Module's overbridge display will immediately mirror the number of that fader and the name of the source you're adjusting EQ for.

Once the Production Module is active, you can quickly adjust EQ using the controls described below. To quickly set EQ for multiple channels, rotate the **SELECT** knob on the overbridge panel to choose a different fader source, and press it to **TAKE** that source.

- **AUX SEND A/B/C/D:** These controls allow you to send the output of the active fader to any or all of the four Aux Send buses for outboard audio effects processing, custom IFB mixes, etc. Each Aux Send control has 50 dB of adjustment range, from $-\infty$ to +10dB. Rotating the knobs

adjusts the send level; pushing the knob toggles the send between **PRE-FADER** and **POST-FADER**.

- The three central pairs of knobs are **EQ Controls:** **HI GAIN/HI FREQ**, **MID GAIN/MID FREQ** and **LO GAIN/LO FREQ**.

The **GAIN** knobs provide 40 dB of adjustment range for boost or cut of the three parametric bands, from -25 dB to +15 dB.

The **FREQ** knobs each act slightly differently:

» **HIGH FREQ:** Sets the active frequency for high-band EQ. Pushing this knob toggles the EQ model between **Shelf** and **Bandpass** modes. If set to **Shelf**, the **HIGH FREQ** knob determines the top of the shelf. If set to **Bandpass**, it sets the center frequency of the BP filter (SmartQ determines the width of the BP filter, as described above).

» **MID FREQ:** Sets the center frequency of the midrange parametric band.

» **LOW FREQ:** Sets the center frequency of the low parametric band. Pushing this knob toggles the EQ model between **Shelf** and **Bandpass** modes. If set to **Shelf**, the **LOW FREQ** knob determines the top of the shelf. If set to **Bandpass**, it sets the center frequency of the BP filter

- The four knobs at the bottom of the module are the **PAN** controls.

» The upper left knob **PANs** the sound field left-to-right.

» The **FRONT-BACK** knob moves the soundfield front-to-rear (in 5.1 mode).

» The **SURROUND** knob pans the rear speakers left-to-right (in 5.1 mode).

» The **LFE** knob adjusts the gain of the Low Frequency Effects channel (in 5.1 mode).



Figure 5-4: Production Module + overbridge display

Standard Monitor Module Controls

The **Standard Monitor Module** (Figure 5-5) contains direct-access controls for all of Element’s options and features. Constantly-used controls like headphone and monitor selection and volume, plus command keys for the on-screen timers, controls for an external profanity delay unit, and a numeric keypad for convenient dialing of telephone systems and codecs are included.

Nav Keys & Control Knob

At the bottom right of the standard monitor module is a **Control Knob** surrounded by a set of navigation keys (**Up, Down, Right and Left**), an **Enter** key (**+↵**), and a **Help** key (**?**). These controls provide another way to navigate Element option screens.

Operators can use the directional keys to navigate through on-screen lists, and the **Enter** key to “take” a selection. The **Control Knob** can also be used to scroll through on-screen lists.

Channel Options Section

These keys found on the standard monitor module allow the operator to customize the behavior of individual faders. The operator first presses the **Options** key atop the fader to be modified; the Channel Options box is displayed on Element’s screen (Figure 5-7), and the Channel Options keys then become active.

With the 2-fader monitor module, the various Channel Options are selected by navigation with the SoftKnobs.



Figure 5-5: Standard Monitor Module + SoftKnobs

Channel Jumping:

If any fader is in **Options** mode, you can “quick jump” to set options for other fader channels by pressing the **Options** key at the top of their channel strips.

For example, if you need to change the **Source** on several channels, select the first channel using its **Options** key, and then choose the **Channel Options Source** key. The Source Selection list will appear on-screen. Once the source reassignment is made, simply press the **Options** key on the next channel you want to assign a new source to; the **Source** screen will remain active, and you’re now adjusting settings for the new channel. The channel number is displayed on-screen as confirmation.

Placing a channel in **Options** mode lets you change inputs, change/apply EQ or dynamics processing; change pan position; invert phase; set Aux Send and Aux Return levels; adjust mix-minus settings for that channel and adjust channel gain. The various **Options** displays; (Figure 5-7) give detailed channel information that will vary a bit depending on the type of source you are viewing; the Element channel number (the physical fader position, from left to right); the source and type assigned to that channel; source ownership information and a small VU meter displayed for confirmation.

2-Fader Monitor Module Controls

The **Monitor + 2-Fader Module** (Figure 5-6) allows users to customize their console design, adding two full-function faders at the cost of some direct-access control keys in the Monitor section. No flexibility has been sacrificed, however; all the functions provided by the Standard Monitor Module are present, but are accessed differently. Controls for all of Element's options and features are accessed via on-screen menus with the aid of the three SoftKnobs; constantly-used controls like headphone and monitor selection and volume, plus command keys for the on-screen timers and a numeric keypad for convenient dialing of telephone systems and codecs are included.

The 2-Fader Monitor Module does not include the navigation arrow keys, or scroll knob as described on the previous page. The “Enter” and “Help” keys are also not included with the 2-Fader monitor module

A close inspection reveals that the faders on this module are the same as the faders on the 4-Phone Fader module or the 2-Fader Call Controller module. The **SET** and **HOLD** buttons are included making the 2-fader Monitor Module useful for integration with hybrids that support these features.

Channel Options

Pressing the Channel Options keys above your faders will generate a slightly different display if you have the 2-Fader Monitor module since this module has three SoftKnobs as compared with the six SoftKnobs found on the

Standard Monitor Module. In many cases, you will find that one SoftKnob has been used as a “selector”. It takes a few more clicks and twists to access some features but the end result is the same.

In Figure 5-7 on the following page, you can see some of the different screens that are presented when you hit the Channel Options button. Different types sources have different options. The three SoftKnob controls for the 2-Fader Monitor Module are shown below the screen image for the Standard Monitor Module.

When one of the sources has been selected, rotating the **Function/Select knob** allows you to select the channel option you want to view or change. The selected option area will be shaded RED. Pressing this knob selects that option.

The following sections will describe both Monitor Modules. In many cases the user interface is identical except for the SoftKnob controls and their functions. The screen shot for the 3-knob user interface will be shown below the 6-knob controller where applicable.



Figure 5-6: Monitor + 2-Fader Module + SoftKnobs



Figure 5-7: Channel Options screens. Information displayed differs based on the type of source currently assigned to the active fader. Shown clockwise from top left: Line Source Channel Options screen, Mic Source Channel Options screen, Phone Source Channel Options screen, Codec Source Channel Options screen. 2-Fader controls are shown below.

- **Source** 

Pressing the **Source** key or selecting this option with the SoftKnob displays the Source Selection menu. The Source Selection screen displays the currently selected source alongside a list of available sources and their current ownership status. Operators may select a source using the SoftKnobs or Nav Keys. They can also preview a source before selecting it.


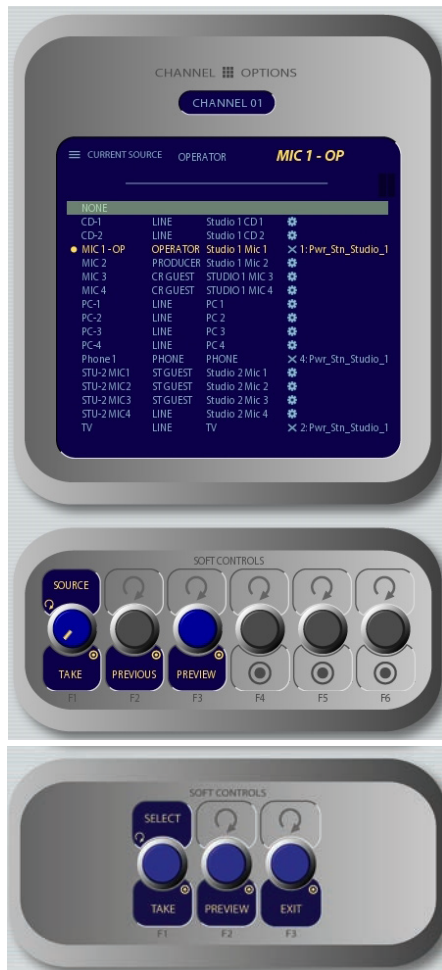


Figure 5-8: Source menu screen. 2-Fader Module controls shown below.

A Note About Source Sharing: Element’s source sharing protocol keeps sources from receiving backfeeds from more than one console at a time. Source control logic, however can be either exclusive or shared.

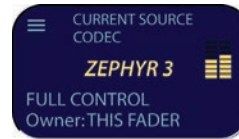

If an operator tries to assign a source that’s already in use on another console and has a backfeed or logic control enabled, the ID box in the Channel Options screen displays “Listen Only” rights to the source (as seen in the right-hand box above) - no backfeed will be sent from his console, and no machine logic is tied to the fader’s **ON/OFF** keys. In this case, the Channel Number box above the fader will display an “X” which is an indicator of “listen-only” status

If the source is not in use anywhere else, the operator is informed that they have “Full Control” of the source (as shown in the left-hand box above), and backfeed and logic operate normally.

- » **Source/Take:** rotating this SoftKnob scrolls through the available sources. Push to take.
- » **Previous:** (Standard Monitor Module only) Whenever you “take” a new source, your last source selection is held in memory. Should you change your mind about the new source and wish to return to your previous source selection, press the **Previous** knob. the prior source will be immediately reloaded to the fader.
- » **Preview** allows you to hear the highlighted source through the Preview speakers without having to “take” it. Press and hold to listen; release to end the preview.
- » Pressing **Source** again returns to the Channel Options screen.

- **EQ & Dynamics** 

This command allows three-band parametric equalization to be applied to the selected audio source and, if it is a permitted source (mic, phone or codec), to apply dynamics processing by Omnia. On the Standard Monitor Module, pressing the **EQ & Dynamics** key causes the **EQ** screen to appear; pressing it a second time displays the **Dynamics** screen, and pressing a third time exits.

When the **EQ** screen is displayed, a graphical representation of the equalization curve is displayed as the controls are adjusted. The screen also indicates the

amount of cut/boost applied, and the center frequency of each band.



Figure 5-9: EQ menu screen.

- » **Function/Exit:** (2-Fader Monitor module only) This control changes the frequency band at which the other two controls operate - low, mid or high. Pressing this knob will exit the EQ screen.
- » **Lo Gain/Bypass/Active:** Rotating this Soft-Knob adjusts the amount of gain or cut applied to the low EQ band; note that the Shelf/Peak indicator next to the onscreen control automatically shifts to Peak mode when boost is applied, and shifts to Shelf mode when cut is applied. Pressing this knob toggles EQ between **Active** and **Bypass**. Note that the centre SoftKnob on the 2-Fader Master Module performs the **Active/Bypass** toggle function.

- » Rotating the **Lo Freq** knob adjusts the center frequency of the low EQ band (20 - 320 Hz).
- » Rotating the **Mid Gain** and **Mid Freq** SoftKnobs adjust gain and center frequencies of the mid-range EQ band (125 Hz - 2 kHz).
- » The **Hi Gain** knob adjusts the boost/cut of the high frequency band (1.25 kHz - 20 kHz).
- » **Hi Freq/Shelf/Peak:** Rotating this SoftKnob adjusts the center frequency of the high EQ band (1 kHz - 16 kHz). Pushing this knob toggles the high-band EQ method between **Peak** and **Shelf** modes.
- » Pressing **EQ & Dynamics** again displays the **Dynamics** screen (Standard Monitor Module only)..

Note: High, Mid and Low band adjustments provide up to 25 dB of cut and 15 dB of boost. Element EQ features SmartQ™ automatic bandwidth system that varies the Q of the selected parametric band to provide the most pleasing EQ effect.

Dynamics controls are available if the selected source is a Mic, Codec or Phone input. Pressing the **Dynamics & EQ** key twice (Standard Monitor Module) invokes the **Dynamics** menu. With the 2-Fader Monitor Module, use the functions knob to select the Dynamics function. From here, you can add **Gating**, **Compression** and **De-essing** to a microphone channel. Normally, these values are part of a pre-set Show Profile; however, on-the-fly control is provided for talent (with permissions) to make adjustments when needed.

What is this stuff? Radio engineers don't need a lesson in dynamics processing, but for the benefit of any jocks reading this, here's a quick explanation of what these controls can do.

A **Gate** is a dynamics device whose function is to remove unwanted audio material below a certain threshold. A gain circuit is employed to raise or lower the volume of the audio signal; when the signal falls below a certain set threshold, the audio level drops down to a predetermined level. The reason they are called gates is because when they "close" it sounds as if the audio has suddenly stopped, or has been "gated." You might use this on a mic channel to eliminate background noise during times when you're not speaking.

Threshold settings determine at what level the processor will begin working. For example, on a compressor, when signal level exceeds the threshold setting, it will be compressed; below the threshold the signal will remain uncompressed. On a gate, threshold determines the minimum input level required to cause the gate to open up and pass signal; when input level drops below the threshold, the gate will be closed preventing signal from passing. Carefully setting the threshold allows you to very specifically control when processing is being applied to a signal.

Compression controls the dynamic range of an audio signal. It generally reduces the volume of very loud audio, helping to keep from “blowing out” the mic channel with too much volume. It can be used to make your mic channel sound “fatter,” evening out the highs and lows of your vocal pattern. It can also increase the overall perceived fullness of your voice. Too much compression, however, can make your voice sound hard and “squashed.” Use it sparingly!

To use compression, you must first set your threshold value (usually expressed in dB). When the audio signal is louder than this threshold, its gain is reduced. The amount of gain reduction applied depends on the **Compression Ratio** setting. For example, with a 2:1 ratio, for every 2 decibels the input signal increases, the output is allowed to increase only 1 decibel.

The **Freeze Gate** is used to prevent “suck-up” of room noise during speech pauses. When active, gain is not increased by the compressor when audio is absent. “Freeze” would be the default, since it almost always improves results.

De-Essing is just what you think it is - a way to electronically remove extra sibilance from your mic channel. If your mic is particularly sensitive to “s” and “th-” sounds and accentuates them on-air, De-Essing helps reduce these sounds to more manageable levels. As with compression, too much de-essing will produce annoying and unnatural results - you’ll wind up sounding like you’re talking through a cotton sock! Stick to small amounts to get the effect you want.

- » **Function/Exit:** (2-Fader Monitor module only)
This control changes the processing control function at which the other two controls operate - Expander, Compressor or De-Ess. Pressing this knob will exit the Dynamics Menu screen.
- » Rotating the **Exp Gate Thresh/Bypass/Active** SoftKnob varies the level of signal threshold needed for the **Gate** function to activate (between -50 and 0dB). Pushing this knob toggles Dynamics between Active and Bypass states.
- » The **Exp Gate Depth** knob sets the amount of



Figure 5-10: Dynamics menu screen.

gain reduction when audio level falls below the **Exp Gate Threshold** value (adjustable between -3 and 0dB).

- » **Comp Thresh/Bypass/Active** sets the upper limit of the level at which the compressor will begin to work (between -30 and 0dB). Pushing the SoftKnob toggles between Active and Bypass states.
- » **Comp Ratio/Freeze/No Freeze** sets the compression ratio (variable between 1:1 and 16:1). Pushing the SoftKnob activates and deactivates the compressor’s Freeze Gate function. When the Freeze function is active, a red “lamp” illuminates just above the Compression Ratio bargraph meter.
- » **De-Ess Thresh/Bypass/Active** sets the audio level above which the de-esser will be engaged (from -20 to 0dB). Pushing the SoftKnob toggles

between Active and Bypass states.

- » **De-Ess Ratio** sets the amount of sibilance reduction, in dB, that will be applied (adjustable between 1:1 and 8:1).
- » **Post Processing Gain** sets the amount of gain applied after processing. This can compensate for gain that may be lost during compression.
- » Pressing the **Dynamics & EQ** key again will return you to the **Channel Options** screen.

• **Pan & Mode Key** 

This function allows the operator to adjust the pan or balance of the channel source and correct signal phase errors.



Figure 5-11: Pan / Mode menu screen.

It's a Lock: If a “padlock” icon appears in any

options screen, that function is “locked out” in the Source Profile and adjustments cannot be made. In Figure 5-11, the padlock appears just below the soundfield representation, above the Mode indicator. The onscreen Mode SoftKnob is also “grayed out” to show that this function is unavailable.

Operators cannot “unlock” locked functions; if you wish to make locked functions available, simply modify the source profile to allow them and when the source is reloaded to the console, the padlock will have disappeared.

- » **Function/Exit:** (2-Fader Monitor module only) This control changes the other control operates - Pan, Mode or Phase. Pressing this knob will exit the Pan/Mode Menu screen.
- » **Pan/Balance:** Rotating this SoftKnob adjusts the Pan setting for mono sources and the Balance setting for stereo sources.
- » **Mode:** If the selected source is in stereo and the Source Profile for the selected source permits it (see Chapter 3 for information on Source Profiles), rotating this control lets the board switch source audio between **Stereo** (discrete left/right), **Left** (left source channel fed to L/R input), **Right** (right source channel fed to L/R input) and **Sum** (left and right source channels summed to mono and fed to L/R input). Push to **Take** the new setting.
- » **Phase:** If the selected source is *stereo*, rotating this control lets the board compensate for out-of-phase audio sources. **Normal** is used for in-phase sources; **Inv Left** inverts the phase of the left input channel only, **Inv Right** inverts the phase of the right input channel only, and **Invert Both** reverses phase of both stereo channels. If the selected source is in *mono*, the choices are **Normal** and **Invert** only. Press to **Take** the new setting.
- » Pressing **Pan & Mode** again returns to the Channel Options screen.

» **Aux Sends Key** 

Element has four stereo Aux buses that can be used as utility buses for mixing, for constructing custom IFB mixes, or as effects buses for production. Pressing this

key displays the Aux Sends screen.



Figure 5-12: Aux Sends menu screen.

- » **Select/Exit:** (2-Fader Monitor module only)
This control changes which AUX send the other control is adjusting. Pressing this knob will exit the Aux Sends Menu screen.
- » **Send A/B/C/D:** Rotate these knobs to adjust the level of the audio you'll be sending to any or all of the four Aux Send buses.
- » **Pre/Post Fader:** Pushing any of the four **Send** SoftKnobs toggles the activity state of that particular **Send**. The state is indicated in the display above.
 - * **On Pre** sends the source assigned to the fader to the selected Aux Send bus *prior* to having its gain adjusted by the fader (fixed level).
 - * **On Post** sends the source assigned to the fader to the selected Aux Send bus *after* having

its gain adjusted by the fader (variable level).

- * **Off** sends no audio to the Aux Send bus.
- » Pressing **Aux Sends** again returns to the Channel Options screen.

• **Feed To Source Key** M-1

If the assigned source (i.e., a codec or phone hybrid) has an associated backfeed or mix-minus, pressing this key allows the board op to change the audio supplied through the backfeed. This selection is normally pre-set when a Source Profile is constructed (see **Chapter 3: Working With Sources**, for information on Source Profiles), but can be modified on-the-fly.



Figure 5-13: Feed to Source menu screen.

- » The **Select/Take** knob, when rotated, scrolls through the list of available audio sources that can supply backfeed or mix-minus.
 - * **Automatic** backfeeds audio from the Phone

bus when the channel is **Off**, and audio from the Program-1 bus when the channel is **On**, with mix-minus if needed.

- * **Phone** backfeeds audio from the Phone bus, with mix-minus if needed.
- * **Program 1 - Program 4** backfeeds audio from the selected Program bus, with mix-minus if needed.
- * **Aux Send 1 - Aux Send 4** backfeeds audio from the selected Auxiliary bus, with mix-minus if needed.

About the PHONE and PROGRAM 4 buses:

Element's Program 4 mix bus is a special multi-purpose bus that does several things at once to make life easier for the operator.


Any source assigned to Program 4 also be fed to the PHONE bus and sent to callers when the channel is **OFF** and **AUTO** is selected as the **Feed To Source Mode**. PHONE is an internal bus which does not feed a separate output; instead, it picks up the Program 4 audio pre-fader and pre-On/Off and backfeeds them to an PHONE sources.

Sources assigned to Program 4 are also sent to the RECORD bus, a special fixed-level output that can be used to feed recording devices. This RECORD bus is post fader and pre on/off.

- » Rotating the **Dim** knob allows the operator to adjust, in dB, the amount by which the studio monitors are dimmed when this fader channel's **Talkback** key is pressed.
- » Pressing **Feed to Source** or **Options** a second time exits this menu.
- » The **DIM/OFF** knob, when rotated will control the amount of program dimming that occurs during Talkback. Pushing this control will select OFF which completely mutes the backfeed program during talkback.

Delay Section

These keys can be used to provide from-the-board control of an external profanity delay unit using one of Element's GPIO ports. Please refer to Chapter 4: "Configuring GPIO" for instructions

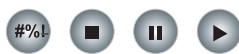

on GPIO setup.

The keys provide for remote activation of **Dump**, **Exit**, **Pause** and **Engage** functions, respectively.

Some enterprising individuals have found other uses for these keys. If they are not being used to control an external delay unit, our PathfinderPC software can monitor these keys and perform various actions upon detecting these button presses. Some of these uses have included custom IFB, one-button show profile load, VMIX control . . . the possibilities are virtually infinite!

Monitor Section

This controls in this section provide direct operator access to monitor selection and volume controls.

- **Monitor 1 Knob + Source Keys**



This knob, at the bottom left of the Monitor section, controls the selection and volume of the source heard in the **Monitor 1** speakers (typically the Control Room monitors).

- » Rotate the knob to vary the gain of the **Monitor 1** speakers.
- » Use the Direct Selection Keys in the column directly above the **Monitor 1** knob to send the output of **Program 1 - Program 4**, **Aux Send A - Aux Send D**, or the two **External** monitor sources to the Monitor 1 speakers. These keys light to denote the selected source.
- » You can listen to any frequently-used audio stream in your facility instantly (such as a network feed, off-the-air monitor or another studio's Program output) by assigning it to one of the two **External** selector keys - like preset buttons on a car radio.

Programming the External Monitor Selector keys:

If you press and hold either of these keys for five seconds, a list of available audio streams will pop up onscreen. You can then scroll through this list and select the source you want to hear in the monitors when that key is pressed. Each External key is independently programmable.

You can also pre-program the source assigned to these keys when you construct or capture Show Profiles, using the options available on the **Monitor** page of the Show Profile setup menu.

- **Headphone Knob + Source Keys** 

This knob, at the bottom right of the Monitor section, controls the selection and volume of the source heard in the board operator's headphones.

- » Rotate to vary the gain of the **Headphone** feed.
- » Use the Direct Selection Keys (Standard Monitor Module only) in the column directly above the **Headphones** knob to send the output of **Program 1 - Program 4, Aux Send A - Aux Send D**, or the two **External** monitor sources to the headphones. These keys light to denote the selected source.
- » Press and hold either of the **External** selector keys (Standard Monitor Module only) to display and select from a list of available audio streams to monitor on these keys.

- **Link Key** 

This key (Standard Monitor Module only) toggles the **Monitor 1 / Headphone** source **Link** function. When active, a change to the **Monitor 1** source automatically selects that source for the **Headphone** feed, and vice versa. The **Link** key illuminates when this function is active.

- **Monitor 2 Knob** 

This knob, at the top left of the Monitor section, controls the selection and volume of the source heard in the **Monitor 2** speakers (Control Room Guests and Studio or News booth monitors).

- » Rotate to vary the **Monitor 2** speaker gain.
- » Push the knob to see an on-screen display of sources that can be assigned to the **Monitor 2** feed. Rotate to highlight the desired source, and push again to "take".

- **Talk To Monitor 2 Key** 

The board operator can push and hold this key to talk to the talent listening to the **Monitor 2** feed. While the key is depressed, audio from the Control Room mic

channel is fed, pre-fader, to the **Monitor 2** speakers and headphones (if used). Releasing the key ends the talkback function.

- **Preview Knob** 

This knob controls the volume of the source heard in the **Preview** (cue) speakers. Rotate the knob to vary the gain of the **Preview** speakers. Note that pushing this knob (even though it "clicks") is not currently associated with any action.

- **Preview To HP Key** 

This key toggles the **Preview To Headphone** function. When active, this function sends **Preview** audio to the board operator's headphones. When inactive, audio from the **Preview** bus is heard exclusively in the **Preview** speakers. The **Preview To HP** key illuminates when this function is active.

There are three different Preview to HP modes; the current mode is indicated by an annunciator on the Element display screen just below the headphone selection tally.

- » **Off:** When Preview to HP is off, the selector key is unlit. No preview audio will be heard in the board-op's HP path.
- » **Stereo:** Pressing the **Preview to HP** key once from the Off state sends preview audio, when present, into both sides of the operator's headphone feed, overriding the Monitor audio. The **Preview to HP** key is now lit.
- » **Split:** Pressing the **Preview to HP** key a second time toggles SPLIT mode. In this mode, audio from the Preview channel overrides the Headphone Monitor selection *in the left headphone channel only*. Program audio is still present in the right channel of the operator's headphones.

Global Options Section

The **Global Options** keys are used to load Show Profiles and to customize Monitor, Meter, Aux Sends/Returns and Fader settings.

- **Profile Key** 

Pressing this key allows the board operator to browse and select from the list of saved Show Profiles, custom surface configurations that can be loaded as needed to reconfigure Element for different shows and talent.



Figure 5-14: Show Profile selection screen.

As soon as you “take” a new show profile, Element begins loading it. During the profile loading process, a status line reads `Loading (Show Profile Name)` to inform the operator of the operation in progress.

LOADING A NEW SOURCE WHILE ANOTHER SOURCE IS STILL ACTIVE: Element will never interrupt an active source in order to load a new one.

Let’s say that the operator has a satellite feed assigned to Channel 10, and this source is currently on-the-air (assigned to **Program-1**, fader up, channel **On**). The board op loads a new **Show Profile** to ready Element for the next show; the Show Profile he’s load-

ing has a CD player assigned to Channel 10. Obviously, there’s a conflict.

Instead of blindly changing the channel source and interrupting audio that’s on-the-air, Element queues the new source. When the board op is finished with the satellite feed, he turns the channel **Off** and the CD player automatically loads.

Along with selecting a new **Show Profile** to load, users can reload the currently active profile, resetting the board to a “nominal” state if they wish to return to their normal configuration after making on-the-fly changes.

- » **Select / Take:** Rotate this knob to scroll through the on-screen list of available Show Profiles. Push the knob to “take” the new Show Profile.
- » **Previous:** When you load a new Show Profile, Element remembers the previously loaded Profile until you exit the Show Profile screen. The **Previous** command functions as a “speed key,” highlighting the previously assigned source in the source list and allowing the operator to return to it should they change their mind. Press to “take.”

DON’T PANIC! Element is full of options intended to make life on-air easier and more intuitive for today’s talent. However, it’s possible for talent not yet familiar with the way Element works to “get lost” in the option settings.

Pressing and holding the **Profile** key for five seconds instantly clears changes made to the current Show Profile, resetting the Show Profile’s default settings. All is well, and your jock once again knows where his towel is.

• **Monitor Options Key**



Pressing this key reveals all sorts of neat options relating to Monitor and Headphone behavior. The Monitor Options screen is shown in Figure 5-15.

- » **Function/Exit:** (2-Fader Monitor module only) This control changes which the function of the other knob which is used for adjusting the Monitor Options parameters. Pressing this knob will exit the Monitor Options Menu screen.



Figure 5-15: Monitor Options menu screen.

- » Pushing the **TALK LEV** SoftKnob selects between adjusting the levels of the **Monitor 1 Talk To** and **Dim** levels and the **Monitor 2 Dim** level. The active function is highlighted in yellow on the screen. Turn the knob to adjust the values of these settings.
- » Rotate the **HP LINK** knob to choose whether the headphone source will follow the Monitor 1 source selection. Push the knob to **Take** your selection.
 - * **Linked** means that Headphone and Monitor 1 selections will mirror each other; making a selection from one bank of keys on the Monitor Module will automatically choose the same source on the other bank.
 - * **Unlinked** allows Monitor 1 and Headphone sources to be selected independently of each

other.

The strongest link: You've noticed that there are no Direct Selection Keys for the headphone source on the Monitor + 2-Fader Module. By default, CR Headphones and Monitor 1 sources are linked - the phones will play whatever source is assigned to the monitor speakers. So how can the operator select a headphone source if s/he chooses to **Unlink** the headphones?

When **Unlinked** is chosen in the Headphones Follow Monitors box, the **Preview** knob doubles as the headphone source selector. When the operator pushes the **Preview** knob, the **Headphone Source** menu is displayed. Voila!

- » The **H/P PROC** knob allows the board op to turn Headphone Processing on and off, define how it operates if active, and change Headphone Processing settings. These controls are adjusted in a manner similar to Channel Options EQ settings.
- » Pushing the **HP Proc** knob selects **Change Settings** onscreen and takes the operator to the **H/P Process** screen shown in Figure 5-16. In this screen, the operator is presented with a graphical representation of the EQ curve applied to the headphone channel. Talent can then apply three-band parametric equalization to his or her headphone channel, and select headphone dynamics processing. The screen indicates the amount of cut/boost applied, and the center frequency of each band.
 - » **Lo Gain/Bypass/Active:** Rotating this Soft-Knob adjusts the amount of gain or cut applied to the low EQ band. Pressing this knob toggles EQ between **Active** and **Bypass**. Note that the EQ mode for this band automatically changes to Peak mode when boost is applied, and Shelf mode when cut is applied.
 - * Rotating the **Lo Freq** knob adjusts the center frequency of the low EQ band (20 - 320 Hz).
 - * Rotating the **Mid Gain** and **Mid Freq** Soft-Knobs adjust gain and center frequencies of the midrange EQ band (125 Hz - 2 kHz).
 - * The **Hi Gain** knob adjusts the boost/cut of the high frequency band (1.25 kHz - 20 kHz).
 - * **Hi Freq/Shelf/Peak:** Rotating this Soft-

Knob adjusts the center frequency of the high EQ band (1 kHz - 16 kHz). Pushing this knob toggles the high-band EQ method between **Peak** and **Shelf** modes.

- * Press the **Monitor Options** key to return to the previous menu.



Figure 5-16: H/P Process settings.

Note: High, Mid and Low band adjustments provide up to 25 dB of cut and 15 dB of boost. Element EQ features SmartQ™ automatic bandwidth system that varies the Q of the selected parametric band to provide the most pleasing EQ effect. For details on SmartQ, please refer to Page 44 of this manual.

- » The **H/P PREV** knob controls whether audio from the **Preview** bus can be fed to the board op's headphones, and if so, in what manner. Note that operators can also press the **Preview to HP** key on Element's Monitor Module to toggle through these settings. Rotating this knob selects from the following options:
 - * **Off:** The operator will not hear Preview audio in the headphone channel.
 - * **ON (Stereo):** audio from the Preview channel overrides the **Headphone Monitor** selec-

tion and is sent to both the left and right channels of the operator's headphones.

- * **Split:** Audio from the **Preview** channel overrides the **Headphone Monitor** selection *in the left headphone channel only*. Program audio is still present in the right channel of the operator's headphones.
 - * After making a selection, push the knob to **Take** the new value.
- » **MONITOR MODE** knob: Rotate to select from the following monitor mode options.
 - * **Stereo:** The selected source will be presented in stereo on the Monitor speakers.
 - * **Left:** The left channel of the selected source will be presented in both Monitor speakers.
 - * **Right:** The right channel of the selected source will be presented in both Monitor speakers.
 - * **Sum L+R:** Both channels of the selected source will be summed and presented to both Monitor speakers.
- After making a selection, push the knob to **Take** the new value.
- » **HEADPHONE MODE** knob: Works exactly like the **MONITOR MODE** knob described above, but affects the board operator's **Headphone** channel. Pressing **Monitor Options** or **Options** exits this menu.

- **Meter Options Key** 

Pressing this key opens the **Meters** screen, where you can choose preferences for the two on-screen meters that are on the right side of the Element display, enable six more meters and set other meter preferences. In addition, Element now supports numerous international metering standards. This is one area where there have been numerous recent changes.

Right-Most Meter display options are:

- » **PGM-4** bus - default setting.
- » **Monitor 1/Preview** means the meter will show levels for the bus assigned to **Monitor 1** or the **Preview** bus when any source is in Preview-mode.

Meter Peaks can be hidden or viewed by selecting **Show** or **Hide** as desired.

PGM 3 meter source options are:

- » **Program 3** - default
- » **Record** (Program 4; post-fade, pre on/off)
- » **Phone** (Program 4; pre-fade, pre on/off)
- » **External 1**
- » **External 2**



Figure 5-17: Standard Meter Options Menu.

Note: The 2-Fader Monitor module does not have a Meter Options key. To enter the Meter Options screen, simply press the Monitor Options button twice. The first press will give you Monitor Options; the second press will take you to Meter Options described below. In addition to Meter Options, you will also find the global settings for AUX SENDS and AUX RETURNS.



Figure 5-18: 2-Fader Meter Options menu screen.

Meter Ballistics permits the selection of various international metering standards. Those selections are: meter options are:

- » **Full Scale VU** - Element default North American style VU meters.
- » **BBC Type PPM**
- » **DIN Type PPM**
- » **EBU Digital**
- » **Nordic Type**

Figure 5-19 illustrates the 5 different types of meters and a comparison of these meters displaying a steady tone with an RMS level 20 dB below digital full scale.

More Meters will open up an additional meter display that replaces the centre clock section on the Element display. These six meters can be configured to display any other sources you have specified in the Monitor section of your Show Profile (see Chapter 6 for details). To close the “More Meters” display, press the **Meter Options** button twice.

More Meters is toggled on/off on the **2-Fader Moni-**

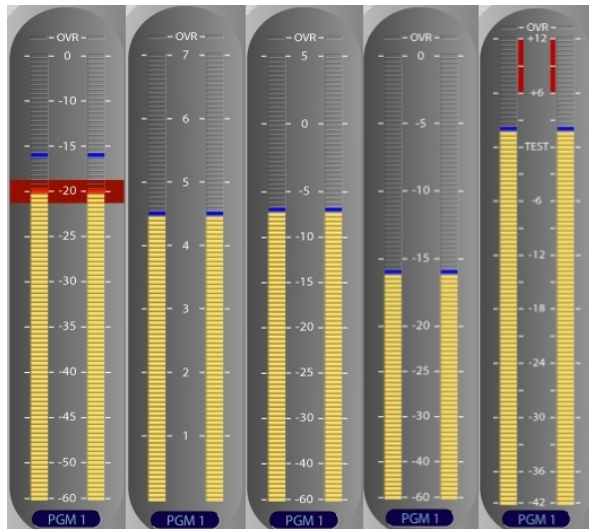


Figure 5-19: Meter Comparisons: Left to Right; Full Scale VU, BBC-PPM, DIN-PPM, EBU Digital, Nordc

tor module by pressing and holding the Monitor Option button and then pressing the Monitor 2 knob.

Note: The 2-Fader Monitor module includes the AUX SEND and AUX RETURN controls within the Meter Options screen as shown above. The functions of Aux Sends and returns are as described in the section that follows.

AUX Sends & Returns Key

(Standard Monitor Module only) This key affects global settings for the master send and return levels of the four stereo **Aux Send** and two stereo **Aux Return** buses. The outputs can be turned **On** or **Off** and can be sent to the preview speakers and headphones (if preview is enabled in headphones).

Element's Aux buses can be used as utility buses for mixing, for constructing custom IFB mixes, or as effects buses for production. Pressing the **Sends & Returns** key once takes you to the **Aux Sends Master** screen (Figure 5-19); pressing it twice displays the **Aux Returns Master** screen (Figure 5-20), and pressing a third time exits the menu.

Aux Sends Master screen options:

- » The **Send A/B/C/D** SoftKnobs, when rotated, set the Master Send Gain for each **Aux Send** bus. Pushing any of these knobs toggles that individual **Aux Send Master On** or **Off**.
- » The **Select/Preview** knob allows you to hear any of the four **Aux Send** mixes in the **Preview** channel. Push to preview; release to end the preview.

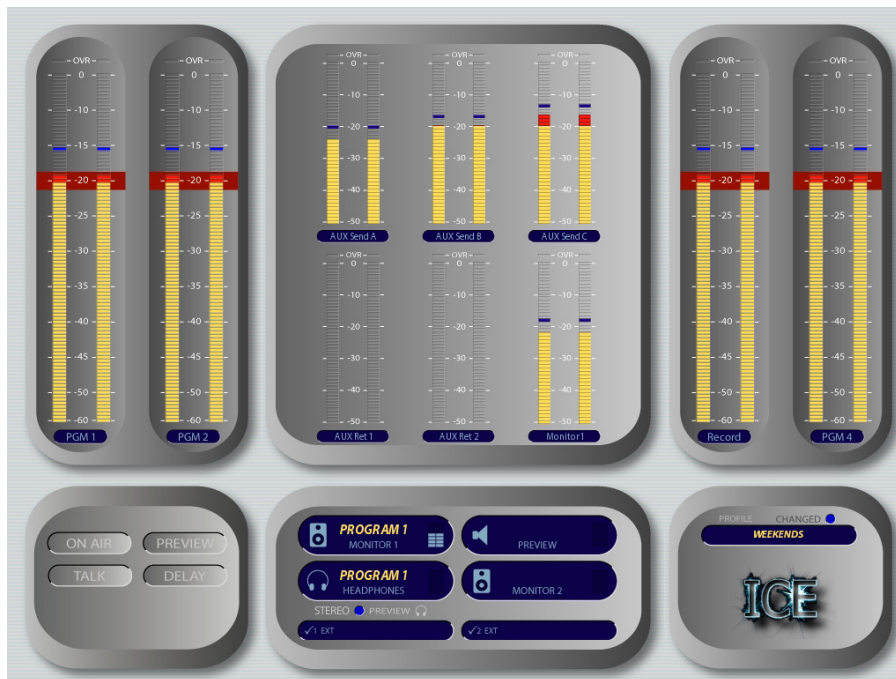


Figure 5-20: More Meters - Example Configuration



Figure 5-21: Standard Aux Sends menu screen.



Figure 5-22: Aux Returns menu screen.

Aux Returns Master screen options:

- » Rotate the **Return A/On/Off** SoftKnob to set the audio level of **Aux Return A**. Push the knob to toggle **Aux Return A On** or **Off**.
- » Rotate the adjacent **Assign/Take** knob to choose which of the four **Program** buses to assign the output of **Aux Return A**. Push the knob to **Take** the assignment.
- » Rotate the **Return B/On/Off** SoftKnob to set the audio level of **Aux Return B**. Push the knob to toggle **Aux Return B On** or **Off**.
- » Rotate the adjacent **Assign/Take** knob to choose which of the four **Program** buses to assign the output of **Aux Return B**. Push the knob to **Take** the assignment.
- » Rotating the **Select/Preview** knob allows you to select either of the **Aux Return** mixes for auditioning in the **Preview** channel; the on-screen menu indicates which **Aux Send** is selected. Push the knob to preview; release it to end the preview.

Press the **Sends & Returns** key one more time to exit the menu.

• Fader Options Key

Element supports fader-normal and European-style fader-start channel activation methods. Fader style is now set on a per-fader basis. As a result, the global Fader Options key is no longer used to control this function. Each input's Source Profile contains a Fader Mode choice, which lets you determine the activation method of *individual faders*.

Note: Pressing and holding the **Fader Options** key for five seconds enters the **IP Address Book** discussed in Chapter 1 and 2.

Timer Section

The Timer control keys operate Element's onscreen event and countdown timers, and allow users to set options determining the behavior of these timers.

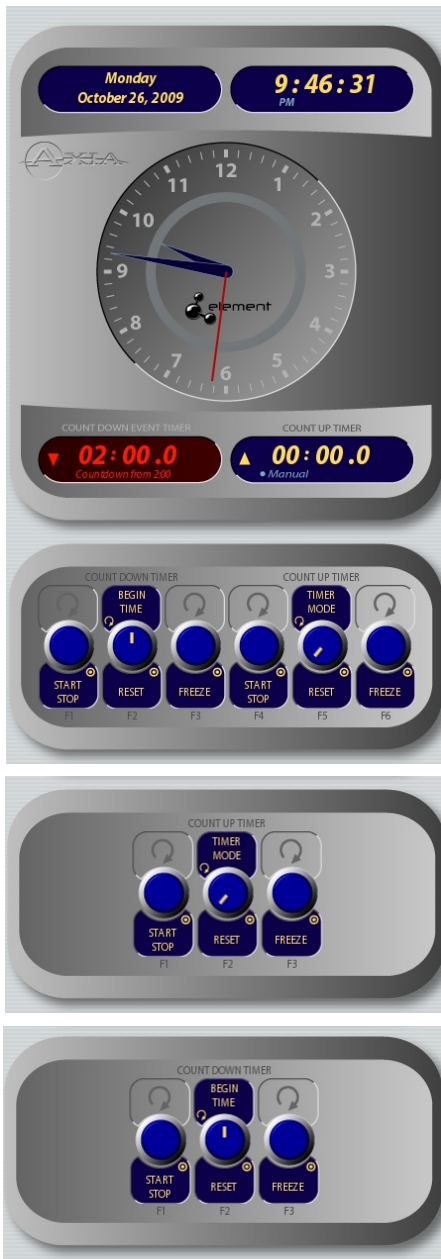


Figure 5-23: Timer menu.

• **Timer Options Key** 

Pressing the **Timer Options** key on the Standard Monitor module opens the Timer Menu (Figure 5-21). This menu allows users to adjust how the onscreen timers behave. Note that the SoftKnobs are divided into two sections: *Countdown Timer* and *Count Up Timer*.

The 2-Fader Monitor has a slightly different display that changes from Count-Up to Count-Down with the

first and second press of the Timer Options button. A third press closes the Timer Options.

- » The *Countdown timer* is useful for counting down to network joins, top-of-hour IDs, and other events which require exact timing. The Countdown timer is started, stopped and reset manually using the controls displayed when the Timer Options key is pressed. To use:
 - * Rotate the SoftKnob marked **Begin Time/Reset** to set the interval from which the countdown will begin. As you rotate, small numbers below the red counter onscreen will inform you of the new countdown interval.
 - * Press the **Begin Time/Reset** knob to set the new time you've dialed in.
 - * Press the **Start/Stop** knob to begin or end the countdown.
 - * Pressing **Freeze** holds the on-screen Timer display so you may take note of it; the timer continues to count while the display is frozen, and a second press of the **Freeze** again displays the running elapsed time counter.




"Look at me!!" During the last 60 seconds of the countdown, the inner ring of Element's onscreen analog clock will turn red and diminish as time passes, providing the operator with a visual cue to how much time is left until zero.

- The *Count Up Timer* is an event timer with three modes, which can be set to start/stop/reset either automatically or manually. Using Source Profiles, you can determine whether individual sources will start or stop this timer automatically; the onscreen controls described below allow the operator to override or modify those settings.
 - » Rotate the **Timer Mode** SoftKnob to choose how the event timer will operate.
 - * Choose **Manual** to start, stop and reset the timer by hand using the controls displayed when the **Timer Options** key is pressed.
 - * Choose **Auto-Reset** and the timer will automatically reset to zero and begin counting whenever a fader whose source starts the timer is turned **On**.

- * Choose **Auto-Add** to have the timer count up when a designated source's fader is turned **On** and stop counting when that source is turned **Off**. In this mode, the timer will not reset to zero when it is started.


Pressing the **Timer Options** key again exits this menu.

Note: Pressing and holding the **Timer Options** Key opens the **Clock & Timer Options Menu** discussed in Chapter 1.

- **Reset Key:**  Pressing this key resets Element's Count Up Timer to zero.
- **Freeze Key:**  Pressing **Freeze** holds the on-screen Timer display so you may take note of it; the timer continues to count while the display is frozen, and a second press of the **Freeze** again displays the running elapsed time counter.
- **Start/Stop Key:**  If the Count Up Timer is not running, pressing this starts the count. If the timer is running, pressing this key stops the countdown and retains the last displayed timer interval.

Record Mode Section

Record Mode is a special "one-touch" mode which can be set to automatically start a designated recorder so talent can record a phone call or remote interview with a single button-press. **Record Mode** can be enabled or disabled for each **Show Profile** (see Chapter 6, "Show Profiles", for details).

- **Engage Key:**  Press this key to put Element into **Record Mode**. Pressing this button activates a pre-determined recording device via GPIO assigned to the record device in the Show Profile. In addition to triggering a recorder, Record Mode also changes your headphones and monitors to PGM 4 Record which is indicated by flashing the PGM 4 indicator.

Pressing the **Record Mode** key a second time deactivates **Record Mode** and stops the recorder (via GPIO).

Help (?) Key and Magic Key Sequences

The **Help(?)** key (Standard Monitor Module) a special key that displays system information about your Element hardware, modules and associated software. Pressing this key will pop-up this information in the centre section of the Element display. Pressing it a second time will return to normal. The Element will continue to operate as usual when this display is active.

"Magic Key" Sequences for Standard Monitor Module

The list of "Magic Key" sequences for the Standard Monitor Module are:

- **IP Address Book:** Press and hold the **Fader Options** key for 5 seconds or press and hold the * and **4** and **7** keys for 5 seconds. Press the SoftKnobs as prompted to edit , save, reboot or Exit. Be sure to Reboot after making any changes to this page.
- **Clock & Timer Options:** Press and hold the **Timer Options** key for 5 seconds.
- **Capture Mode:** Press and hold the * and **2** keys for 5 seconds.
- **Test Mode:** Press and hold the * and **2** and **#** keys for 5 seconds.
- **Module Information:** Press ? or press and hold the * and **#** keys for 5 seconds.
- **"Magic Key" Help** - Press and hold the ? key for 5 seconds or press

"Magic Key" Sequences for Monitor + 2-Fader Module

The list of "Magic Key" sequences for the Standard Monitor Module are:

- **IP Address Book:** Press and hold the * (**star**), **4** & **7** keys on the keypad for 5 seconds. (That's *+I+P.) Press the SoftKnobs as prompted to edit , save, reboot or Exit. Be sure to Save and Reboot after making any changes to this page.
- **Clock & Timer Options:** Press and hold the **Timer Options** key for 5 seconds.
- **Capture Mode:** Press and hold the * (**star**) & **2**

keys on the keypad for 5 seconds. (That's ***+C**.) Press **#** to perform the capture sequence and exit Capture Mode.

- **Module Information:** Press and hold the ***** (**star**) & **#** (**pound**) keys on the keypad for 5 seconds to check status of installed software and fader firmware. Press and hold the ***** (**star**) & **#** (**pound**) keys again to exit.
- **Test Mode:** Not yet available with this module. If you end up here accidentally, press 0 to exit Test Mode.

Source-Specific Channel Controls

Some fader functions change their behavior to suit the type of source assigned to the fader. A Guest Mic input has unique functions different from those of a Codec input, and so forth. In this section we'll explain the channel functions unique to each type of source input.

Control Room Operator Mic Channel Operation

The Control Room Operator microphone is the board operator's mic. It's always located in the Control Room, so activating a channel designated as the CR Operator mic affects CR monitor speaker (Monitor 1) and Preview speaker muting.

When the board operator pushes a **Talkback** key, all output bus assignments for the Control Room Operator microphone are temporarily muted, while his mic's audio is routed to the requested **Talkback** destination. Releasing the button returns the channel outputs to normal. (Pushing your own **Talkback** key does nothing.)

Pressing the channel **ON** key for the CR Operator Mic while the channel is already on will mute the channel until the button is released, acting as a "cough" function for the board operator. On-air status and speaker mutes are unaffected by this action. The CR Operator microphone channel will mute the CR Monitors (Monitor 1) and the Preview speakers whenever the channel is **On**, or if **Preview** or **Record Mode Engage** keys are selected.

Producer Microphone Channel Operation

The Producer's microphone is meant to be used at

a position within the Control Room where a morning show or talk show producer would normally sit. This mic type mimics the operation of the Control Room mic described above, but does not include the "cough" function; also, a Producer mic can use Talkback to talk to the board op, but cannot talk directly to the Monitor 2 talkback channel.

Control Room Guest Microphone Channel Operation

There are often microphones in the Control Room other than the board operator's; i.e., an in-studio guest wing, or perhaps an announcer located physically near the board op. These microphones also control the muting of the Control Room monitor speakers.

The Studio 1 monitor speakers and Preview speakers will mute when this channel is turned on, or when **Preview** or **Record Mode** are selected. Control Room Guest mics can be turned on and off remotely, and provide on/off status to a remote logic device. **Remote Talk** and **Remote Mute** functions are also provided, and can be activated using a remote On/Off/Talk/Mute panel.

Remote Talk lets talent and guests communicate with the board operator. When **Talk** is remotely activated on a CR Guest mic channel, outputs to program buses for that channel are muted and the mic audio is fed to the Talkback bus. While this is active, the Status Symbol on the guest's fader strip displays a **T** icon. When the user stops talking, the channel returns to normal. The operator can then reply using the fader's **Talkback** key.

When the **Remote Mute** function is activated, the Status Symbol displays **M**, and all the channel outputs are muted until the command is released.

Control Room Guest Microphone channels will mute the Control Room speakers and the Preview speakers whenever the channel is **ON**, or if **Preview** or **Record** keys are selected. If only the **Phone** key is selected, the Control Room speakers will mute independently, leaving the Preview speakers un-muted.

Finally, Control Room Guest Microphone channels have provisions for an individual Headphone feed. This

is especially useful for talent and guests in the same room as the board operator; their headphone feeds will all monitor the audio selected on the **Monitor 2** selector, but the board op can communicate with each person privately using **Talkback** key on their fader strip.

Studio Microphone Channel Operation

The third type of mic channel is a Studio Microphone. This mic is typically located in a location separate from the control room — perhaps a voice-over booth, a talk studio separated by glass, or a news booth.

Logic for Studio Microphone channels is identical to that of the Control Room Guest Microphone channel. Studio Microphone channels can be turned on and off remotely and provide on/off status to a remote logic device. **Remote Talk** and **Remote Mute** functions are provided for use with a remote On/Off/Talk/Mute panel.

Remote Talk lets talent and guests communicate with the board op. When **Talk** is remotely activated, outputs to program buses for that channel are muted and the source audio is fed to the **Talkback** bus. While active, the **Talkback** key is lit and the Status Symbol displays **TALK**. When the user stops talking, the channel returns to its previous state, and its **Talkback** key flashes for three seconds, alerting the board op to the guest who spoke to him, and enabling reply via the **Talkback** key.

When **Remote Mute** is activated, the Status Symbol will display **MUTE**, all channel outputs are muted until the key is released, and the channel is again active.

The **Monitor-2** speakers mute when a Studio Microphone channel is turned on, or if it is assigned to the **Program-4/Record** bus.

The Studio Microphone channel can be associated with an individual Headphone feed. All Studio Microphone-associated feeds will monitor the audio selected on the **Monitor 2** selector, but the board op can communicate privately using the **Talkback** function.

Line Channel Operation

Line-level devices like CD players, tape players, etc.,

use the Line Channel profile. The Line Channel is stereo, but the user can change the input mode to mono, left only or right only by using the **Pan & Mode** key in the Master Module's **Channel Options** section.

Line channels have a variety of remote logic functions available at the GPIO interface. **ON** and **OFF** keys can be remotely controlled, as well as the **Preview** key. Each function has a corresponding lamp driver.

A **Reset** function is provided to remotely turn the channel **OFF** while suppressing the **Stop** command, useful for allowing certain types of tape machines to re-cue. You'll also find a **Ready** command which will remotely illuminate the **OFF** lamp on the Element channel and activate the GPIO **OFF** lamp driver, allowing source equipment to signal the operator with either a steady-state **OFF** button (indicating source ready) or a flashing **OFF** button (indicating source next). Refer to the GPIO Node User's Manual for information on interfacing to the GPIO's inputs and outputs.

Phone Channel Operation

The Phone Channel profile is used, naturally, for telephone hybrid audio sources. Each Phone Channel has its own discrete Feed-to-Source mix-minus output.

Each Element can accommodate as many unique, automatically-generated mix-minus feeds as it has faders. If the Feed-to-Source mode is set to "Auto" (the most common option - see **Chapter 3: Working with Sources** for the section entitled "Source Profile Options"), phone callers hear the output of the **Program-1** bus, minus himself, when the channels they're assigned to are **ON**. When the caller's channel is **OFF**, their channel's **Talkback** key is lit and they hear the Board Operator's mic routed to their **Talkback** feed.

When a Phone Channel has been assigned to an Element fader, the Status Symbol display located above the channel name will display an icon to show the board operator what is being fed to the caller.

Phone feed-to-source outputs can also be locked to backfeed only **PGM-1**, **PGM-2**, **PGM-3** or **PGM-4**, us-

ing the options provided when constructing the Source Profile for your hybrid. This automatic switching mode makes it very easy to prep callers and then seamlessly put them on the air with a minimum of button pushes. (See Chapter 3).

Channels configured for Phone sources can be turned on and off remotely, and will provide on/off status to a remote logic device. **Remote Preview** is also provided, as are lamp drivers for **On**, **Off** and **Preview**. **Start** and **Stop** pulses can be sent when the channel is turned on or off, respectively. See **Chapter 4: Configuring GPIO** for information interfacing to GPIO inputs and outputs.

Codec Channel Operation

The Codec Channel is used for codec sources. Like the Phone Channel, each codec source is brought up on its own channel, and an individual Feed-to-Source (mix minus) output is provided for each codec. Codec Channels can be turned on and off remotely and provide on/off status to a remote logic device. **Remote Talk** and **Remote Mute** are also provided, allowing talent to take control using their own On/Off/Mute/Talk panels.

Talk enables remote talent to communicate with the board op using the **Talkback** bus. When **Talk** is activated, all outputs for that channel are muted and the source audio is fed to the **Talkback** bus; the channel's **Talkback** key lights, and its Status Symbol displays **T**. When the user stops talking, the channel returns to normal, and its **Talkback** key flashes for three seconds, alerting the board operator to the guest who spoke to him, and enabling him to reply using the **Talkback** key.

When the remote mute function is activated, the Status Symbol displays **M**, and all the channel outputs are muted until the command is released.

The mix-minus output normally feeds **Program-1** audio to the remote, but can be switched to **Program-2**. The Feed-to-Source output on a Codec Channel is a dual mono output, occupying both sides of the stereo pair. The Left output is normally used for remote talent's headphone feed, and is interrupted by **Talkback** audio when the board op talks to the remote. The Right output

sends uninterrupted program audio (without talkback) for use as a PA feed.

What's Next

One of Element's most powerful features is the ability to instantly reconfigure the entire surface for different show types. All fader assignments, monitoring preferences and other console settings that may be related to a specific show or function are easily "recalled" by your operator.

Join us in Chapter Six to learn how to set up and use Show Profiles. 🔄

*Capital budget
may you never decrease, for
we need new test gear.*

Chapter Six:

Show Profiles

If you've already read **Chapter 3: Working With Sources** you already have a good understanding of how Source Profiles are essential to Element operation.

In the same way that Source Profiles allow you to pre-determine how an individual channel is configured when a source is loaded, Show Profiles let you build configuration files that can be loaded to determine how the entire Element behaves, which sources are loaded, and what channels they appear on.

By assembling sets of Show Profiles, each user or show can have the board set up his or her favorite way — sources placed where they're most useful, monitors set to the appropriate feed, headphones conforming to personal preference. Or, you can use Show Profiles to define different types of broadcasts — one for the morning show, one for talk segments, one for musical guest interviews, one for unattended operation — that need only to be loaded to instantly reconfigure the board for use with a different situation.

Creating A Show Profile

Build A Show

Element's Web interface, which you've used to construct Source Profiles, is also used to help build Show Profiles, so make sure a computer with a Web browser is connected to your Livewire network within easy reach.

Your Element is shipped from the factory with a default Show Profile. This loads the first time you turn on your Element; it provides the “template” you'll use to construct custom Show Profiles. You've no doubt been exploring your Element, so you might want to reload the Default Show Profile using **Show Profiles** key located on Element's Master Module to make sure you're in “ready mode.”

The first step in building a Show Profile is to set up Element using the Channel Options, Monitor Options and other board options as described in **Chapter 5: Element Operations**. Get started by assigning a source to each Element fader using the **Options** keys at the top of each channel.

Reminder: You can speed the setup process by “Channel Jumping” while using the Options menus.

For example, to quickly assign sources, select the **Options** key on Channel 1 and choose **Source** from the Channel Options menu. Use the Soft Knobs, Control Knob or Nav Keys to select a source from the list; “take” the source and then press the **Options** key on Channel 2. You'll see the indicator at the top of the Channel Options screen change to read **Channel 02** to confirm that you're now programming Channel 2.

Repeat the procedure until you've programmed all your channels. You can now choose other Channel Options to configure using the same method.

After you've assigned a source for each fader, you can configure the rest of the Channel Options:

- Equalization,
- Pan / Balance,
- Aux Sends, and
- Feed to Source.

When you've configured all Channel Options, continue on and make monitor and headphone selections and adjust Aux Send / Aux Return settings if necessary, since these are all saved in Show Profiles as well.

When you've got the board configured to your satisfaction, proceed to the next section.

Capture It!

It's now time to save your Element configuration.

Enter Element's IP address in your Web browser. When the Main Menu appears, choose “Configuration” under the “Sources & Profiles” heading on the sidebar menu. This is where you'll come whenever you need to capture, construct or administer a Show Profile.

Under the Show Profiles list, you'll then find four options:

- » **Default Show Profile.** This is the “starter” profile that comes with Element. If you wish, you can overwrite this with your preferred default options; otherwise, consider it as “return to zero” configuration option, for use in returning Element to a “blank slate” condition.
- » **New Show Profile.** Choose this option when you want to construct an entire Show Profile completely from scratch.
- » **Capture Show Profile.** Takes a “snapshot” of the current board state and saves it for recall. This is the option we'll use in just a moment.

You've already set up your Element, so now you can just “capture” your settings for further use. Choose **Capture Show Profile** from the menu. You'll be prompted to give your new profile a unique name; after you do, it'll be added to the list of available profiles. Voila! You've just created and saved a Show Profile, which can now be recalled for use whenever you wish.

Note: To avoid accumulating 10⁶ show profiles, your operators cannot arbitrarily capture their own show profiles. This intentionally controlled by using the process described above and by assigning the task to an intelligent and responsible person such as the one reading this manual.

However, there may be a few more options you'd like to tweak — some options not accessible from Element itself. Let's go a little deeper into Show Profiles to find out exactly what's available to you.

Suggestion: As part of Element training, show your talent how to use the Channel Options and Monitor Options menus (discussed in Chapter 5) to assign sources and set monitor options. Then, let them set up the board exactly the way they want it, then use the Capture command to save their work. This way, talent gets the satisfaction of personalizing their own Element configuration — and saves you the work!

Show Profile Options

Although the ability to create Show Profiles using Element's “capture” function is powerful, there are more options available exclusively via the Element Web interface. You will probably find that a combination of console setup, capture and Show Profile edit works best.

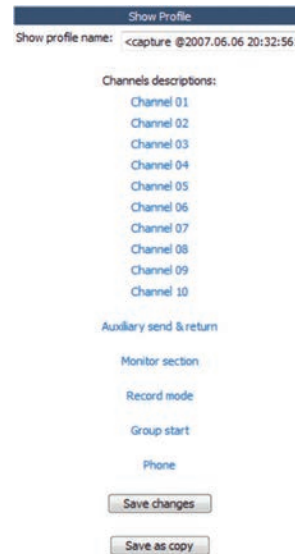


Figure 6-1: Show Profile Settings Menu

In the last section, we showed you how to capture the current configuration of your Element, easily creating a Show Profile, which was immediately added to the Show Profiles list.

Now, click on that newly created profile. It's probably named something like “Capture 2009-2-12 0:800” — the date and time the capture was made.

You'll see the menu shown in Figure 6-1. Notice that there is an entry for each of your Element's faders, as well as a link for :

- **Auxiliary Send & Return**
- **Monitor Section**
- **Record Mode**
- **Group Start**
- **Phone.**

We will now look at these in detail.

The Channel Description Screen

Click on any of the **Channel** links to examine the settings for a fader. Many of the options will seem familiar to you; you've seen them before, during Source Profile setup.

Remember that these settings are saved with the Show Profile, not the Source Profile we discussed in the previous chapter. In the case of a Channel, these settings apply only to one fader for one specific Show Profile. Settings that are intended to be global in nature should be established in the Source Profile - that way they will apply to ANY fader to which the source is applied.

Let's look at these options one by one; notice as we go that the fields match the choices you made for this channel, using Element's **Options** menus, prior to capturing the Show Profile.

Note: in addition to "active" options – choices that are actively made to Element settings when loading a new Show Profile – there is also a "passive" option for many items: **Retain Source Setting**. Choosing **Retain** allows the setting for this option to "cascade" from the Source Profile attached to the source loaded on this channel.

For example, you've set a Show Profile to load the Control Room Host mic on Channel 1. You specified an EQ boost of 2 dB @ 1200 Hz in the Source Profile for the Control Room Host mic; checking the **Retain Source Setting** option here in the Channel Description Screen allows that previously-defined EQ setting to "ride along" when the source is loaded – without your having to specify it again.

Channel Description Section

- **SOURCE ID:** The name of the source you assigned to this fader. You can change the source using the drop-down box.
- **FEED TO SOURCE MODE:** Specify **PGM-1/2/3/4**, **AUX SEND A/B/C/D** or **AUTO mix-minus** for this source, or **Retain Source Setting**. Choosing **Auto** for any phone source feeds the caller **PGM-1 minus** when the fader is **On**, and **Phone (PGM-4 pre-fader)** when the fader is **Off**.
- **AUTO-START TIMER:** Determines whether turning this fader on will start/reset the Event Timer. You can **Enable**, **Disable** or **Retain Source Setting**.
- **SIGNAL MODE:** Choose from **Stereo**, **Left** (left channel fed to both sides), **Right** (right channel fed to both sides), **Sum** (sum L+R to mono and feed to both sides) or **Retain Source Setting**.
- **SIGNAL MODE LOCK:** **Unlock** or **Lock** the talent's ability to change the Signal Mode, or **Retain Source Setting**.
- **FADER TRIM GAIN:** Adjusts signal gain just before the fader if required. Specify a value in the range of +/- 25 dB or **Retain Source Setting**.
- **FADER TRIM LOCK:** **Unlock** or **Lock** the talent's ability to change the Fader Trim, or **Retain Source Setting**.
- **PANORAMA POSITION:** Use Pan/Balance adjustment for this source, or **Retain Source Setting**.
- **PHASE:** Adjust for phase errors. May be set to **Normal**, **Invert Left**, **Invert Right**, **Invert Left And Right**, or **Retain Source Setting**.
- **EQ ACTIVE:** Make EQ **Active** for this fader/source combo, **Bypass** it, or **Retain Source Setting**.
- **EQ HIGH MODE:** Switches high-frequency EQ mode between **Shelf** and **Bandpass** (peak), or **Retain Source Setting**.
- **EQ HIGH FREQUENCY:** You can specify the top of the High Frequency Shelf, or the middle frequency of the Bandpass filter (depending upon which mode was chosen for EQ High Mode), or **Retain Source Setting**.
- **EQ MID FREQUENCY / EQ LOW FREQUENCY:** Choose the middle frequency of the Low and Middle EQ bands, or **Retain Source Setting**.

- **EQ HIGH GAIN / EQ MID GAIN / EQ LOW GAIN:** dial in boost or cut for the three EQ bands, or **Retain Source Setting**.

Note: For details on Element EQ operations, please refer to **Chapter 3: Working With Sources**

- **ASSIGN TO PGM1/2/3/4 and AUX A /B/C/D:** Checking **ON** for any of these buses assigns the fader to that bus when the Show Profile is loaded. You can also choose **OFF** or **Retain Source Settings**.
- **AUX A / AUX B / AUX C / AUX D PRE/POST FADER:** Allows you to send this fader's source to the specified Aux Send bus either **Pre-Fader** or **Post-Fader**, or **Retain Source Settings**.
- **AUX SEND A/B/C/D GAIN:** Turn this channel's feed to the specified Aux Send bus **Off**, specify up to 10 dB of boost or 25 dB of cut, or **Retain Source Settings**.
- **NOISE GATE STATUS:** Turns the Noise Gate in the Omnia Dynamics Processing on and off. Specify **Active** or **Bypass**, or choose **Retain Source Setting**. (Only applies to Mic sources.)
- **COMPRESSOR STATUS:** Turns the compressor in the Omnia Dynamics Processing on and off. Specify **Active** or **Bypass**, or choose **Retain Source Setting**. (Only applies to Mic sources.)
- **DE-ESSER STATUS:** Turns the de-essing function in the Omnia Dynamics Processing on and off. Specify **Active** or **Bypass**, or choose **Retain Source Setting**. (Only applies to Mic sources.)
- **NOISE GATE THRESHOLD:** Determines the point at which the Noise Gate will operate (if set to **Active**). Adjustment range is between 0dB and -50dB, or **Retain Source Settings**.
- **NOISE GATE DEPTH:** Sets the amount of noise reduction that will be applied to the mic audio if the noise gate is set to **Active** and the Noise Gate Threshold is reached. Adjustment range is between 0dB and -30 dB, or **Retain Source Settings**.
- **COMPRESSOR THRESHOLD:** Determines the point at which the Compressor will operate (if set to **Active**). Adjustment range is between 0dB and -30dB, or **Retain Source Settings**.
- **COMPRESSOR RATIO:** Sets the amount of compression that will be applied to the mic audio. Adjustment range is between 1:1 and 16:1, or **Retain Source Settings**.
- **DE-ESSER THRESHOLD:** Determines the point at which the Compressor will operate (if set to **Active**). Adjustment range is between 0dB and -20dB, or **Retain Source Settings**.
- **DE-ESSER RATIO:** Sets how aggressively the de-esser will remove sibilance from the mic audio. Adjustment range is between 1:1 and 8:1, or **Retain Source Settings**.
- **COMPRESSOR MODE:** Change the voice compressor between **Freeze** and **No Freeze** modes, or **Retain Source Settings**.
- **POST-PROCESSING TRIM GAIN:** Specify a value in the range of +/-20 dB that will be applied after the processing block. This may compensate for processing gain losses. You may also choose to **Retain Source Setting**.
- **BACKWARD FEED DIM GAIN:** Set how much the program audio being fed back to this source will be dimmed when the source is being talked to using the **Talkback** feature. Adjustment range is 0dB to -30dB, or **Retain Existing Setting**. Setting this to **OFF** will mute the program audio backfeed during Talkback,
- **CHANNEL ON/OFF STATUS:** Allows you to turn fader **On** or **Off** when the Show Profile is loaded.

- **CONTROL LOCK MAP:** Place a check mark in any of these boxes to keep the board op from changing the selections for this fader's bus assignments, On/Off state, fader position and several other parameters.

About Channel Lock and Fader Operation:

Say that your station runs syndicated programming overnight, and you want to eliminate the possibility that the feed could be inadvertently disrupted. Choose **Lock** for the channel the feed is assigned to, and the channel cannot be turned off, or bus assignment changed, until the channel is unlocked.

When you load a Show Profile which specifies a **Locked** fader, the gain value is locked to the position of the fader at the moment the Show Profile is loaded.

When you **Unlock** the fader using the Channel Options menu, the fader will resume working normally from the current position. You can move it and lock again in a different position if you wish.

If the fader has been moved, the first touch after **Unlocking** immediately resets the gain to the fader's current position.

- **GROUP START:** Specify whether this fader is a **Master, Slave** or **Independent**. This setting is tied to those displayed in the Show Profile Group Start Screen; a change made here will apply on the Group Start Screen, and vice-versa. (For information on the Group Start Function, please refer to the Group Start Screen description later in this chapter.
- **MOTOR FADER POSITION:** Motorized Element faders can be set to assume a predefined position when a Show Profile is loaded. Choose **Off** to specify a setting of -∞, **Use** to specify a level to use (from -73 dB to +10 dB), or **Retain Existing Setting**, which will cause the motor fader to make no changes to the position the fader was at prior to loading the Show Profile.

Individual Headphones Section

Note: These controls apply ONLY IF:

- The loaded source is a Mic-type source.
- The loaded source has an individual headphone feed associated with it.
- The position at which the mic is installed also has an Element accessory panel that allows talent to select their own headphone feeds (such as the one shown in Figure 6-2).



Figure 6-2: an Element accessory panel with headphone selector

- **CURRENT SOURCE:** The source currently specified for monitoring in the Monitors page of the Show Profile.
- **SOURCE FOR PRESET 1:** Specify the source that will load when the accessory panel's **Ext 1** key is pressed.
- **SOURCE FOR PRESET 2:** Specify the source that will load when the accessory panel's **Ext 2** key is pressed.
- **HEADPHONES MASTER GAIN:** Specify the initial amount of gain that the Individual Headphone Feed will have when the Show Profile loads. Turn then **Off** or **Use** up to 85 dB of cut.
- **TALKBACK START VOLUME LOW LIMIT:** Specify a minimum gain value for talkback (-72 to +10 dB. This prevents talent from "turning off" headphones when talkback is present and this setting is active.

Record Mode

- **PROGRAM 1 / 2 / 3 / 4 Record:** Allows automatic BUS settings for the channel - **Assign, Remove** or **No Change** when Record Mode is active.
- **ON/OFF:** Disables the Channel **On/Off** button function or **No Change** when Record Mode is active

Finishing Up...

Finally, there are two more controls at the very bottom of the screen:

- **SAVE CHANGES** button (also found at the top of the screen) applies any changes made to the current Channel Description. If you don't click this button, your changes won't be saved!
- **BACK TO SHOW PROFILE** link takes you back to the Show Profile Settings menu.

The Auxiliary Send And Return Description Screen

Just as the Show Profile Channel Description screens mirror Element's **Channel Options** menus, the Auxiliary Send Description Screen captures the global Aux Send settings that can be set using the **Global Options Sends & Returns Key** located on the Master Module.

Note: Instead of the **Retain Source Settings** option found in the Channel Descriptions pages, the Auxiliary Send Descriptions Screen features a new option: **Retain Existing Settings**. Using this option with any of the Aux Send/Return settings allows the Show Profile to be loaded without disturbing the Aux Send/Return master settings in use by the board operator.

From the Show Profile Settings web page, choose the **Auxiliary Send/Return Data** link. You'll find the following options:

- **Aux Send A / B / C / D Master Gain:** Selecting **Off** turns off master gain adjustment for each **Aux Send's** outbound feed. Select **Use** and enter a gain value between -25 dB and 10 dB to trim overall gain if desired, or select **Retain Existing Setting**.
- **Aux Send A / B / C / D On/Off Status:** Choose **Off** to turn the selected Aux Send 1 off completely, **On** to turn it on, or **Retain Existing Setting**.
- **Aux Return A / B Master Gain:** Selecting **Off** turns off master gain adjustment for the selected Aux Return bus. Select **Use** and enter a gain value between -25 dB and 10 db to trim overall return gain if desired, or select **Retain Existing Setting**.
- **Aux Return A / B On/Off Status:** Choose **Off** to turn the selected Aux Return off completely, **On** to

turn it on, or **Retain Existing Setting**.

- **Aux Return A / B Signal Mode:** Choose from **Stereo, Left** (left channel fed to both sides), **Right** (right channel fed to both sides), **Sum** (sum L+R to mono and feed to both sides) or **Retain Existing Setting**.
- **Aux Return A / B Panorama Setting:** Trim Pan/Balance for the selected Aux Return, or **Retain Existing Setting**.
- **Aux Return A / B Assign to PGM1 / PGM2 / PGM3 / PGM4:** Choose **On** to fold the selected Aux Return into any of the four PGM buses, or choose **Retain Existing Setting**.
- **Aux A / B Source ID:** If this drop-down box looks familiar, that's because it's just like the ones you used earlier to construct Source Profiles and map I/O to Axia Audio Nodes. Click in the box and select the audio device that will be providing source audio for the Aux 1 or Aux 2 Return.
- **Save Changes** button applies any changes made to the Auxiliary Send Description and returns you to the Show Profile Settings menu.
- **Back to Show Profile** link takes you back to Show Profile Settings without saving changes.

Monitor Section Screen

The Monitor Section Data screen captures the Monitor settings found in Element's **Monitor Options** menus. Since you're working on a "captured" Show Profile, this page will, of course, mirror the choices you made when you set up Element in the beginning of this chapter.

From the Show Profile Settings web page, choose the **Monitor Section Data** link. You'll find the page divided into four sections: general options, Control Room Monitor options, Control Room Headphone options, and Studio Monitor options.

General Monitor Options

Show profile 'MORNING SHOW', General Monitor Setting

Timer mode: Manual
 Auto-reset
 Auto-add

Show Tenths on: No timers
 Down timer
 Up timer
 Both timers

Preview interlock mode: Disabled
 Enabled

Switched meter source select: Program 4
 Monitor1 / Preview

Program 3 Meter input:

Preview speaker master gain ("volume") (-85 ... 0 dB): Off
 Use:
 Retain existing setting

Source ID for EXTERNAL preview:

Talkback gain (-30 ... 10 dB): Off
 Use:
 Retain existing setting

Feed to Source Sum Gain (-6 ... -3 dB):

GPIO channel for external profanity delay:

GPIO channel for Up Timer control:

GPIO channel for Down Timer control:

Figure 6-3: Show Profile - Monitor Settings

- **TIMER MODE:** Lets you decide globally how the onscreen Count Up (event) timer will behave when this profile is loaded:
 - » Choose **Manual** to start, stop and reset the timer by hand using the controls displayed when the **Timer Options** key is pressed.
 - » Choose **Auto-Reset** and the timer will automatically reset to zero and begin counting whenever a fader is turned **On**.
 - » Choose **Auto-Add** to have the timer count up when a fader is turned **On** and stop counting when that source is turned **Off**. In this mode, the timer will not reset to zero when it is restarted.
- **SHOW TENTHS ON:** Allows you to set the Count-down and Count Up timers to show or hide tenths of a second displays. Choices are:
 - » **No Timers:** tenths of a second are hidden on both timers.
 - » **Down Timers:** tenths are shown only on Count-down timers.
 - » **Up Timers:** tenths are shown only on Count Up

timers.

» **Both Timers:** All timers display tenths of a second readouts.

- **PREVIEW INTERLOCK MODE:** If **Enable** is chosen, pressing any fader's **Preview** key causes any other, previously-lit **Preview** key to be extinguished, removing that source from **Preview**. The board operator can assign multiple faders to **Preview** by pushing and holding any lit **Preview** key while pushing other **Preview** keys to add or subtract. If **Disable** is chosen, each **Preview** key works like a press-on, press-off latching switch. Multiple faders can be assigned to **Preview** simply by pushing once; a second push cancels any individual **Preview** assignment.
- **SWITCHED METER SOURCE SELECT:** Choose whether the far-right on-screen meter bars will display levels for the **PROGRAM 4** bus or the source feeding the Control Room Monitors.
- **PROGRAM 3 METER INPUT:** Choose from **Program 3, Record, Phone, External 1, External 2**.
- **PREVIEW SPEAKER MASTER GAIN:** Lets you **Use** up to -85 dB of attenuation on the Control Room Preview speakers, turn gain adjustment **Off**, or **Retain Existing Setting**.
- **SOURCE ID FOR EXTERNAL PREVIEW:** Element's External Preview allows other devices to route audio into the console's Preview system (speakers and operator headphones). Use this drop-down box to select the External Preview source for this Show Profile. Note that this must be enabled by a pin on the CR Monitor GPIO.

What's External Preview for? The word "External" refers here to any source not generated by the studio you're working in. Let's say you have an intercom system that you want to feed the console's Preview channel. To do this, you would take the GPO from the intercom and use it to gate open the external preview input, which would be fed by the intercom audio. *Voila!*

- **TALKBACK GAIN:** Use up to -30 dB attenuation or 10 dB gain on the contents of the **Talkback** bus. You can also turn gain adjustment **Off** or **Retain Existing Setting**.
- **FEED TO SOURCE SUM GAIN:** Specify a gain compensation (-6 to -3 dB) for mono-sum of talkback audio sources
- **GPIO CHANNEL FOR EXTERNAL PROFANITY DELAY:** Enter the Channel Number of the GPIO port connected to your station's Profanity Delay Unit. This assigns the **Delay** keys on the Element Master Module to control your external delay unit.
- **GPIO CHANNEL FOR UP TIMER CONTROL:** Enter the Channel Number of the GPIO port you wish to use for external control of your **UP timer**.
- **GPIO CHANNEL FOR DOWN TIMER CONTROL:** Enter the Channel Number of the GPIO port you wish to use for external control of your **DOWN timer**.

Additional Meters

| Additional Meters | |
|----------------------|----------------------------|
| Extra Meter 1 input: | Channel 04 backfeed ZEPHYR |
| Extra Meter 2 input: | Phone |
| Extra Meter 3 input: | External 1 |
| Extra Meter 4 input: | External 2 |
| Extra Meter 5 input: | V-Mixer 1 Sub Out |
| Extra Meter 6 input: | V-Mixer 2 Sub Out |

Figure 6-4: Show Profile - Additional Meters

This section allows to you specify the meter sources for the six “extra” meters that can optionally be displayed in the centre section of the Element display. The selections for each of the six meters are extensive and include:

- » all Program, Aux, External, Monitor busses, Phone, Record
- » all Fader Channel sources and backfeeds
- » all VMIX inputs, direct, sub and main outputs
- » all VMODE inputs and outputs

Sources for External 1 & 2 Section

| Sources for External 1 & 2 | |
|---------------------------------|----------|
| Source ID for EXTERNAL Input 1: | 92.9 AIR |
| Source ID for EXTERNAL Input 2: | HD1 |

Figure 6-5: Show Profile - External Sources

- **SOURCE ID FOR EXTERNAL INPUT 1:** Use the drop-down box to specify a source for Monitor 1, External Input 1.
- **SOURCE ID FOR EXTERNAL INPUT 2:** Use the drop-down box to specify a source for Monitor 1, External Input 2.

Control Room Monitor (Monitor 1) Options

| Control Room Monitor Options | |
|---|--|
| Source: | <input checked="" type="radio"/> PGM1 <input type="radio"/> PGM2 <input type="radio"/> PGM3 <input type="radio"/> PGM4 <input type="radio"/> AUX A <input type="radio"/> AUX B <input type="radio"/> AUX C <input type="radio"/> AUX D <input type="radio"/> EXT 1 <input type="radio"/> EXT 2 <input type="radio"/> no source |
| CR monitor master gain ("volume") (-85 ... 0 dB): | <input type="radio"/> Off <input type="radio"/> Use: <input type="text" value="0.0"/> <input checked="" type="radio"/> Retain existing setting |
| Signal mode: CR monitor: | <input checked="" type="radio"/> Stereo <input type="radio"/> Left <input type="radio"/> Right <input type="radio"/> Sum <input type="radio"/> Retain existing setting |
| CR monitor dim gain (-30 ... 0 dB): | <input type="radio"/> Off <input type="radio"/> Use: <input type="text" value="0.0"/> <input checked="" type="radio"/> Retain existing setting |

Figure 6-6: Show Profile - CR Monitor Options

- **MONITOR ASSIGNMENT:** Choose to load **PGM1**, **PGM2**, **PGM3**, **PGM4**, **AUX A**, **AUX B**, **AUX C**, **AUX D**, **EXT1**, **EXT 2** or **No Source** if you wish the Profile to be loaded with nothing assigned to Monitor 1.
- **CR MONITOR MASTER GAIN:** Allows you to **Use** as much as -85 dB of gain reduction on the audio signal sent to the Monitor 1 Speakers. You can also turn gain control **Off** or **Retain Existing Setting**.
- **SIGNAL MODE: CR MONITOR** lets you set the au-

dio feed to the Monitor 1 speakers to **Stereo, Left, Right, Sum** or **Retain Existing Setting**.

- **CR MONITOR DIM GAIN:** Specify the amount of volume by which the Monitor 1 speakers will dim when **Talk To...** or **Preview** is in use. **Use** as much as -30 dB of cut, turn the option **Off**, or **Retain Existing Setting**.
- **GPIO CHANNEL FOR CR MONITOR:** In this box, you assign Monitor 1 a channel number, effectively making it a “source” to which logic commands – to activate Mute, Dim, tally lights – can be associated. You’ll enter this channel number in the GPIO Set-up web page to assign a GPIO port for these logic functions. See Chapter 4, “GPIO Configuration,” for more information.

This option should typically be programmed with the same logic channel number for all show profiles on a single Element, since this function is primarily used for “on-air” warning light control. Most find it convenient to use the same channel number as the CR Monitor audio channel.

Control Room (Monitor 1) Headphone Options

- **MONITOR ASSIGNMENT:** Choose to load **PGM1, PGM2, PGM3, PGM4, AUX A, AUX B, AUX C, AUX D, EXT1, EXT2** or **No Source** if you wish the Profile to be loaded with nothing assigned to the board op’s headphones.
- **CR HEADPHONES MASTER GAIN:** Allows you to **Use** as much as 85 dB of gain reduction on the audio signal sent to the Control Room headphones. You can also turn gain control **Off** or **Retain Existing Setting**.
- **SIGNAL MODE: CR HEADPHONE:** Set the audio feed to the Control Room headphones to **Stereo, Left, Right, Sum** or **Retain Existing Setting**.
- **CR HEADPHONE INDEPENDENT:** Lets you choose whether, for this Show Profile, the Control Room headphones should be fed the same audio as the Monitor 1 Speakers (**Follow Monitors**) or if

the board op is allowed to select a source for headphones independent of the Monitor Speakers (**Use Headphone Source Select**). You may also **Retain Existing Setting**.

- **PREVIEW-IN-HEADPHONES MODE:** Choices are **Off, Normal, Auto** and **Retain Existing Setting**. If set to **Off**, sources assigned to the Preview bus will only be heard in the Control Room Preview speakers, leaving the board operator’s headphones to continuously monitor the selected source. In **Normal** mode, audio from the Preview bus will feed the board op’s headphones, *in stereo*, whenever **Preview** is active, interrupting the selected source. **Auto** mode sums Preview audio to mono and feeds it to the *right headphone*; the selected source audio is also summed to

Control Room Headphones Options

Source: PGM1
 PGM2
 PGM3
 PGM4
 AUX A
 AUX B
 AUX C
 AUX D
 EXT 1
 EXT 2
 no source

CR headphones master gain ("volume") (-85 ... 0 dB):
 Off
 Use:
 Retain existing setting

Signal mode: CR headphones:
 Stereo
 Left
 Right
 Sum
 Retain existing setting

CR headphones independent:
 Follow monitors
 Use headphones source select
 Retain existing setting

Preview-in-headphones mode:
 Off
 Stereo
 Split
 Retain existing setting

CR headphones EQ active:
 Bypass
 Active
 Retain existing setting

CR headphones EQ high mode:
 Shelf
 Peak
 Retain existing setting

CR headphones EQ high frequency (1250 .. 20000Hz):
 Use: 16000
 Retain existing setting

CR headphones EQ mid frequency (125 .. 2000Hz):
 Use: 400
 Retain existing setting

CR headphones EQ low frequency (20 .. 320Hz):
 Use: 25
 Retain existing setting

CR headphones EQ high gain (-25 .. 15dB):
 Use: 0.0
 Retain existing setting

CR headphones EQ mid gain (-25 .. 15dB):
 Use: 0.0
 Retain existing setting

CR headphones EQ low gain (-25 .. 15dB):
 Use: 0.0
 Retain existing setting

Figure 6-7: Show Profile - CR Headphone Options

mono and fed to the *left headphone*.

- **CR HEADPHONE EQ ACTIVE:** Set headphone EQ for **Bypass**, **Active** or **Retain Existing Setting**.
- **CR HEADPHONE EQ HIGH MODE:** Switches high-frequency EQ model between **Shelf** and **Bandpass**, or **Retain Existing Setting**.
- **CR HEADPHONE EQ HIGH FREQUENCY:** You can specify the top of the High Frequency Shelf, or the middle frequency of the Bandpass filter (depending upon which model was chosen for EQ High Mode), or **Retain Existing Setting**.
- **CR HEADPHONE EQ MID FREQUENCY / EQ LOW FREQUENCY:** Choose the middle frequency of the Low and Middle EQ bands, or **Retain Existing Setting**.
- **CR HEADPHONE EQ HIGH GAIN / EQ MID GAIN / EQ LOW GAIN:** dial in boost or cut for the three EQ bands, or **Retain Existing Setting**.

Studio Monitor (Monitor 2) Options

- **MONITOR ASSIGNMENT:** Choose to load **PGM1**, **PGM2**, **PGM3**, **PGM4**, **AUX A**, **AUX B**, **AUX C**, **AUX D** or an **External** source to the Monitor 2 channel

| Studio Monitor Options | |
|---|---|
| Source: | <input type="radio"/> PGM1 <input type="radio"/> PGM2 <input type="radio"/> PGM3 <input type="radio"/> PGM4 <input type="radio"/> AUX A <input type="radio"/> AUX B <input type="radio"/> AUX C <input type="radio"/> AUX D <input type="radio"/> EXT <input checked="" type="radio"/> no source |
| Source ID for EXTERNAL Input: | <input type="text" value="92.9 AIR"/> |
| Studio monitor master gain ("volume") (-85 ... 0 dB): | <input type="radio"/> Off <input type="radio"/> Use: <input type="text" value="0.0"/> <input checked="" type="radio"/> Retain existing setting |
| Studio monitor dim gain (-30 ... 0 dB): | <input type="radio"/> Off <input type="radio"/> Use: <input type="text" value="0.0"/> <input checked="" type="radio"/> Retain existing setting |
| GPIO channel for studio monitor: | <input type="text" value="12016"/> |

Figure 6-8: Show Profile - Studio Monitor Options

when the Show Profile is loaded. You can also choose **No Source** if you wish the Profile to be loaded with nothing assigned to the Control Room monitor.

- **SOURCE ID FOR EXTERNAL INPUT:** Use this drop-down box to choose what source will be auditioned when **External** is chosen from the Studio 2 monitor assignment list.
- **STUDIO MONITOR MASTER GAIN:** Allows you to **Use** as much as -85 dB of gain reduction on the audio signal sent to the Monitor 2 Speakers. You can also turn gain control **Off** or **Retain Existing Setting**.
- **STUDIO MONITOR DIM GAIN:** Specify the amount of volume by which the Monitor 2 speakers will dim when **Talk To...** or **Preview** is in use. **Use** as much as -30 dB of cut, turn the option **Off**, or **Retain Existing Setting**.
- **GPIO CHANNEL FOR STUDIO MONITOR:** In this box, you assign Monitor 2 a channel number, effectively making it a “source” to which logic commands can be associated. You’ll enter this channel number in the GPIO Setup web page to assign a GPIO port for these logic functions. See Chapter 4, “GPIO Configuration,” for more information.

This option should typically be programmed with the same logic channel number for all show profiles on a single Element, since this function is primarily used for “on-air” warning light control.

Staying ahead of the game: You might not have a second studio controlled from your Element — but we still recommend that you program this option for each Show Profile. Why? The Studio Monitor logic has other functions, and works in conjunction with the Control Room Monitor logic. If you program it now, you won’t have to go back and do it later.

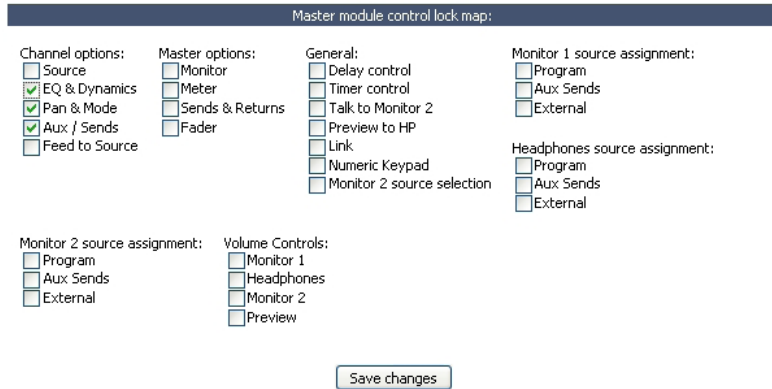


Figure 6-9: Show Profile - Control Locks

Master Module Control Lock Map

Element is a pretty powerful console — perhaps the most powerful and flexible your jocks have ever used. And that means that there are probably plenty of functions you’d rather they not have access to; things that could mess them up and result in the dreaded midnight phone call.

The Master Module Control Lock Map allows you to disable access to many Element functions to prevent settings from being tampered with. This can be done on a per-show basis, so remember that if you wish to disable access to a certain function globally, you must do so in every Show Profile.

The screen-shot in Figure 6-3 shows the wide range of options you can lock down. This includes EQ and voice dynamics, mix-minus settings, even things like Monitor and Headphone assignments (for particularly clueless members of the air staff).

Placing a check mark in any of these boxes means that the operator will *not* be able to modify the settings for that item which you’ve pre-loaded in the Show Profile.

Save and Exit

- **Save Changes** button applies any changes made to the Auxiliary Send Description and returns you to the Show Profile Settings menu.
- **Back to Show Profile** link takes you back to Show Profile Settings without saving changes.

Record Mode Screen

Element’s Record Mode helps talent quickly prepare to record a phone bit, interview or other program segment for later air. Any source assigned to the **Program-4 bus** automatically feeds the **Record** and **Phone** buses as well. Sources assigned to **Program-4/Record** will follow the **Record** options in their Source Profiles; the CR Monitor assignment automatically changes to **PGM-4**, and the bus assignment keys for channels

assigned to **Program-4** will flash when Record Mode is active.



Figure 6-10: Show Profile - Record Mode

Recording Tip: The Program-4 REC bus is active whether or not you choose to use Record Mode. Most users conveniently switch their monitoring but it is not necessary to enable Record Mode in order to obtain audio output from the Program-4 Record bus.

Record Mode Configuration

- **Record Mode Activation:** If **Disabled** is chosen, the board op will not be able to use **Record Mode** while this Show Profile is loaded. Choose **Enabled** to allow Record Mode to be used.
- **GPIO Channel for Recorder Control:** Enter the channel number of the GPIO port assigned to your chosen recording device. This device will automatically begin recording with the board op presses Element’s **Record Mode Engage** key. See Chapter 4: Configuring GPIO for a complete reference of Element GPIO functions.

Group Start Screen

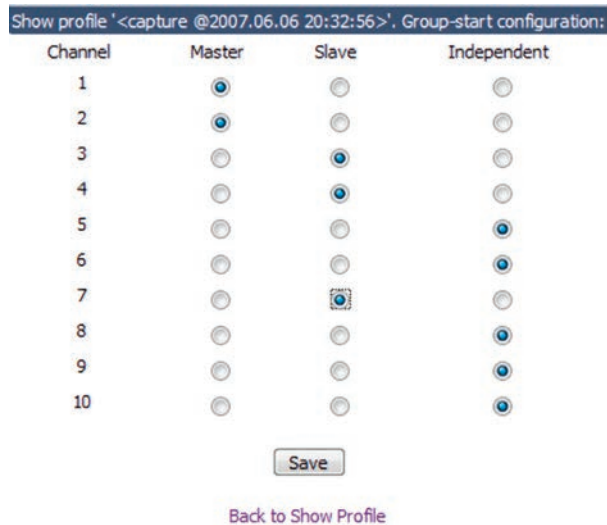


Figure 6-11: The Group Start assignment map

There may be times when you'd like to have a single keypress activate multiple faders for convenience' sake: interview shows with multiple guests, election coverage comprising multiple incoming remote lines, in-studio performances. Element's Group Start function lets you designate one or more faders as a Master Fader, and one or more as a Slave Fader. When a Master fader is turned **On** or **Off**, the Slaves turn **On** and **Off** as well.

Master of your domain: In the case that you have designated more than one fader as a Master, turning any of the Master faders **On** or **Off** will also operate any other Master faders, as well as any Slave faders.

Figure 6-4 illustrates how a Group Start map might look. The grid allows you to designate each fader on your console as either **Master**, **Slave** or **Independent** (normal operation).

Note that making a change in this screen also changes the value of the Group Start setting in the fader's Channel Options screen (described previously in this chapter), and vice-versa.

Phone Screen

The Phone screen is used when you're setting up a Telos TWOx12, Series 2101 or Nx12 talkshow system for use with Element. The options in the screen are detailed fully in **Appendix D: Working With Phone Hybrids**; please refer to that chapter for details on setup. If you do not have a Phone Module installed, this screen will be empty.

Save and Exit:

- **Save Changes** button applies any changes made to the Auxiliary Send Description and returns you to the Show Profile Settings menu.
- **Back to Show Profile** link takes you back to Show Profile Settings without saving changes.

What's Next

Chapter 7 explores the use of the powerful Virtual Mixer (VMIX) capabilities, which allow you to create custom mixes of networked sources and use them like you would a single audio source. We will also discuss VMODE which is a section that allows you to manipulate mono sources in many useful ways. Grab a cold one and let's dive in. 🍹

Chapter Seven:

Virtual Mixer (VMIX)

What is VMIX?

Virtual Mixer (or VMIX) is a cool feature present in every Element system whether used with a StudioEngine or PowerStation. In addition to the foreground mixing capabilities present on the Element console itself, there is a 40-input “virtual” mixer accessed via HTTP interface or PathfinderPC software. This mixer consists of 40 stereo input channels, a direct output for each channel, 8 submixer outputs, and one master out. The 40 channels are divided equally among the 8 subgroups providing 5 stereo channels in each subgroup mixer.

The various VMIX outputs described above will become sources to your Livewire network and they can be manipulated in the same manner as any other Livewire audio source. A VMIX source may be applied to an Element fader, assigned to a node destination or simply monitored by PathfinderPC.

The fundamental concepts of Livewire sources, destinations, inputs and outputs can be confusing to new users - especially as they apply to VMIX. Here is a review:

- Livewire sources are audio streams that are being delivered into your Livewire network.
- Livewire destinations can be physical outputs (that are connected to external device inputs) or virtual inputs to which Livewire audio streams are delivered.
- VMIX Inputs are actually Livewire destinations since they are virtual inputs to which Livewire streams are being delivered.
- VMIX outputs are Livewire Sources since they represent new Livewire streams that are being introduced into our Livewire network.

If you are having trouble with this concept, it may be helpful to think of the VMIXer as a standalone piece of hardware. If you visualize wiring an external line mixer to your network, the Livewire destinations would be con-

nected to the mixer inputs and your mixer outputs would be connected to node inputs. Your VMIX is “wired” in a very similar manner.

Constructing Virtual Mixes with VMIX

The VMIX main mix output provides a mix of all active inputs, up to the maximum of 40. Each submixer input includes an on/off setting, a gain setting, and automatic fade-up/fade-down time parameters. The VMIXer works completely independently of the Element surface and can be used without an Element if desired. In addition to static control of VMIX through its web pages, Axia’s PathfinderPC software can also be used to dynamically control VMIX and create mixing functions based on a variety of system-wide parameters.

StudioEngine VMIX Controls

In an Axia system, all audio processing occurs in the StudioEngine — the Element console itself does no audio processing. That’s why VMIX settings are found in the StudioEngine HTTP pages.

You may have noted that the Element HTTP pages may also have a VMIX section. This is the remnants of an earlier implementation of VMIX, wherein the control was shared between the Engine and the console. With Element 2.0 software, we have begun the process of transitioning to VMIX control on the StudioEngine side only, but controls are mirrored on the Element configuration pages to provide a smooth transition for users upgrading from earlier versions. This chapter may make reference to the earlier implementation for clarification reasons.

Even though the “V” in VMIX stands for “virtual”, you can in fact perform a certain amount of “hands-on” mixing. Although you don’t have physical control of the virtual faders or virtual **ON/OFF** switches, adjustments made to the VMIX take effect as soon as you apply them. While you may not wish want to operate an entire show this way, it’s valuable to know that VMIX changes saved “on the fly” will affect your output streams immediately.

In the HTTP pages of the StudioEngine, there is a

Virtual Mixer section and a **V-Mode** section (We'll get to the **V-Mode** portion later in this chapter). The portions of this page that display settings on a grey background are indicators only, not controls. Settings displayed on white backgrounds are controls, and can be adjusted.

At the top of the page, you can see the name of the Engine you are logged into. Below are eight submixers, each with five stereo inputs. All eight submixes are summed into the VMIX Main. You're probably already thinking that there are a lot of things you can do with this setup!

Figure 7-1 shows a portion of the VMIX setup found in the Studio Engine web pages. It shows the first of the eight Submixes (VMIX 1). Let's look at the controls and see what they do.

VMIX Main is the sum of all eight submixes. Unless you really need a stream that combines the audio outputs of all the submixes, you may leave this disabled — it doesn't need to be **Enabled** for the submixers to work. In Figure 7-1, the channel is **Disabled** (default setting). If you need to use this mix, verify that the Channel number assigned to it is a unique channel number (just as you would in configuring the channel numbers assigned to Audio Node streams). When enabled, you can use this

source anywhere in your network.

In most cases, the VMIX Subs are the only channels you will need to enable. Select the type of Livewire mode needed for the application (Live or Standard Stereo). Provide an appropriate unique channel number to generate and send a Multicast signal to the network. Only enable Submixes you intend to actively use; active submixes without any activity simply clutter up your network with empty streams and waste your StudioEngine's processing resources.

At the bottom of each of the eight submix sections is an **Apply** button. Any changes you make will be saved when this button is pressed. Be sure to save the changes for each submixer as they are configured.

Other controls for each of the Submixer's five input channels include:

- **Src Name:** Enter a user friendly name for the stream you want to assign to this input.
- **Channel:** Enter the unique channel number of your audio source.
- **In Stream Type:** In most cases this drop down will be set to **From Source**. If a source's Backfeed (unique feed or mix-minus audio) is desired as in input into the mixer, select **To Source**. (If this instruc-

| Virtual Mixer | | | | | | | | | |
|---------------|----------------|-----------|-------------|--|---|--------------------------------------|----------------|-------------|--|
| Src Name: | Channel | In Stream | Status/ | Enable: | Gain (dB): | Out Name: | Channel | Out Stream | Status/ |
| | (1..32766): | Type: | Audio: | | (-80.0..10.0) | | (1..32767): | Type: | Audio: |
| | | | | | | VMIX Main | 14319 | Disabled | <input type="checkbox"/> |
| | | | | | | <input type="button" value="Apply"/> | | | |
| | | | | | Submix 1: -80.0 | VMIX 1 Sub | 14320 | Live Stereo | OK <input checked="" type="checkbox"/> |
| 1-1 | Preview | 11113 | From source | OK <input type="checkbox"/> | <input type="radio"/> Off <input checked="" type="radio"/> On | -38.0 | VMIX 1 fader 1 | 14321 | Disabled |
| | | | | | Fade time: .5 .5 | (0.0..60.0 sec) | | | |
| 1-2 | Studio 2 Mic 4 | 1014 | From source | OK <input type="checkbox"/> | <input type="radio"/> Off <input checked="" type="radio"/> On | -33.3 | VMIX 1 fader 2 | 14322 | Disabled |
| | | | | | Fade time: .5 .5 | (0.0..60.0 sec) | | | |
| 1-3 | VMIX 6 fader 2 | 14352 | From source | OK <input type="checkbox"/> | <input type="radio"/> Off <input checked="" type="radio"/> On | -25.7 | VMIX 1 fader 3 | 14323 | Disabled |
| | | | | | Fade time: .5 .5 | (0.0..60.0 sec) | | | |
| 1-4 | TV | 1028 | From source | OK <input checked="" type="checkbox"/> | <input type="radio"/> Off <input checked="" type="radio"/> On | -14.7 | VMIX 1 fader 4 | 14324 | Disabled |
| | | | | | Fade time: .5 .5 | (0.0..60.0 sec) | | | |
| 1-5 | Pgm 1 | 12001 | From source | OK <input type="checkbox"/> | <input type="radio"/> Off <input checked="" type="radio"/> On | -6.7 | VMIX 1 fader 5 | 14325 | Disabled |
| | | | | | Fade time: .5 .5 | (0.0..60.0 sec) | | | |
| | | | | | | <input type="button" value="Apply"/> | | | |

Figure 7-1: Engine VMIX screen

tion is not clear, please review material in Chapter 3 on backfeeds and mix-minus earlier in this manual to understand what these terms mean.)

- **Status/Audio:** These are status fields; **OK** is shown for valid streams and **ERR** for invalid streams (usually, an invalid stream error indicates a duplicate or missing source - double-check your Channel Number entries). The **Audio** box provides a snapshot of the audio level with color indicator. Since this indicator is not Java-enabled, it is not dynamically updated. You will need to refresh your browser to observe changes in level.
- **Enable:** Turns the input channel **ON** or **OFF**; the boxes just below provide an option to set the “fade up” and “fade down” times.
- **Fade Time:** These two fields contain time values that control the rate in which the audio goes from OFF to ON and visa versa. If the source is off, gain is negative infinity (not adjustable, just a law of nature). When the source goes ON, the time in which the audio adjusts from OFF to ON (the gain value set in the first field) is the “Up time”. If the field is set to 1 second, the audio will “fade up” to the gain value in 1 second. If the field is set to 0, the audio will have no fade period and simply just turn on at the gain value specified. The second field controls the ON to OFF fade time. This function can be used to create cross fades between sources when PathfinderPC is dynamically making changes to the VMIX based on conditions met.
- **Gain:** You’ll find a Master gain setting for the Submix (the mix of all five inputs) at the top of this column, followed by individual gain settings for each input that establish the gain for the input when it is in the **ON** state.
- **Out Name:** This column shows the name of the stream as it will appear when viewed in source assignment boxes elsewhere on the network.
- **Channel (the 2nd instance of it):** Assigns a channel number to the VMIX output which is a Livewire source. Just as each audio source from an Audio Node and each mix and monitor feed from a StudioEngine must have a unique channel number, so do each of the VMIX sources that you want to make available to the network. In most cases only the Submix output

itself needs a unique channel number, but if you so desire, each VMIX input can also be sent back to the network as a unique source, post the ON/OFF and gain stage of the VMIX. Just provide a channel number to each “VMIX Fader” you’d like to send out.

- **Out Stream Type:** Set the stream type you want to provide to the network for each VMIX output (Live Stream, Standard Stream or Disabled) After you’ve given the Submix output a unique Channel number, enable it here. (Normally all of the VMIX “fader” channels remain “Disabled” unless you have other uses for them.)
- **Status/Audio:** An indicator field to tell you whether the stream is valid and audio is present. Note that if you have just enabled VMIX streams, you will need to click **Apply** to commit your changes. This will reload the browser page and refresh the Status fields.

What can you do with a VMIX?

Now that you know how to set up and enable VMIX, what might you do with it? Here are some examples.

A mix of sources to monitor

Some facilities may need to monitor one or more sources in addition to program audio, like the “squawk channel” some satellite feed providers use to relay announcements. If you wanted to monitor this “squawk” audio on your Preview speaker without taking up a fader assignment, you could create a mix of the “squawk” source and the Preview mix from the engine. The Submix Out would be the audio source that you would route to the Preview speaker.

Note: In this example, the “squawk” audio would not be muted if the CR Mic were turned on, as a normal Preview channel would be.

GPIO control of your VMIX

Imagine that you have a night jock that *should* monitor all four radio stations in your cluster. To help make sure this actually happens, you could send all four off-air signals as sources into a VMIX and take the output of its submix to a monitor. An Accessory Panel or external button wired to a GPIO port could provide a “press and hold” function to allow the jock to monitor the sources

momentarily. *This example is only possible with PathfinderPC control of VMIX.*

PathfinderPC Control of VMIX

PathfinderPC server can be used to “control” VMIX. How? There are two modes by which PathfinderPC can control VMIX.

First, as a background controller, PathfinderPC can monitor Livewire system parameters or receive commands from external devices like satellites, button panels, or automation systems and react to them by changing the state of VMIX **ON/OFF**, **Gain**, **Time Up**, and/or **Time Down** fields. This provides many different possibilities for facility automation, Intercom functions, or whatever else you might imagine. For example, the combo of PathfinderPC and VMIX could duplicate the function provided by other products that are controlling audio switching in many radio facilities. Refer to documentation on PathfinderPC for further information.

Secondly, an exciting new feature of PathfinderPC is VMIX Control. This is a software fader control option that is provided with PathfinderPC Pro. VMIX Control brings the operation of VMIX out of the background and provides a graphical user interface with software faders. Figure 7-2 shows an example of a VMIX control GUI.



Figure 7-2: PathfinderPC VMIX Control

VMIX Control enhances VMIX by providing real-time, foreground control of VMIXer parameters. It also allows us to monitor levels of streams associated with VMIX faders. VMIX Control is often used in applications such as a news workstation where you require only a few inputs.

About PathfinderPC and VMIX: There are several ways that PathfinderPC can be used for background control VMIX.

First, VMIX functions can be used both as qualifiers and actions in stack events. This means that a designer can select GPIO triggers, time based events, user button pushes, serial port commands, and other options and combinations of options to decide when to make changes to any fader in a VMIXER. The user can make a gain change based on these events, turn a channel off or on, and or adjust the fade times, giving complete control over the VMIXer based on any of the stacking events qualifiers.

Second, PathfinderPC provides an ACU protocol translator which uses the VMIX system to mimic hardware devices such as a Sine Systems ACU to a Prophet Automation System. In this way, a Prophet system can control the mixing capabilities of VMIX just as if they were ACU channels. In this scenario, each VMIX submixer becomes one 5 Channel ACU. GPIO hardware devices can also be mapped to the Channels within PathfinderPC and it will allow those triggers to pass through to Prophet if the associated audio channels are turned on just like the ACU. The PathfinderPC suite also includes a Bridge application that may be run on the Prophet system to convert the serial data to TCP, which can then be passed to multiple “clustered” PathfinderPC servers for redundancy.

Finally, PathfinderPC’s Software Authority protocol translator includes commands to control any VMIXer present on Element consoles in the system; any machine that can send user defined serial or TCP commands can also control and read VMIX functions through PathfinderPC.

Using these techniques VMIX can be used as a fully automated virtual mixer in the background of each Element. (See the PathfinderPC manual for the specific details on configuring PathfinderPC with VMIX.)

Manipulating Streams With VMODE

What does VMODE do?

As you know, audio processing in the modern world requires DSP. The StudioEngine provides the DSP for Axia IP-Audio networks.

You’ve probably noticed that nearly all audio within an Axia network travels as stereo Livewire streams. Audio Node inputs (with the exception of Mic Nodes) are

stereo, and so are Engine default sources. Most of the time, this is just what you need. But in some cases, an application surfaces that requires only one channel of an audio stream, or a mono sum. VMODE is an easy way to make this happen.

VMODE is an addition to the StudioEngine toolbox that addresses this requirement; its job is to help strip, sum, or compile a custom audio stream from other available streams in the network.

VMODE Controls

VMode, as shown in Figure 7-3, has the capacity for up to eight separate stream-manipulation operations. The controls are as follows:

- **Input Selector** contains a drop down menu that allows you to select from a range of sources for each VMODE input. You may choose from local StudioEngine sources including **PGM-1/2/3/4**, the **Record** bus, **Phone** bus, **Aux Send A/B/C/D**, **VMIX SUB 1/2/3/4/5/6/7/8**, and **VMIX MAIN**. You can also choose **External**, which then allows you to select any other network source by entering its channel number.
 - **Src Name** and **Channel** are active when the **Input Selector** described above is set to **External**. You may type any convenient title in the **Src Name** box to identify the source; the **Channel** column is where you would enter the channel number of the source you want to perform a VMODE operation upon.
 - **Stream Type** follows the conventions found elsewhere in this manual.
 - » Select **From Source** if you're using a normal source generated by studio equipment connected to the Axia network.
 - » Select **To Source** if you plan to use the specified stream as a backfeed (mix-minus) to a phone, codec or IFB channel.
 - » **Surround** is only used if the console is in Surround (5.1+2) mixing mode.
 - **Status** and **Audio** indicate the health of each particular channel.
 - » **Status** indicates **OK** to inform you that a stream is working normally.
 - » **Audio** shows a colored tally to indicate audio presence.
- **Audio Mode** is the magic box that transforms your stereo stream into something else. You may choose from any of the following options:
 - » **Pass Stereo:** Passes the Left and Right channels as is, without modification.
 - » **Upmix from L:** In Surround mixing mode, takes Left channel and creates 5.1 upmix. In Stereo mixing mode, creates mono sum from Left channel.
 - » **Upmix from R:** In Surround mixing mode, takes Right channel and creates 5.1 upmix. In Stereo mixing mode, creates mono sum from Right channel.
 - » **Upmix from L+R:** In Surround mixing mode, sums Left and Right channels and creates 5.1 upmix. In Stereo mixing mode, creates mono sum from both channels.
 - » **Upmix from stereo:** In Surround mixing mode, creates 5.1 upmix from stereo input. In Stereo mixing mode, passes Left and Right channels without modification.
 - » **Downmix from 5.1:** In Surround mixing mode, takes 5.1 Surround source and creates stereo downmix. In Stereo mixing mode, mutes audio (do not use).
 - » **Pass all:** In Surround mixing mode, passes 5.1 Surround input without modification. In Stereo mixing mode, passes Left and Right channels without modification.
 - » **Split L -6:** Stereo mixing mode only. Sums Left and Right channels, reduces gain of the sum by 6dB and places mix on Left output channel.
 - » **Split R -6:** Stereo mixing mode only. Sums Left and Right channels, reduces gain of the sum by 6dB and places mix on Right output channel.
 - » **Split L -3:** Stereo mixing mode only. Sums Left and Right channels, reduces gain of the sum by 3dB and places mix on Left output channel.
 - » **Split R -3:** Stereo mixing mode only. Sums Left and Right channels, reduces gain of the sum by

3dB and places mix on Right output channel.

The **Combine** options presented next are designed to work with a pair of inputs at a time. There are eight VMODE inputs (4 pairs). If you choose Combine L,L for the Audio Mode of the first output, the Left channel from that input (row 1) will be passed to the Left channel of the output, and the Left channel of the second input (row 2) will be passed to the Right channel of the output.

You could then Combine R,R on output 2, or pass stereo on output 1, and combine LR, 5.1 on output 2 — or make any other combination you like. The only limitation is that each output has access to only two of the 8 inputs, as grouped in pairs.

In Figure 7-3, Output channel 301 will have the Left channel from Aux Send A on the Left and Left channel from Aux Send B on the Right using the **Combine L,L** Audio Mode.

- » **Combine L,L:** Left channel of first VMIX input is sent to Left output channel, and Left channel of second VMIX input is sent to Right output channel.
- » **Combine L,R:** Left channel of first VMIX input is sent to Left output channel, and Right channel of second VMIX input is sent to Right output channel.
- » **Combine R,L:** Right channel of first VMIX input is sent to Left output channel, and Left channel of second VMIX input is sent to Right output channel.
- » **Combine R,R:** Right channel of first VMIX input is sent to Left output channel, and Right chan-

nel of second VMIX input is sent to Right output channel.

- » **Combine LR, 5.1:** Used in Surround mode to construct an eight-channel (5.1+Stereo) combined output. Takes Left and Right from first VMIX input and combines it with the 5.1 audio from the second VMIX input.
 - » **Combine 5.1, LR:** Same as above, but takes 5.1 audio from the first VMIX input and combines it with Left and Right from second VMIX input to create 5.1+Stereo combined output.
- **Out Name** shows the name of the VMODE output stream as it will appear on the Axia network. This cannot be changed.
 - **Channel** is the unique channel given to the stream so that it can be identified and used in the network. Be certain to replace the default channel numbers to avoid confusion.
 - **Out Stream Type: Choose from Live Stereo, Standard Stereo and Disabled.** Only enable VMODE streams you intend to actively use; active streams without any activity simply clutter up your network with empty streams and create needless extra work for your StudioEngine!
 - **Status/Audio:** Indicates stream health and audio level indicator as explained in the VMIX section.

| V-Mode | | | | | | | | | |
|-----------------|-----------|---------------------|-----------------|----------------|-------------|-------------------------------|------------------|----------------|--|
| Input Selector: | Src Name: | Channel (1..32766): | In Stream Type: | Status/ Audio: | Audio Mode: | Out Name: Channel (1..32767): | Out Stream Type: | Status/ Audio: | |
| PGM1 | PGM 1 | 20259 | From source | | Pass stereo | VMode 1 14368 | Standard Stereo | OK | |
| PHONE | Phone | 20260 | From source | | Pass stereo | VMode 2 14369 | Live Stereo | OK | |
| EXTERNAL | | 20261 | From source | | Pass stereo | VMode 3 14370 | Live Stereo | OK | |
| EXTERNAL | | 20262 | From source | | Pass stereo | VMode 4 14371 | Live Stereo | OK | |
| EXTERNAL | | 20263 | From source | | Pass stereo | VMode 5 14372 | Live Stereo | OK | |
| EXTERNAL | | 20264 | From source | | Pass stereo | VMode 6 14373 | Live Stereo | OK | |
| EXTERNAL | | 20265 | From source | | Pass stereo | VMode 7 14374 | Live Stereo | OK | |
| EXTERNAL | | 20266 | From source | | Pass stereo | VMode 8 14375 | Live Stereo | OK | |

Apply V-Mode settings

Figure 7-3: Engine VMODE section

VMODE Examples

Now that you know how to set up and enable VMODE, here are a few examples of how you might use it.

Create a mono stream.

Imagine you've got a satellite receiver connected to an Audio Node. Sometimes, the program content that interests you is received on only the Left channel — there is other content on the Right channel that you don't want to air! Using VMODE, you can split the L and R channels and create a new source using just the channel you want, like so:

1. Choose **External** in the **Input Selector** box.
2. Type the receiver's name in the **Src Name** box.
3. Enter the unique channel number of the receiver in the **Channel** box.
4. Leave **In Stream Type** set as **From Source**.
5. Choose **Upmix from L** in the **Audio Mode** box.
6. Enter a unique channel number in the Output **Channel** box.
7. Choose a stream type from the **Out Stream Type** box (you can choose **Standard** because this is not live audio).
8. Click the **Apply V-Mode Settings** button.

You've just created a mono source with only the content you want that can be routed wherever you like.

Create a Split Record feed with Gain Control

Element v2.x introduces a "split" record function that can be enabled in any devices' Source Profile; this allows you to send a sources' audio to one channel of the stereo **Record** bus. You'd like to use this split-recording for an interview with a host several guests, placing the host on the Left channel and all the other sources (guest mics, phone callers, etc.) on the Right channel. Plus, each source needs to have an independent gain stage separate from the on-air (**PGM-1**) mix. Complex yes; but with VMODE you can do it.

1. Using Element console controls, place the Host's mic into the **Aux Send A** bus, pre-fader (**ON PRE**).
2. Place each additional source to be recorded on the right channel into the **Aux Send B** bus, pre-fader.

3. Make certain that the **Aux Send A** and **Aux Send B** buses are **ON** and at a suitable gain level.
4. Now, within VMODE, choose an input pair and set their **Input Selector** boxes to **Aux Send A** and **Aux Send B**.
5. Set the **Audio Mode** of the first of the two **VMODE** inputs rows to **Combine L,L**.
6. Create a unique channel number and stream type for your new VMODE stream. This unique channel will contain the Left channel of **Aux Send A** on its Left output channel, and the Left channel of **Aux Send B** on its Right output channel.
7. Load your new VMODE stream to an Element fader and assign it to **PGM-4/Record**. Voila!

What's Next

You've learned about nearly all of Element's functions, learned how to set up Show and Source Profiles, configure Virtual Mixers, and more. Now, if you're ready to explore the final frontier, join us in Chapters 8, 9 and 10 for a look at Element, StudioEngine and PowerStation advanced settings. 🎧

The cup steams, sweet scent

wafting lightly in the air.

Mmmmm... it is Earl Grey.

Chapter Eight:

Advanced Element Controls

In Chapters 1 and 2, we covered the basics of setting up your Element when used with the StudioEngine or PowerStation. Those chapters were intended to get you up and running quickly. Now that you've read this far, you should consider yourself an advanced user! In keeping with your dawning guru status, it's time for a thorough look at all of the controls found in the Element configuration Web pages.

The HTTP interface to the Element is very similar whether you are using the Element with StudioEngine or PowerStation. The home page for the PowerStation has more options since this is an integrated product including the Element and other modules.

Note: The Element can be used with either the StudioEngine or the PowerStation. Advanced Settings for StudioEngine are found in Chapter 9 and PowerStation settings in Chapter 10.

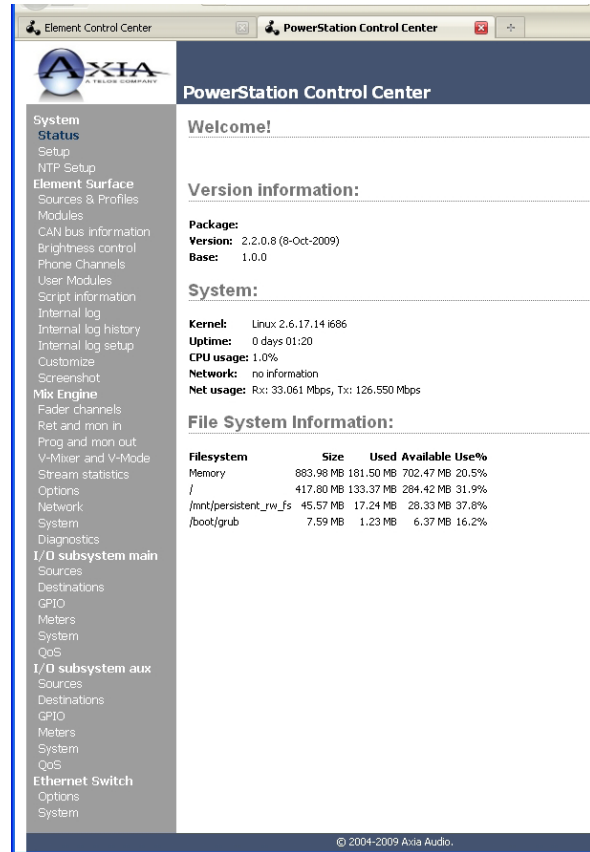


Fig. 8-1: Element Control Center (with PowerStation)

Element Configuration Screens

The Element Control Center

Figures 8-1 and 8-2 show the first screen you will see when you log into your Element or PowerStation from your Web browser. The main menu runs down the left side and gives access to all of Element's options and settings. In the main window you can see at a glance what version of Element software is loaded, system information such as console uptime, network link integrity and CPU stats, and more. This information screen is accessible without a password; clicking on any menu heading will prompt you for a password. As you can see, the PowerStation menu has many more options that are related to its integrated MixEngine, IO subsections and Ethernet switch. We will deal with those later - this chapter is focussed on the Element console and its configuration.



Fig. 8-2: Element Control Center (with StudioEngine)

The Setup Menu

We touched briefly on the Setup screen in Chapters 1 and 2. Now let's look at the rest of the tools on this page.

- **Network Configuration** contains the fields for the Element's IP Address and other network functions.
 - » **Hostname** is the unique name you give the console to identify it in the Web interface. You might want to name it after the studio it's in.
 - » **IP Address:** This Element's unique network address. In the case of the PowerStation, the Ethernet switch and Audio I/O will be automatically assigned the next two addresses in sequence. If a PowerStation AUX exists, it will be assigned a fourth address in this sequence. Make sure all of these addresses are available.
 - » **Netmask:** Enter your network's submask here.
 - » **Gateway:** If you have a core switch or a network gateway to allow access from outside your facility, enter that address here. A gateway is required for advanced IP address configurations and for connection to an external NTP server.
 - » **DNS-0 & DNS-1:** If your Axia network is connected to the "outside world", you can specify your ISP's DNS servers in these fields.

Why would you want to do this? Well, you could simplify NTP access by entering the server's name, `tmc.edu` instead of `128.249.1.1`. Or, if you set up a DNS server in-house, you could give real names to your StudioEngines and Phone systems, then use those names instead of IP addresses in Element configuration pages.

- **Web Access Password:** By default, the user name is set to `user` and the password is blank. If you want to add a password, type it in and click **Change**. Note that passwords will not display here once changed, so be sure to make a record of all changes.

Note: If you are using your Element console with a PowerStation, its software is integrated with the StudioEngine of the PowerStation. See Chapter 10 for the PowerStation software update procedure.

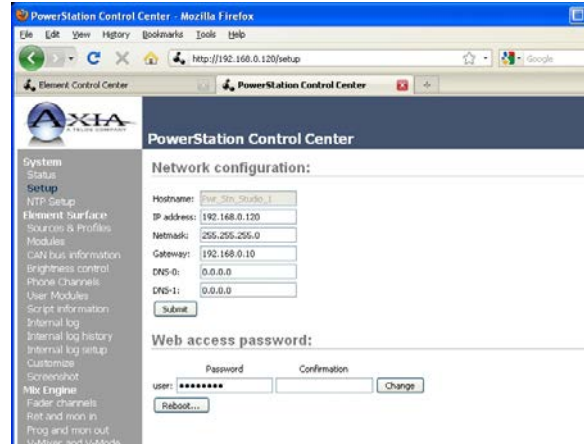


Fig. 8-3: Element with PowerStation - Setup screen

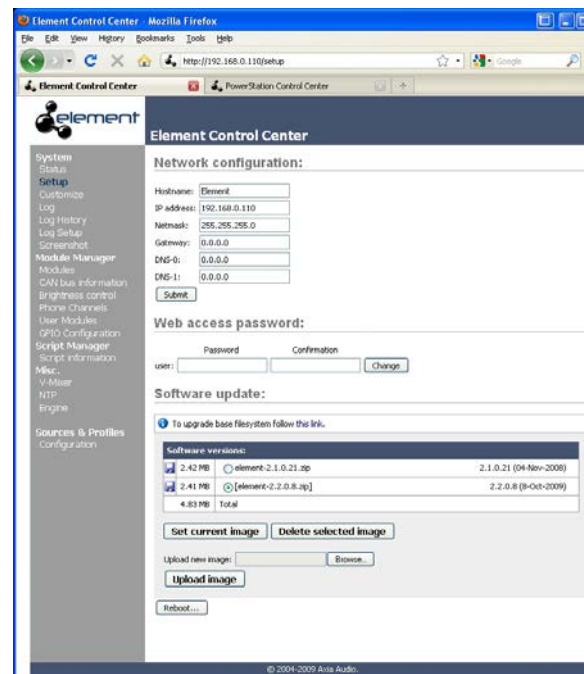


Fig. 8-4: Element with StudioEngine - Setup screen

- **Software Update (Element with Studio Engine only)** This is where you upload new Element operating software.
 - » **Base File System Upgrade:** Most Element software updates do not include a Base File update, but if one is required, click this link to upload and apply the new code.
 - » **Software Versions** shows you the software packages currently stored on your Element's flash memory card. The blue radio button is displayed next to the active software image.
 - » **Set Current Image:** When you want to change

the active software package, click on the radio button next to the image you wish to activate, and click this button. A reboot is necessary to load the new software choice.

- » **Delete Current Image:** Click the radio button next to software you wish to delete and click this button. Note that you cannot delete the active software image.

Good Housekeeping: It's best not to keep too many old software images around. They clutter up Element's flash memory, leaving less space for Show Profiles, syslogs, and other important data. We recommend that you keep only one previous software package stored in Element.

- » **Upload New Image:** From time to time, Axia makes new software packages available for download from <https://www.telosalliance.com/Axia>. Use the **Browse** and **Upload Image** buttons to install new software, as described in the Technical Bulletin that accompanies each software release.
- » **Reboot** shuts down Element and restarts it. (Remember that mixing takes place in the StudioEngine, so this can be done even while you are on the air. Interruptions of your program stream, if any, will last less than 1 second.) A reboot is required after changing active software.

The Customize Menu

- **User Logo:** This utility allows you to place your station's logo on the Element operator display. To do so, create a PNG file in Photoshop or any similar image editor. This file must measure a maximum of 129 x 97 pixels to fill the allocated display area. Use the **Browse** and **Upload User Logo** buttons to install your logo file. Upon reboot, this logo will appear on the Operator's display. To delete a displayed logo, click the **Delete User Logo** button and reboot.
- **Clock Settings:** You may specify time to be displayed in a 12-hour or 24-hour format. The Element can optionally display a large digital clock and a small analog clock as opposed to the default which is a large analog and small digital. Here is where you specify your preference. Reboot after changing.

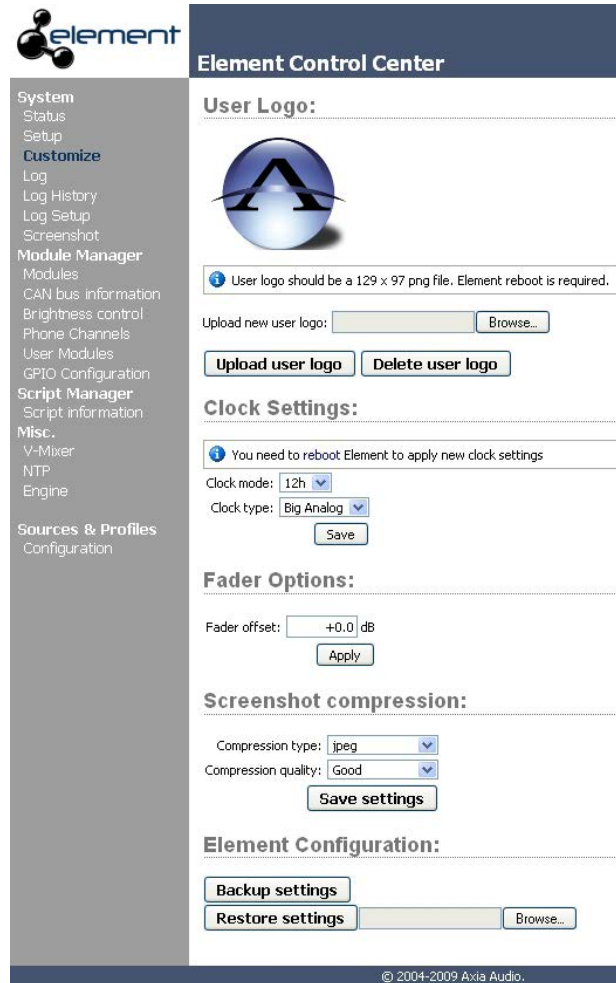


Fig. 8-5: Element Customize Screen

- **Fader Offset:** Some users may want to change their “nominal” fader position. This is a global setting that permits you to do this. For example, a setting of +6 will increase the “sensitivity” of your faders by 6 dB. The faders in this example would have to be run 6 dB lower in order for the PGM audio output to be the same as the -0dB default setting. Your meters will always represent the actual audio levels.
- **Screenshot Compression:** You can save a shot of the Operator's display for documentation, troubleshooting or training purposes. You may choose to save your screenshot in JPEG or PNG format, with three levels of compression quality using the **Compression Type** and **Compression Quality** drop-down boxes. Click **Save Settings** when you are done.
- **Element Configuration:** This section lets you

Backup and **Restore** all Element configuration settings. Backup file format is standard XML.

Save your work! We recommend backing up your Configuration files whenever a major change is made, or is about to be made, to your Element. Whether you are re-configuring Show or Source profiles *en masse* or about to perform a software update, it's always a good idea to have a copy of your important data.

Log, Log History and Log Setup Menus

Element keeps a detailed log of each button press, fader movement and other system events. Choosing the **Log** menu item lets you examine the last 100 logged activities; choosing the **Log History** menu item allows you to view an entire day's log at one time and delete old log files if you choose. The oldest log files are deleted automatically as storage space dictates.

The **Log Setup** menu item allows you to specify an external Syslog server and to configure the debug level. Use this section if directed to do so by Tech Support.

The Screenshot Menu

Choosing this menu item immediately captures a shot of the Element's Operator screen. This, in combination with the activity log, can be used to determine just what the operator is seeing — useful for at-home troubleshooting during those 6 AM Sunday phone calls.



Fig. 8-6: Element Screenshot Example

Pressing your browser's **Back** button will return you to the Element menu. These screenshots may be requested by tech support if unusual behavior is reported. To save a screenshot, simply right-click over the image and select "save as" to name and save a copy of the screenshot on your local PC. The screenshot settings are configured on the **Customize Menu**.

The Modules Menu

The **Modules** heading displays a detailed list of the installed modules in your Element console.



Fig. 8-7: Module Information screen.

Some of these fields are for diagnostics; below is a list of those you might find useful:

- The **Address** field displays the number Axia has assigned to each fader type, followed by the setting of its module rotary ID selector switch. This is useful in determining if any modules' ID selectors are set to duplicate values (see Appendix C for information on correctly setting module ID selectors).
- The **Type** field gives you the actual name of each module (i.e., 4-Fader, Master, US Phone, etc.).
- The **Status** field tells you whether or not the

module is working, i.e., communicating with the Element CPU.

- The **Firmware Version** field displays the fader firmware version that's loaded on each module.

At the bottom of the page, you'll see a lot of information pertaining to the health of the Element's CANBus communication network. This is for diagnostic purposes only.

- **Firmware Update:** From time to time, new module firmware may become available from Axia. You may confirm the current Module Firmware versions installed in your Element and install new firmware by choosing this menu item.

To update Module Firmware, use the **Browse** and **Upload Image** buttons to install the module firmware package obtained from Axia Support. Once a new software image has been uploaded, the Firmware Update screen will change to notify you which modules have new firmware available.

Each module must be updated individually. To update a module, simply click on its **Update** link.

Note that updating a module takes it offline during the update process. While audio playing through the module's faders will continue uninterrupted, keep in mind that while updating (usually about 10-15 seconds) you will not be able to adjust gain or turn faders on or off on the module being updated.

CAN Bus Information Menu

This screen shows statistics about CANBus communications between Element's CPU and control surface. Note that you will need Java to view the graphical information presented in this window. During normal operation, you will see two lines, one red and one blue. These lines provide a graphical representation of the CANBus transmit and receive data. You will see a momentary spike only when a button is pressed on the console or on a CANBus accessory panel. If these lines show erratic activity, or if they do not follow the same general trends, you may have a CANBus cabling or termination

problem.

Brightness Control Menu

This menu offers several useful options for fine-tuning your Element's various LED and LCD displays to your studio's ambient lighting. All values are expressed in percent.

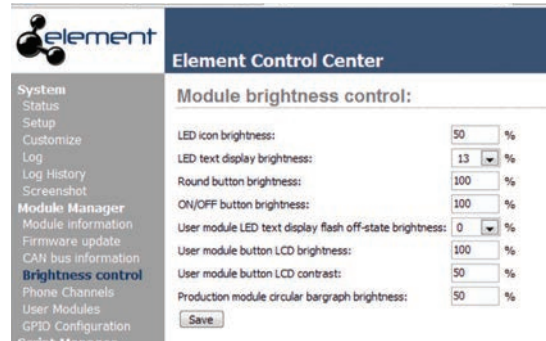


Fig. 8-8: Module Brightness Control

- **LED Icon Brightness** lets you adjust the luminance of the Status Symbols / fader numbers on the Element overbridge (the little windows just above the source identifiers).
- **LED Text Display Brightness** does the same for the alphanumeric displays that indicate what source is loaded to each fader channel.
- **Round Button Brightness** adjusts the luminance of the interior LEDs that illuminate Element's **Options, PGM 1-4, Monitor, Headphone** and other selection keys.
- **ON / OFF Button Brightness:** You can probably figure this one out on your own :^)
- **User Module LED Text Display Flash Off-State Brightness:** If you have any SmartSwitch modules or accessory panels installed, you can use this setting to determine how "dark" display text is when that text flashes for attention. A value of 0 makes the text flash from completely on to completely off; a higher value keeps the text slightly illuminated in its "off" state.
- **User Module Button LCD Brightness:** This affects only SmartSwitch modules and panels. Determines how bright the backlighting is for each SmartSwitch button's colored LCD screen.
- **User Module Button LCD Contrast:** Adjusts the

contrast between the text and background areas of SmartSwitch button displays.

- **Production Module Circular Bargraph Brightness:** Determines the luminance of the lit segments that surround the adjustment knobs on the optional Element Production Module.

Phone Channels Menu

This screen allows you to set up Element for use with Telos Series 2101, TWOx12 and Nx12 broadcast phone systems. For more details, please refer to **Appendix D: Working With Phone Hybrids**.

User Modules Menu

This menu allows you to set up and use Axia accessory SmartSwitch and Film-Cap Button modules and accessory panels with your Element console. In the example shown in Figure 8-9, a Mic/Headphone control panel has been associated with a microphone named **Studio 1 Mic**. In this case, the panel would be used by a studio guest for remote control of his/her mic and headphone selection.

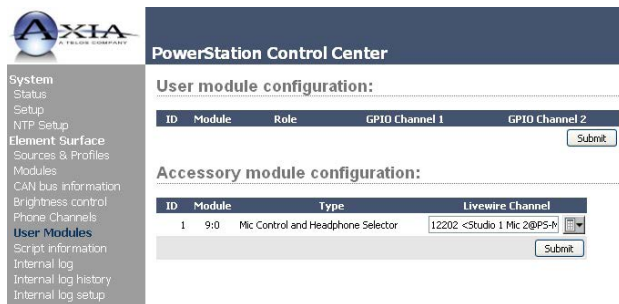


Fig. 8-9: Element User Panels

For more information on these panels, please refer to **Appendix E: Accessory Panels and User Panels**.

GPIO Configuration Menu

This menu is where you configure the assignments for the eight opto-isolated GPIO connections found on the Element CPU connection panel. For a thorough discussion of this screen and how to configure GPIO, please refer to **Chapter 4: Configuring GPIO**. Note that the GPIO section of the PowerStation is not associated with the Element but rather with the MAIN and AUX I/O sub-systems.

Script Information Menu

Element consoles use standard Javascript code for some routine functions. This screen is for diagnostics and custom programming only and should not be used without instructions from Axia Support.

V-Mixer Menu

Element allows you to mix up to 40 sources using a built-in Virtual Mixer, consisting of eight submixers controlling five inputs each. Setup and use is described in **Chapter 7: Virtual Mixer**.

Note that the Element when used with StudioEngine may have VMIX settings associated with the Element. This is available for backward compatibility only. Currently, all VMIX and VMODE functions reside completely within the StudioEngine. If you are using a PowerStation, this is not a concern since the Element and Engine functions reside within a single unit.

NTP Menu

Each individual Element in your network can use either its own internal clock or an external time server for timekeeping. Here is how you set up NTP time sync.

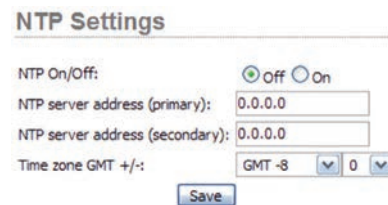


Fig. 8-8: NTP Menu controls

1. Choose the **NTP ON** radio button.
2. Enter the IP address of an NTP server in the Primary box, and a Secondary NTP server if available.
3. Set your Time Zone offset using the dropdown box.
4. Click **Save**.

To disable NTP service, simply choose **NTP OFF** and click **Save**.

You can tell if your NTP connection is working by observing the presence of an NTP indicator on your digital click display.

If you wish to connect to a public or external NTP server, you will need an Internet gateway. Be sure to specify a valid gateway in your IP configuration.

Engine Menu

If you are using your Element with a standalone StudioEngine, this is an alternate location to enter the IP Address of the StudioEngine your Element is paired with (typically this is entered using the **IP Address Book** screen). Click **Save** if you've made changes.

Sources & Profiles Configuration Menu

Choosing this menu item takes you to the Profiles submenus.

Show Profiles and Source Profiles Menus

These menus allow you to construct and administer Show and Source Profiles specific to this Element console. Refer to **Chapter 3: Working With Sources** and **Chapter 6: Show Profiles** for details on using these controls.

Legacy Configuration Menu

This screen (available on older Element software only) enables you to restore any backups you may have of Element Configuration files made with software prior to Version 2.x. Use the **Browse** and **Restore** buttons to perform the desired actions.

What's Next

You've learned about all of Element's advanced functions. Now, if you're ready and eager to learn more, proceed to Chapters 9 and 10 for a look at StudioEngine and PowerStation advanced settings. 🔄

*Featureless paper
this page would have been empty
save for this haiku.*

Chapter Nine:

StudioEngine Controls

In this chapter, we'll look in-depth at all of the controls and options found in the StudioEngine web pages.

Note: If you are using you Element with a stand-alone StudioEngine, this chapter is for you. If you are using your Element with PowerStation, please jump to Chapter 10.

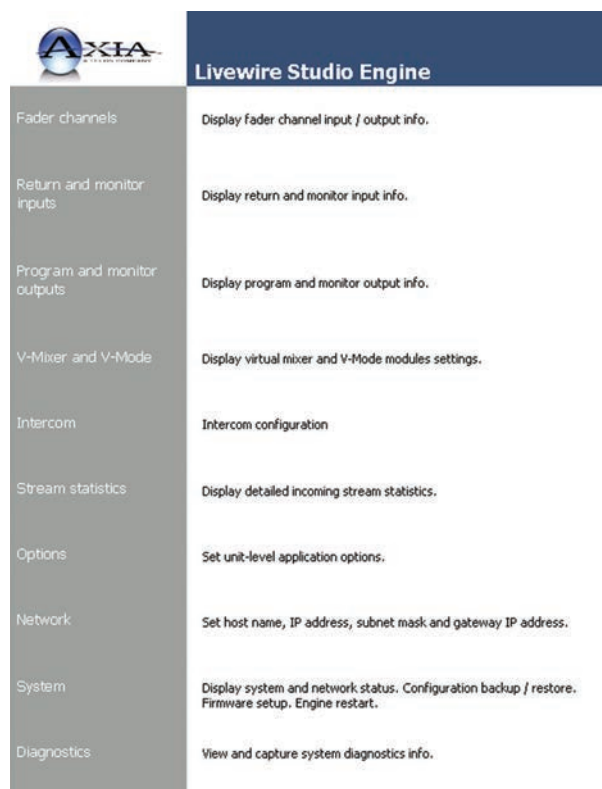


Fig. 9-1: StudioEngine Main menu

StudioEngine Configuration Screens

The Main Menu

This is the “jumping-off” point for all of the StudioEngine settings pages, the page you’ll see after entering your StudioEngine’s IP address into your Web browser. Upon making any menu choice, you’ll be asked for a password. The default factory login is `user`; leave

the password field empty.

Some of the menu items presented here – such as **Fader Channels** and **Stream Statistics** – are purely informational in nature. Others – **Options**, **System** – contain options and settings that are used for setup of your StudioEngine.

The Fader Channels Menu

Settings shown here are not adjustable. Useful for remote assistance or diagnostics, this page can tell you what sources are loaded to each fader of the Engine’s associated control surface, along with the headphone monitor source and backfeed (mix-minus), if any, is being fed to each loaded source.

| Fader and Headphones Inputs | | | | Feed to Source Outputs | | | |
|-----------------------------|-------------|---------------|-------|------------------------|--------------|--------|-------|
| Channel | Source Name | Status | Audio | Channel | Source Name | Status | Audio |
| Fader 1 | 142 | ANALOG 8 IQ | OK | | | | |
| Headphones 1 | | INTERNAL MON2 | | | | | |
| Fader 2 | 12001 | PC 9 | OK | | | | |
| Headphones 2 | | INTERNAL MON2 | | | | | |
| Fader 3 | 5201 | PHD TB 1 | OK | | | | |
| Headphones 3 | | INTERNAL MON2 | | | | | |
| Fader 4 | 150 | SRC 1 | OK | | | | |
| Headphones 4 | | INTERNAL MON2 | | | | | |
| Fader 5 | 20011 | Vx1-Elem | OK | | | | |
| Headphones 5 | | INTERNAL MON2 | | 20011 | To: Vx1-Elem | OK | |
| Fader 6 | 20012 | Vx2-Elem | OK | | | | |
| Headphones 6 | | INTERNAL MON2 | | 20012 | To: Vx2-Elem | OK | |

Fig. 9-2: Fader Channels screen

The Return & Monitor Inputs Menu

Another informational screen, choosing this menu option shows you what audio sources are currently assigned to your console’s:

- Auxiliary returns,
- Control Room monitor and headphone channels,
- Studio Monitor channel,
- Source Preview (Cue) channel,
- External Preview channel.

The Status and Audio boxes will allow you to view the health and levels of audio that is present.

The “Host Name” field at the top of the page shows the name you’ve defined for this Engine for confirmation should you be viewing the page remotely.

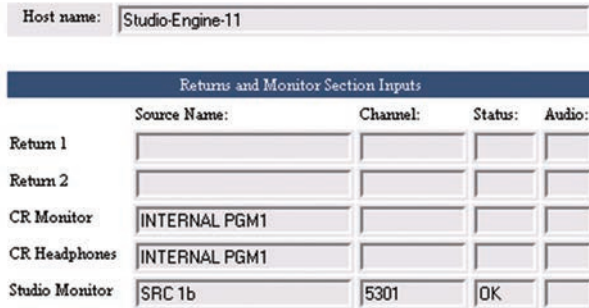


Fig. 9-3: Return & Monitor Inputs Screen

The Program & Monitor Outputs Menu

This is where you enable and assign unique channel numbers to all of your console’s outputs. If any of your Element’s outputs or monitor feeds are disabled in this menu, that channel will have no audio output.

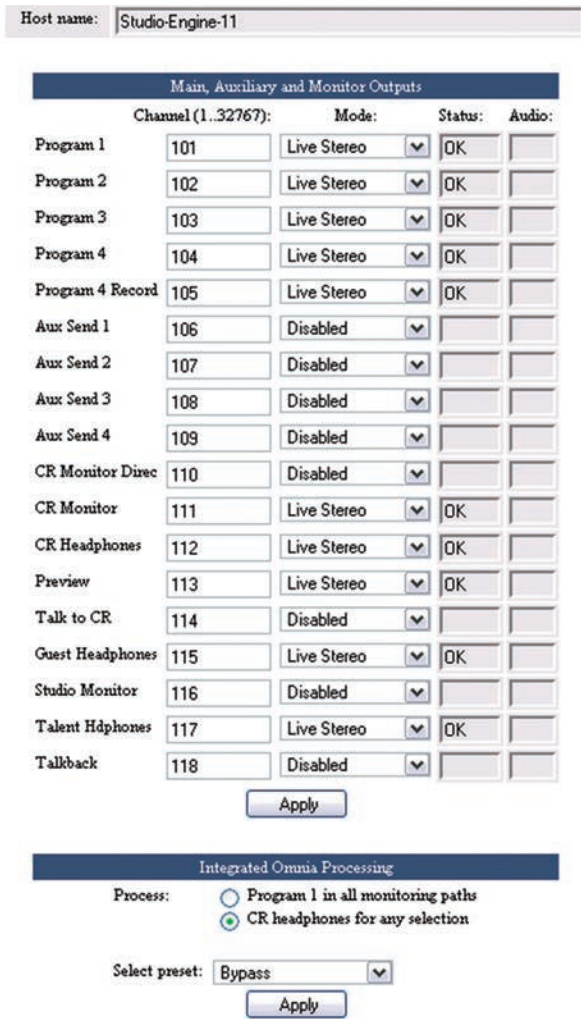


Fig. 9-4: Program & Monitor Outputs Screen

The outputs you control are:

- **Program 1 - 4:** Your console’s main Program bus outputs.
- **Program 4 Record:** Special output for recording devices which feeds the contents the Program 4 bus post-fader and pre-On/Off switch.
- **Aux Send 1 - 4:** Your console’s stereo Auxiliary Send buses.
- **CR Monitor Direct:** This is the output of the monitor selector *before* the operator’s volume controls and mutes; useful for feeding a Producer’s position, or any other monitoring station with independent headphone volume controls.
- **CR Monitor:** Contains whatever audio source your operator has selected to feed the Control Room monitors.
- **CR Headphones:** Contains whatever audio source your operator has selected to feed the Control Room headphones.
- **Preview:** The feed to the Preview (Cue) speaker.
- **Talk to CR:** This channel feeds audio to the Control Room talkback channel whenever the **Talk** button is pressed on any Studio Accessory panel.
- **Guest Headphones:** Contains whatever audio source has been selected to feed the Guest headphones.
- **Studio Monitor:** Contains whatever audio source your operator has selected to feed the Studio monitors.
- **Talent Headphones:** Contains whatever audio source has been selected to feed the Talent headphones.
- **Talkback:** When any console **Talk** key is pressed, CR Mic audio is routed, pre-fader, to this channel.

The columns following each of these entries display the status of each channel and allow you to make changes.

The **Channel** column, like other similar fields used throughout the Axia system, is where you enter a unique channel number for each console output.

The **Mode** column lets you enable and disable each output, and set the priority of each stream.

- **Live Stereo** is for live audio where lowest latency is required, like Program outputs and mic-to-headphone paths.
- **Standard Stereo** is for low-priority, non-realtime audio. Standard streams have higher latency, but offer the best compatibility for systems with PCs using the Axia IP-Audio driver.
- **Disabled** turns off outputs you don't intend to use.
- **Integrated Omnia Processing:** StudioEngine contains special audio processing presets by Omnia that you can apply to the either:
 - » Control Room Headphone channel.
 - » Program 1 in all monitoring paths

This is provided so that you can simulate the “air sound” provided by an on-air processor, so that your jocks can have real-time Program monitoring that sounds like “air” without having to set up a separate processor chain. Presets are provided for several formats, as well as reduced-bit rate audio streams. To apply, choose one from the drop-down box and choose **Apply**.

That “Radio” Sound: Over the years, talent has become used to listening to themselves off-air during raps, hearing their voices with dynamics processing applied, and relying on the levelling effects of processing to “ride the compressor” when the mic is open.

In the age of HD Radio and 8-second delay, monitoring off the air signal is sadly no longer possible. But monitoring the **Program** bus leaves most talent feeling that something's missing from their headphones.

To help combat this, Element offers customizable headphone EQ and built-in headphone dynamics processing by Omnia. When this feature is used, Talent can monitor **Program** audio with no delay and still hear the comfortable “air” sound they're used to without the hassle and expense of outboard processors dedicated to the headphone channel.

The VMIX & VMODE Menu

This menu allows you to view settings and make adjustments to the Element Virtual Mixer system. Please see **Chapter 7, Virtual Mixer**, for details on how to use VMIX and VMODE.

The Intercom Menu

This screen will be active if there is an Intercom module connected to your Element surface, otherwise an “Intercom module not connected” notice is presented. If a module is connected, you will be presented with the **Intercom Channel Assignment** options appropriate for the module installed. In Figure 9-5, a 20 position module is shown.

Intercom Configuration

- **Intercom Label:** 10 character name which will be presented to other intercom stations and displayed on module channel displays.
- **Intercom Alternate Label:** 10 character alternate name used in the same fashion.
- **Livewire channel number:** A unique channel number for the audio from this station, which will be routed to other stations upon a talk exchange. Make sure this number is unique to your Axia network.
- **Preview Mix channel number:** Assign a unique channel number which will be used as the external preview source in Element show profiles.
- **Call drop flash:** The amount of seconds for which the *Listen* indicator will flash after the call was dropped, to help identify the station which initiated the call.
- **Trigger Level:** Defines the priority of this station, for cases when multiple stations call the same location. The receiving location will provide priority in accordance with each device's setting.
- **Dim level:** Define the degree of dimming, in dB, which will be applied to lower priority calls. 0 defeats the Dim command.
- **Tap to latch timeout:** Defines the amount of time in which a press is considered a “Tap to latch”. The intercom has a latch feature, where momentarily pressing the talk button latches the Talk function. The amount of time defined here defines the maximum time the button is in the “down” state before the call is considered a press-and-hold call. A value of 0 defeats the Tap to latch feature. This is a global setting to the module.

Intercom Key Assignment

The options in this field will vary based on the type

Intercom Configuration

Intercom Label max 10 characters
unique intercom name

Intercom Alternate Label max 10 characters
also Livewire source name

Livewire channel number

Preview Mix channel number

Call drop flash s

Trigger Level ▾

Dim level [dB] (0 - no dimming, * - mute)

Tap to latch timeout [ms] (0 - Push-To-Talk/no-latch, default: 200)

GPIO Configuration

| # | Name: | Channel: |
|---------|------------------------------------|----------------------|
| 1 Main | <input type="text" value="Main"/> | <input type="text"/> |
| 2 Aux 1 | <input type="text" value="Aux 1"/> | <input type="text"/> |
| 3 Aux 2 | <input type="text" value="Aux 2"/> | <input type="text"/> |
| 4 Aux 3 | <input type="text" value="Aux 3"/> | <input type="text"/> |
| 5 Aux 4 | <input type="text" value="Aux 4"/> | <input type="text"/> |
| 6 Aux 5 | <input type="text" value="Aux 5"/> | <input type="text"/> |
| 7 Aux 6 | <input type="text" value="Aux 6"/> | <input type="text"/> |
| 8 Aux 7 | <input type="text" value="Aux 7"/> | <input type="text"/> |
| 9 Aux 8 | <input type="text" value="Aux 8"/> | <input type="text"/> |

Intercom Channel Assignment

Shift page: ▾ (Apply your current changes before selecting page)

| | | | |
|-----|--|-----|--|
| #1 | mode: <input type="text" value="Talk & Listen"/> | #2 | mode: <input type="text" value="Talk & Listen"/> |
| #3 | mode: <input type="text" value="Talk & Listen"/> | #4 | mode: <input type="text" value="Talk & Listen"/> |
| #5 | mode: <input type="text" value="Talk & Listen"/> | #6 | mode: <input type="text" value="Talk & Listen"/> |
| #7 | mode: <input type="text" value="Talk & Listen"/> | #8 | mode: <input type="text" value="Talk & Listen"/> |
| #9 | mode: <input type="text" value="Talk & Listen"/> | #10 | mode: <input type="text" value="Talk & Listen"/> |
| #11 | mode: <input type="text" value="Talk & Listen"/> | #12 | mode: <input type="text" value="Talk & Listen"/> |
| #13 | mode: <input type="text" value="Disabled"/> | #14 | mode: <input type="text" value="Talk & Listen"/> |
| #15 | mode: <input type="text" value="Talk & Listen"/> | #16 | mode: <input type="text" value="Talk & Listen"/> |
| #17 | mode: <input type="text" value="Talk & Listen"/> | #18 | mode: <input type="text" value="Talk & Listen"/> |
| #19 | mode: <input type="text" value="Talk & Listen"/> | #20 | mode: <input type="text" value="Talk & Listen"/> |

Save as: Save as copy Delete

Pages are listed alphabetically. Use first character to control the order: "1 Default", "2 Alt", ...

Intercom Livewire Sources

| Label | Livewire Channel | Trg Level | GPIO Port | - Talk Pin | - Listen Pin | Delete |
|----------------------|----------------------|--------------------------------|----------------------|----------------------|----------------------|----------------------------------|
| <input type="text"/> | <input type="text"/> | <input type="text" value="4"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text" value="NEW"/> |

GPIO Configuration

This field allows for the configuration of nine “virtual GPIO” ports which can be used to interact with the Intercom system. More information on this topic is covered in the IP Intercom manual. These virtual GPIO ports are accessible through port 4013.

If you need to configure GPIO routing on a physical GPIO port using a port on the StudioEngine, make sure to use the syntax

```
www.xxx.yyy.zzz:4013/n
```

on the GPIO node so that it is able to observe the GPIO on the 4013 port.

Intercom Livewire Sources

Here you can enter a Livewire source that is not an actual Intercom station. You can then configure the Intercom module to “monitor” this source with a Listen command, or interface with a third-party Intercom or two-way radios. More on this configuration is available in the IP Intercom manual.

Version information

The bottom of the screen shows a version value for the intercom software. The intercom function is independent from the StudioEngine code, and so has its own version. This display shows the version of Intercom code your StudioEngine is running.

of module installed; refer to the IP Intercom manual for full details for your module.

Each module has a numbered key position with a drop-down that has the known intercom stations or Livewire channels defined within the “Intercom Livewire Sources” field. The next drop-down is the Mode option which allows you to assign the button as a Talk, Listen, or Talk and Listen button. Selecting a station or source, and setting its Mode, gives function to that key on the intercom module. 20-position intercom modules provide an option to create “pages” which can be toggled if there are many locations you need to interact with.

The Options Menu

The Options page shows some initial options required for legacy software compatibility.

- **Source Sharing:** Provides the option to disable source lock on the sources generated by the StudioEngine. This is only needed for legacy products; all current installs should maintain the default setting of “Sources lockable”.
- **Standard Audio Streams :** Provides the option to change the buffer value for Standard streams that enter the StudioEngine. Default values are suggested.
- **Audio mixing:** Provides status information only.
- **V-Mixer:** Defines whether your Element’s Vmix is controlled by the StudioEngine (desired) or through legacy Element control. It is suggested to maintain default settings; this option is provided for legacy users only.

Host name: Studio-Engine-11

Source Sharing

Source sharing: Sources lockable (normal Element operation) Sources shareable (SmartSurface compatibility mode)

Apply

Standard Audio Streams

Receive buffer size (15-100 ms): 35

Warning: changes take effect after restart.

Apply

Audio mixing

Console type: Element

Audio mixing mode: Stereo

V-Mixer

Controlling V-Mixer from Element: Enabled Disabled

Apply

Save V-Mixer settings to config: Save

Fig. 9-5: Options Screen

The Stream Statistics Menu

This screen provides information about all active audio streams in and out of the StudioEngine. This is useful primarily for diagnostics and contains no settings that can be modified. Axia tech support may ask you to report information reported on this page. In general, errors and defects should be minimal. DSP underruns should also

be very low except for IP-Audio sources under certain circumstances. Contact tech support if you are experiencing problems and need help in this area.

| | | Fader Inputs | | | | | |
|--------------|----------------------|-----------------|-----------|-----------------|------------------------------|----------------|---|
| Source Name: | Channel/Stream Type: | Normal Packets: | Overruns: | Stream Resumed: | Time-stamp Sequence Defects: | DSP Underruns: | |
| Input 1 | Studio 2 Mic 1 | 1011/0 | 24743445 | 1 | 0 | 0 | 0 |
| Input 2 | TV | 1028/0 | 24743283 | 0 | 0 | 0 | 0 |
| Input 3 | PHONE | 1018/0 | 24743124 | 1 | 0 | 0 | 0 |
| Input 4 | CODEC | 1038/0 | 24743124 | 1 | 0 | 0 | 0 |
| Input 5 | | | | | | | |
| Input 6 | | | | | | | |
| Input 7 | | | | | | | |
| Input 8 | | | | | | | |

Fig. 9-6: Stream Statistics Screens

The Network Menu

- **Host Name:** Enter a unique name for this particular StudioEngine. This name is displayed on various information and diagnostic screens. Spaces are not allowed.
- **Network Address:** This field contains the IP address you’ve assigned for this StudioEngine.
- **Netmask:** The submask for your IP-Audio Network.
- **Gateway:** If your Axia network has a network gateway to allow outside access, enter its IP address here.
- **Connected Console:** Displays the IP address of the Element console that is connected to your Studio Engine.

Host Name

Host name: Studio-Engine-11

Use only letters, numbers, hyphens, dots; must start with a letter or a number.

Engine Livewire Port

Network address: 192.168.100.11

Netmask: 255.255.255.0

Gateway: 0.0.0.0

Connected Console

Network address: 192.168.100.10

Warning: all changes except host name take effect after restart. Attempts to set network address and netmask to 0.0.0.0 will not be accepted.

Apply

Fig. 9-7: Network screen

After making changes, click the **Apply** button to save them.

The Diagnostics Menu

Most users never have to look at this screen; these options are normally used only under the guidance of Axia Tech Support.

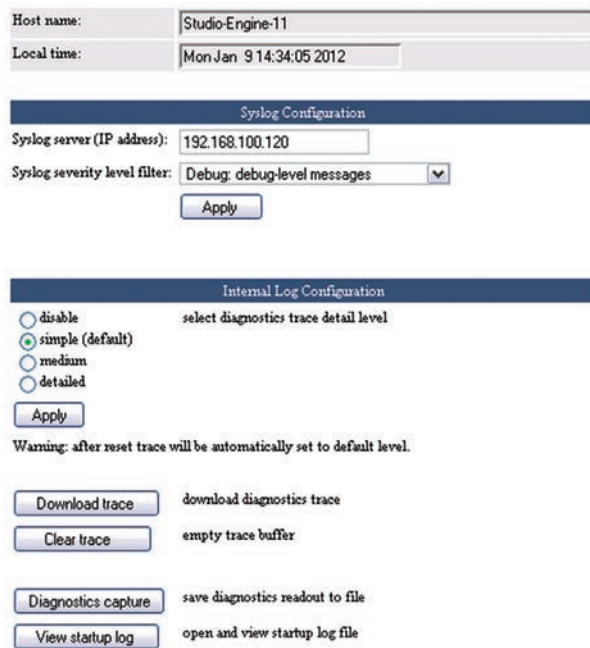


Fig. 9-8: Diagnostics Screen

- **Syslog Server (IP Address):** Your StudioEngine can generate detailed logs of system activity. If you choose to keep syslog, enter the IP address of the server on which you wish the logs to be stored.
- **Syslog Severity Level Filter:** This menu choice allows you to set the level at which the Syslog begins storing system events.
 - » **Emergency:** Generates Syslog only if the system is completely unable to operate.
 - » **Alert:** Syslog contains only messages notifying you that immediate attention is needed for the system to remain operative.
 - » **Critical:** Syslog contains only messages about critical system errors.
 - » **Warning:** Syslog contains only messages about errors that could cause the system to become unstable.
 - » **Notice:** System is operating normally, but Syslog contains messages about unusual events that you should know about.

- » **Informational:** Logs all informational messages. This includes all routine events.
- » **Debug:** Captures all system activity for diagnostic use.

After making changes, click the **Apply** button to save them.

- **Internal Log Configuration:** This menu choice allows you to set the detail level of the log files that are saved internally in the StudioEngine. There are four settings ranging from Disabled to Detailed

Two other sections permit you to download a diagnostics trace or to capture a diagnostic information. These options should be used in consultation with Axia Tech Support if necessary.

Note that these values are volatile and are not saved to internal memory; if power is removed from the device, any information contained in these logs will be cleared.

System Menu

This screen contains several software utilities and information fields pertaining to your StudioEngine.

- The **System Status** section of the page provides information about the physical state of the StudioEngine.
 - » **System Status** and **Network Status** inform you as to the health of the StudioEngine and its connection to the Axia network. Both of these indicators must be OK for normal operation.
 - » **CPU Usage** indicates how hard the Engine is working. This value should never exceed 80%.
 - » **Link Speed** tells you the type of link with which the Engine is connected to the local network switch. This should always be 1 Gbs.
 - » **Network Usage In** and **Out** show how much bandwidth is being consumed on the Engine-to-switch link.
 - » **Temperature** monitors the temperature of the StudioEngine CPU. If the temperature exceeds operating limits, a warning will appear on the Engine's front-panel display.
 - » **Fan 1** and **Fan 2 Speed:** Monitors the fan speeds of the Engine's two internal cooling fans (if your

engine is of the variety with fans).

- The **Configuration Management** section lets you make backups of and restore your Engine settings. Use the **Browse**, **Backup** and **Restore** buttons to accomplish these actions. Use the **Reset Cfg** button to reset all of your StudioEngine's settings to an "as-shipped" state. This command will completely erase any choices you have made and reset your Engine to the way it came from the factory, so use with caution!

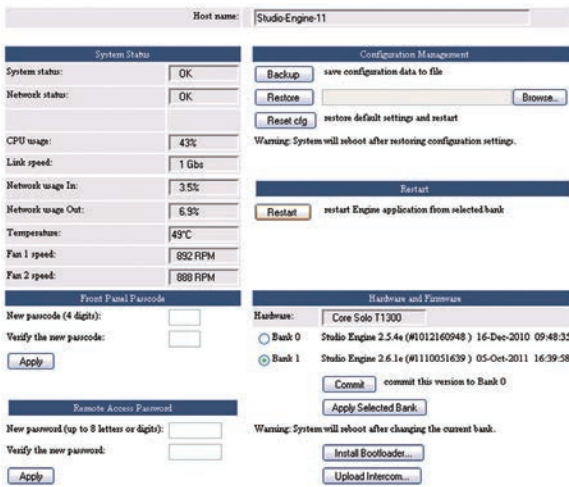


Fig. 9-9: StudioEngine System Screen

- The **Restart** section lets you remotely **Restart** the StudioEngine, performing a complete reboot. Of course, if the StudioEngine is rebooted, it will stop delivering audio until it has reloaded its operating system and the StudioEngine software. This will take only 1-2 minutes but it will seem like forever!
- The **Front Panel Passcode** fields allow you to passcode-protect the physical controls on the Engine's front panel.

By default, access is open. However, if your Engines are located in a public space in your facility, you may wish to set a code to limit front-panel access to authorized personnel. To enable this feature, enter a four-digit code in the top box shown in Figure 9-9, then enter it again in the lower box to confirm. Click **Apply** to activate passcode protection.

- The **Remote Access Password** fields allow you

to change the user password for HTTP access to the StudioEngine. By default, the user name is **user** and there is no password.

- The **Hardware and Firmware** section is where you upload and apply new operating software for the StudioEngine.
 - » Use the **File** field and the **Browse** and **Upload** buttons to upload new software to the Engine.

Where are my buttons? Unlike the Element console itself, where you can store multiple versions of operating software, the StudioEngine has only two software "banks." If both banks are full, you must eliminate one, or you will not see the **File**, **Browse** or **Upload** controls. Instead, you'll see...

- » The **Commit to Bank 0** button. Pressing this button takes the software in Bank 1 and loads it into Bank 0, which opens Bank 1 for new software.
- » You can run Engine software from either Bank 0 or Bank 1. Simply click on the radio button next to the software bank you wish to run from, and click **Apply Selected Bank**. The Engine will reboot after changing banks, so plan this operation for off-hours or switch program output to another studio to avoid program interruptions.
- » The **Errors** message field will show diagnostic messages about the state of the StudioEngine should any fault conditions exist.

- The **Install Bootloader** and **Upload Intercom** buttons allow you to update both. Do so upon the suggestion of Axia tech support.

What's Next

The next chapter covers PowerStation controls.

If you have managed to remember everything you have read up to this point, congratulations! If there was an exam, you would pass with flying colors. Well, there is no exam but there is more great information on specific topics in the Appendices - be sure to check them out. 🌀

Meters dance in time

Waveforms swirl around my skull

Music looks so cool.

Chapter Ten:

PowerStation Controls

In this chapter, we'll look in-depth at all of the controls and options found in the PowerStation web pages.

Note: If you are using an Element console with PowerStation, this chapter is for you. If you are using your Element with StudioEngine, please refer to Chapters 8 and 9.



Fig. 10-1: PowerStation Home Page

PowerStation Configuration Screens

Home Page

This is the “jumping-off” point for PowerStation-specific settings. Previous chapters have covered the basic items including Source Channel allocation and configuration of Element Source and Show Profiles. Chapter 8 covered the Element Advanced Controls and that information will not be repeated here. This chapter will cover advanced topics related to the PowerStation’s configuration and advanced features.

Figure 10-1 shows the PowerStation home page. From here, you can see links to the various Element functions, the Audio I/O Manager, MixEngine and Ethernet sections.

Technically speaking, a PowerStation MAIN is really three separate devices with three IP addresses. The home page shown in Figure 10-1 will link you to all three devices plus the PowerStation AUX if one exists however all of these devices have discrete IP addresses. Once you establish the base IP address for the Element, the other 2 addresses are automatically assigned. If you have a PowerStation AUX connected, that IP address is automatically assigned as well. Use the links shown in Figure 10-1 to connect to all of the PowerStation’s components. While it may be possible to change the IP addresses of the individual devices to some other scheme, we strongly recommend that you use the addresses that have been automatically assigned since upon reboot, the automatic address scheme for the Ethernet switch and the MAIN and AUX I/O subsystems will prevail.

Let’s take a look at the home page menu items for the PowerStation.

Status

This section is automatically displayed when you connect to the PowerStation. No password is required to view this page. Here you can see:

- PowerStation software version info
- System Information including:
 - » the version of Linux kernel

- » the uptime of the PowerStation expressed in days, hours and minutes
- » CPU utilization
- » Network utilization - transmit and receive data rates expressed in Mbps.
- File System Information - provides information on memory and solid state disk utilization for the operating system. Tech Support may ask for this information if you are experiencing any problems.

Setup

This section contains the network configuration including the base IP address for your PowerStation. If you need to make changes to the IP scheme, this is where you do it.

Fig. 10-2: PowerStation Setup Screen

- **Hostname:** Displays the name that has been assigned to your PowerStation. This name is assigned in the MixEngine Network menu. It is recommended that you keep this name short so it is more easily displayed in other areas of the system.
- **IP Address:** This is the base IP address for your PowerStation. For the example shown here, the base address is 192.168.0.120. In this case, the PowerStation's Ethernet switch would be automatically assigned 192.168.0.121; I/O Subsystem MAIN will be 192.168.0.122 and I/O Sub-

system AUX will be 192.168.0.123.

- **Netmask:** This parameter is determined by your network administrator. In a simple network, it will be 255.255.255.0.
- **Gateway:** This is required for advanced IP address schemes; if you intend to access our devices from outside the Livewire LAN; or if you wish to use an external NTP server.
- **DNS-0 and DNS-1:** Not currently required.
- **Web Access Password:** When you connect to your PowerStation, the user name is always "user". This is where you can change the user password. Remember that changing this password will have implications if PathfinderPC software is in use.


Reboot: A reboot is required when any changes are made to the network parameters on the PowerStation Setup Menu.

NTP Setup

This section contains the setting for synchronization to an NTP (network Time Protocol) server.

Fig. 10-3: PowerStation NTP Setup Screen

- **NTP On/Off:** Does just what it says. You can tell if NTP is running properly by looking for the presence of the NTP indicator on the Element screen - shown below.

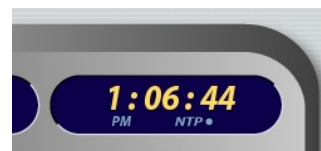

- **NTP Server Address** (Primary and Secondary): Enter the IP address(es) of your NTP server(s) here. It is common for a PC on your internal Livewire LAN to be setup as an NTP server.
- **Time Zone GMT +/-:** Specify your GMT offset here. Note that PowerStation does not yet have automatic spring and fall DST adjustments. This feature will be added soon.

Element Surface

The advanced options of the Element surface are covered in **Chapter 8: Advanced Element Controls**. Please refer to that chapter for any setup details regarding the Element console. Operation of the Element is covered in **Chapter 5: Element Operations**.

Mix Engine

The PowerStation MAIN includes an integrated StudioEngine (aka: MixEngine). The implementation is almost identical to that of a standalone StudioEngine and these details are covered in **Chapter 9: StudioEngine Controls**.

The Fader Channels Menu

Settings shown here are not adjustable. Useful for remote assistance or diagnostics, this page can tell you what sources are loaded to each fader of the Engine's associated control surface, along with the headphone monitor source and backfeed (mix-minus), if any, is being fed to each loaded source.

The Return & Monitor Inputs Menu

Another informational screen, choosing this menu option shows you what audio sources are currently assigned to your console's:

- Auxiliary returns,
- Control Room monitor and headphone channels,
- Studio Monitor channel,
- Source Preview (Cue) channel,
- External Preview channel.

The "Host Name" field at the top of the page shows the name you've defined for this PowerStation for confirmation should you be viewing the page remotely.

Program and Monitor Out

This is where you enable and assign unique channel numbers to all of your PowerStation's Engine sources. If any of your PowerStation outputs or monitor feeds are disabled in this menu, that channel will have no audio output.

The sources you control are:

- **Program 1 - 4:** Your console's main Program bus outputs.
- **Program 4 Record:** Special output for recording devices which feeds the contents the Program 4 bus post-fader and pre-On/Off switch.
- **Aux Send 1 - 4:** Your console's stereo Auxiliary Send buses.
- **CR Monitor Direct:** This is the output of the monitor selector *before* the operator's volume controls and mutes; useful for feeding a Producer's position, or any other monitoring station with independent headphone volume controls.
- **CR Monitor:** Contains whatever audio source your operator has selected to feed the Control Room monitors.
- **CR Headphones:** Contains whatever audio source your operator has selected to feed the Control Room headphones.
- **Preview:** The feed to the Preview (Cue) speaker.
- **Talk to CR:** This channel feeds audio to the Control Room talkback channel whenever the **Talk** button is pressed on any Studio Accessory panel.
- **Guest Headphones:** Contains whatever audio source has been selected to feed the Guest headphones.
- **Studio Monitor:** Contains whatever audio source your operator has selected to feed the Studio monitors.
- **Talent Headphones:** Contains whatever audio source has been selected to feed the Talent headphones.
- **Talkback:** When any console **Talk** key is pressed, CR Mic audio is routed, pre-fader, to this channel.

The columns following each of these entries display the status of each channel and allow you to make changes.

The **Channel** column, like other similar fields used throughout the Axia system, is where you enter a unique channel number for each console output.

The **Mode** column lets you enable and disable each output, and set the priority of each stream.

- » **Fast Stereo** are for live audio where lowest latency is required, like Program outputs and mic-to-headphone paths.
- » **Standard Stereo** is for low-priority, non-real-time audio. Standard streams have higher latency, but offer the best compatibility for systems such as PCs using the Axia IP-Audio driver.
- » **Disabled** turns off outputs you don't intend to use.

- **Integrated Omnia Processing:** This section also includes the configuration of the Omnia processing that is included in your PowerStation. The ability to process Program 1 *in all monitoring paths* gives you a processed feed that is similar to the live off-air feed that jocks are used to monitor. With the advent of HD radio, the live air feed is now delayed so it is not practical to monitor this signal except for confidence purposes. By processing Program 1 in this manner, wherever Program 1 is monitored (operator's headphones, control room monitors, studio monitors, guest headphones, backfeeds, etc) it can be processed universally by applying this setting. Of course, we don't touch the regular Program 1 outputs that are feeding your transmitter. You will have other processing equipment for that purpose.

To apply, choose one from the drop-down box and choose **Apply**.

V-Mixer and V-Mode

Chapter 7: Virtual Mixer (VMIX) fully discussed the configuration of the VMIX and VMODE sections of the MixEngine. Please refer to that chapter for information on that topic.

Stream Statistics

This screen provides information about all active audio streams in and out of the StudioEngine. This is

useful primarily for diagnostics and contains no settings that can be modified. Axia tech support may ask you to describe information reported on this page. In general, errors and defects should be minimal. DSP underruns should also be very low except for IP-Audio sources under certain circumstances. Contact tech support if you are experiencing problems and need help in this area.

Options

As shown in Figure 10-4, this menu includes two fields that are display-only and two that can be configured:

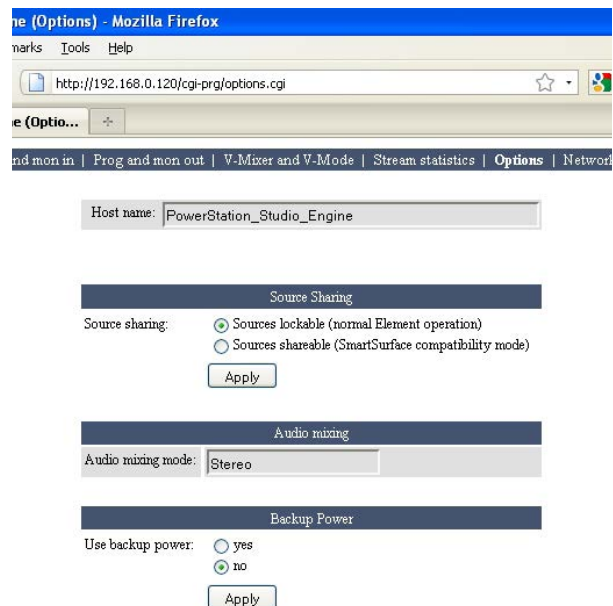


Fig. 10-4: PowerStation MixEngine Options

- **Host Name:** Displays the name of the PowerStation that has been configured in the Network Menu.
- **Audio Mixing:** Displays the mixing mode - either Stereo or Surround.
- **Source Sharing:** This parameter should always be set to “Sources Lockable” since this is the compatibility mode for an Element. The PowerStation is not intended to be used with the SmartSurface console.
- **Backup Power:** This setting tells the PowerStation how it should generate a power failure alarm. If Backup Power is disabled in this

screen, the PowerStation MAIN will generate an alarm only if the power supply in the PowerStation MAIN should fail. When Backup Power is set to YES, a front-panel alarm will be visible if there is a failure or disconnection of either main or backup power supplies. Note that both the PowerStation MAIN and the PowerStation AUX can operate normally as long as one power supply is active.

You cannot un-check the backup power option, if the backup power is actually present - the software won't allow that. If it is unchecked, it means that there is actually no backup, and then the failure of the main power will simply bring the unit down.

As usual, if you make a change, remember to click the **Apply** button before navigating away from this page.

Network

- **Host Name:** This is where you give your PowerStation a short, friendly name. We suggest you include the location or name of the studio since that will make other aspects of the system more intuitive.
- **IP Settings:** It is possible to make changes to IP settings here however we recommend that you make these changes in the main PowerStation Setup menu as described at the beginning of this section.

System

The System Menu of the PowerStation's MixEngine displays some different information than a stand-alone StudioEngine however the functionality is identical. The MixEngine System screen is displayed in Figure 10-5.

- **System Status:** This area displays the health indicators and status of the motherboard in the

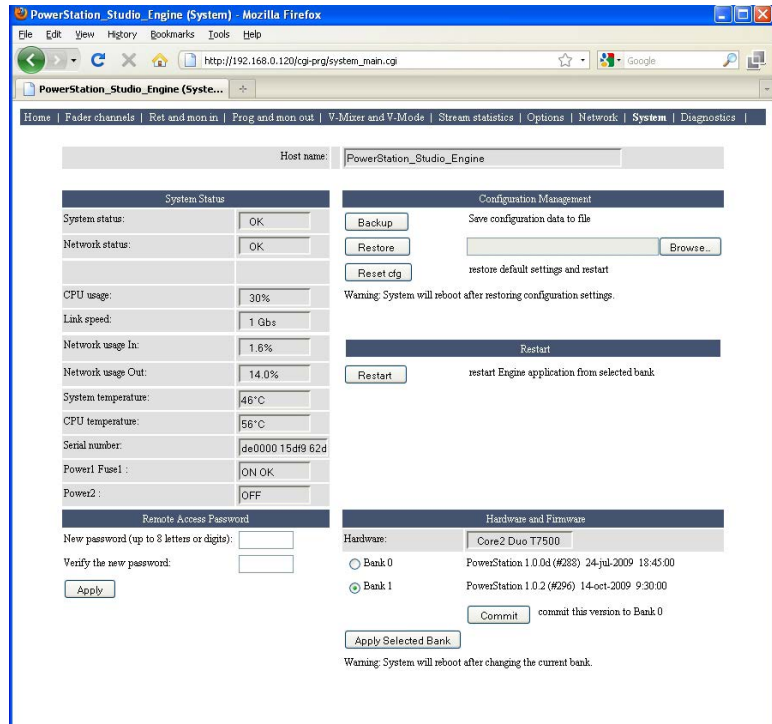


Fig. 10-5: PowerStation MixEngine System screen

PowerStation. You will see some familiar items here but you will not see Fan Speed - there are no fans!

- » **System Status** and **Network Status** inform you as to the health of the StudioEngine and its connection to the Axia network. Both of these indicators must be OK for normal operation.
- » **CPU Usage** indicates how hard the Engine is working. This value should never exceed 95%.
- » **Link Speed** tells you the type of link with which the Engine is connected to the local network switch. This should always be 1 Gbs.
- » **Network Usage In** and **Out** show how much bandwidth is being consumed on the Engine-to-switch link.
- » **System Temperature** monitors internal temperatures of the PowerStation. If the temperature exceeds operating limits, a warning will appear on the PowerStation's front-panel display.
- » **CPU Temperature** monitors the temperature of the PowerStation's CPU. If the temperature exceeds operating limits, a warning will appear on the PowerStation's front-panel display.

- » **Serial Number:** Reports the CPU serial number.
- » **Power1 Fuse1:** “OK OK” indicates that the power supply of the PowerStation MAIN is OK and that its fuse is also OK.
- » **Power2 Fuse2:** “OK OK” indicates that the power supply of the PowerStation AUX is OK and that its fuse is also OK.
- **Remote Access Password:** The HTTP password may be changed here as well however we recommend you use the main system page for that function.
- **Configuration Management:** This section lets you make backups of and restore your Engine settings. Use the **Browse**, **Backup** and **Restore** buttons to accomplish these actions. Use the **Reset Cfg** button to reset all of your settings to an “as-shipped” state. This command will completely erase any choices you have made and reset your PowerStation’s Engine to the way it came from the factory, so use with caution!
- **Restart:** The PowerStation may be rebooted remotely from this screen if necessary.
- **Hardware and Firmware:** The type of CPU in use is displayed in the Hardware box. New firmware updates are processed in this screen. Remember that since the PowerStation has integrated the Element with the MixEngine, there is a single, combined firmware update.
 - » Use the **File** field and the **Browse** and **Upload** buttons to upload new software to the Engine.
 - » Pressing the **Commit** button takes the software in Bank 1 and loads it into Bank 0, which opens Bank 1 for new software.
 - » You can run PowerStation software from either Bank 0 or Bank 1. Simply click on the radio button next to the software bank you wish to run from, and click **Apply Selected Bank**. The system will reboot after changing banks, so plan this operation for off-hours or switch program output to another studio to avoid program interruptions.

Diagnostics

This section of the PowerStation MixEngine is designed to create local diagnostics reports and to deliver

real-time logging to an external Syslog Server. This area is used under guidance from Axia Tech Support.

Audio I/O Subsystems

The PowerStation family has two audio I/O subsystems - one is associated with the PowerStation MAIN and the other identical I/O subsystem is a part of the PowerStation AUX. Both units are normally accessed from the web pages of the PowerStation MAIN.

Note that the IO Subsystems currently have their own password system. The default user name is “user” and the user password is blank.

Sources and Destinations:

The basics of Sources and Destinations have been thoroughly discussed in **Chapter 2: Element with PowerStation**. That information will not be repeated here.

GPIO

Each MAIN and AUX IO Subsystem includes four GPIO ports. The ports can be utilized in two ways: A port can be associated with a Livewire Channel for control to/from an external device or a GPIO port can be monitored and controlled by PathfinderPC.

Fig. 10-6: Audio I/O Subsystem - GPIO

In the example shown in Figure 10-6, we can see that output pin 1 of the Control Room Monitor GPO is active. This indicates that a microphone in live in that room - naturally this is the control for our ON-AIR light. We can also see GPO pin 2 is also active - that the CR monitors are dimmed. The cause of dimmed monitors is the Hybrid in Preview as we can see on GPO pin 3 on port 2.

If all of this seems confusing, please read **Chapter 4: Configuring GPIO**. Interfacing any electronic system to the real world takes some effort, but Livewire makes it a lot easier by associating this control with the same Livewire channel that handles your audio stream.

When configuring a GPIO port, you may use the pop-up selector to choose your Livewire source from the selection window or you may simply enter the Livewire channel number into the box if you happen to know it. As usual - click **Apply** when you are done.

Meters

The PowerStation IO Subsystem has meters to assist with troubleshooting and level calibration.

These meters are peak-reading meters and will show you how much headroom you have at your audio inputs and outputs. The Green indicator is considered safe. The meter bar will change to Yellow at 20 dB below full scale and it will change to Red at 10 dB below full scale.

To make gain changes, the small arrow will increase or decrease gain by approximately 0.1 dB. The large arrows will increase or decrease gain by approximately 1.0 dB. We recommend that all system levels be normalized at 20 dB below full scale. At the output of an audio node or the PowerStation IO Subsystem, this will be a standard +4dB. That's about 1.23 volts for those who want to measure it with an analog RMS meter.

System

This section has the configuration for the IP settings of the PowerStation's I/O subsystem section as well as the provisions for software updates. Figure 10-8 shows the web page for this section.

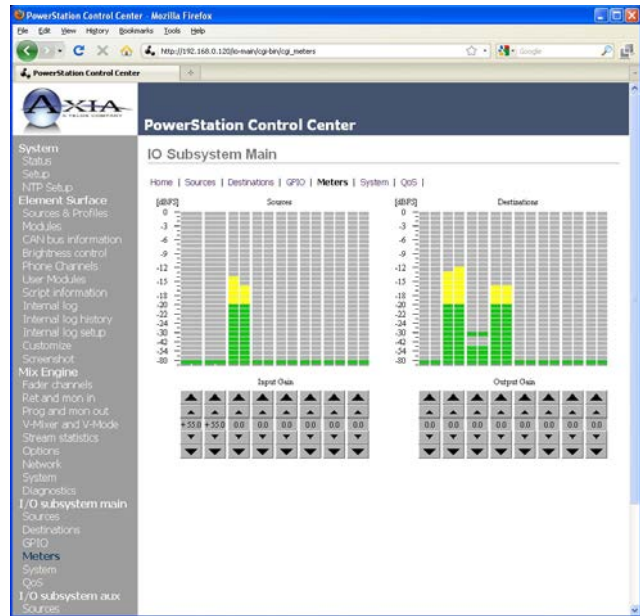


Fig. 10-7: Audio I/O Subsystem - Meters

As described previously in this manual, it is recommended that all IP address information be entered in the PowerStation Setup menu. IP addresses are automatically assigned to the IO Subsystems and Ethernet switch. **If you make changes to IP settings in this section, they will be over-written the next time the PowerStation is restarted.**

- **Host Name:** You should enter a short, logical name here to describe the IO Subsystem. We

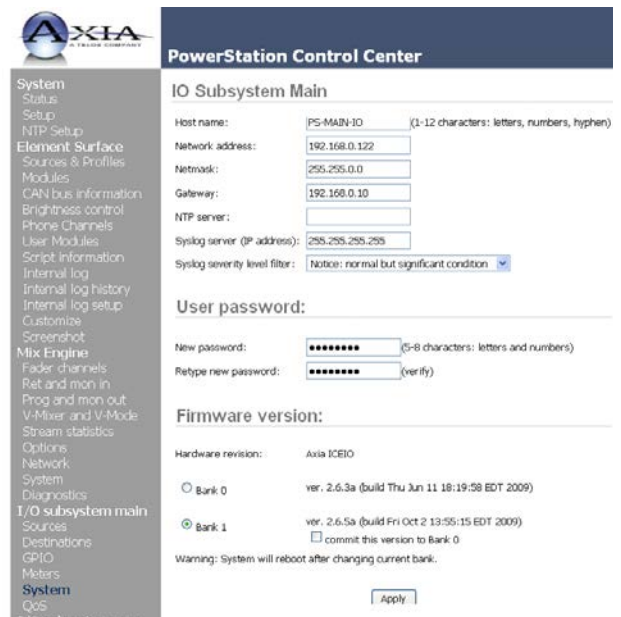


Fig. 10-8: Audio I/O Subsystem - System

suggest you include something to indicate the room or studio where the unit is located.

- **Network Address:** Do not change - this address is automatically assigned during boot-up.
- **Netmask:** Do not change - this value is automatically assigned during boot-up.
- **Gateway:** Do not change - this address is automatically assigned during boot-up.
- **NTP Server:** Not currently implemented or required.
- **Syslog Server and Severity Filter:** This section also includes the syslog server IP address and syslog level settings. Under certain circumstances, Axia tech support may request that you collect logs of system activity. Otherwise, the syslog settings should be left at default settings.
- **User Password:** The user password for the IO subsection may be changed here. Be sure to record any changes you make to the default user password (which is blank). It is difficult for anyone to help you out if the password is not known.

Be aware that making changes to device passwords after your PathfinderPC server has been configured is going to make your life more complicated. We encourage you to make password changes at the beginning of your setup or leave the passwords at the default value.

- **Firmware Version:** This section is where you will update the firmware for the Audio IO section of the PowerStation. As with most other Axia devices, there is provision for two different versions of firmware. The IO Subsystem will reboot when the version is changed.

Quality of Service (QoS)

The QoS page has advanced settings related to the levels for quality of service and Livewire click synchronization. Default settings almost always usually suitable. Figure 10-3 shows the page for QoS settings.

- **Synchronization/Livewire Clock:** In all Livewire systems, only one device may be the master clock at any given point in time. If that

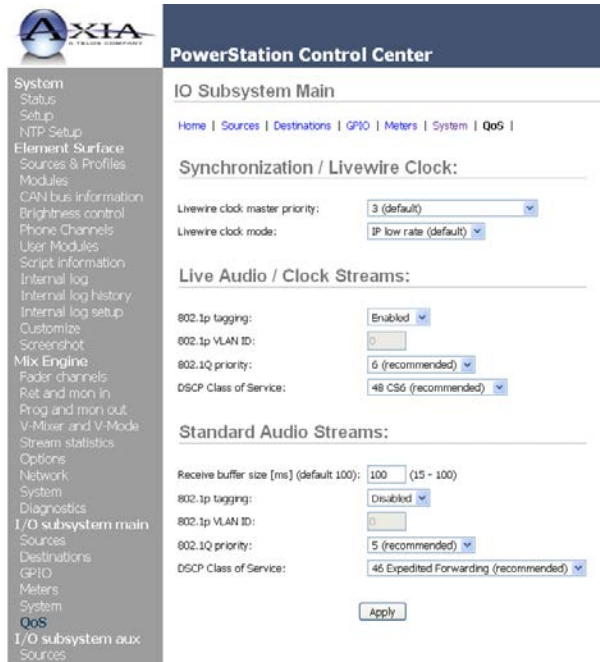


Fig. 10-9: Audio I/O Subsystem - QoS and Clock

device is unavailable, another Livewire device will automatically and seamlessly assume the master clock function. Most engineers prefer the master clock function to reside in their central equipment room so it is common for any studio devices, such as the PowerStation, to be set at clock master priority level 3 (default) With this setting, the PowerStation will normally be a clock slave however if it should ever lose the connection to the master clock, it will assume a local clock function and local audio will continue without interruption.

Clock mode should always be set at the default of **IP Low Rate** unless directed otherwise by Axia Support.

- **Live Audio/Clock Streams:** 802.1p tagging should always be enabled for Live Audio and clock streams. This is a way of marking all high-priority packets. The VLAN ID is not set at the device level but rather at the port of the Ethernet switch. For this reason, the VLAN ID setting is greyed out. The 802.1Q priority for all Live streams is set at 6 and there is not a need to change this unless requested to do so by Axia

tech support. The DSCP Class of Service setting should be left at 48 unless changes are requested by tech support.

Default settings are:

- » 802.1p tagging - enabled
- » VLAN ID - 0
- » 802.1Q priority - 6
- » DSCP Class of Service - 48

- **Standard Audio Streams:** Standard streams have higher latency than live streams and require different settings. As with live streams, all defaults should be accepted unless changes are requested by Axia tech support.

Default settings are:

- » Receive buffer - 100 msec
- » 802.1p tagging - disabled
- » VLAN ID - 0
- » 802.1Q priority - 5
- » DSCP Class of Service - 46

Ethernet Switch settings

The PowerStation MAIN contains an integrated Ethernet switch. This switch manages the multicast functions of the PowerStation and enables it to be connected to other PowerStations and other Livewire devices via your managed Livewire LAN.

Options

This screen has Spanning Tree and port settings.

- **Port Configuration:** Allows you to select from one of three different modes for the two gigabit ports on the switch. Options are:
 - » **Access** - normally used for connections to other Livewire devices
 - » **Trunk** - used for the connections to a core Ethernet switch or other PowerStations.
 - » **Access STP port fast** - may optionally be used when you connect up to four PowerStations in a ring configuration. By selecting this mode, the normal STP logic is reversed. The port is allowed to start sending packets immediately, and loop discovery is done in parallel. There

is a risk of short-term flooding so this option should be used with extreme caution.

- **STP Configuration:** You can enable or disable Spanning Tree Protocol and specify a bridge priority value (0 to 32768)

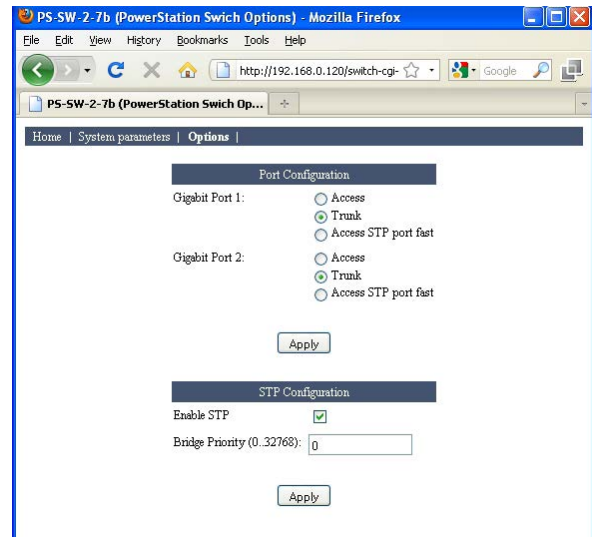


Fig. 10-10: PowerStation MAIN Switch - Options

- » **Enable STP** - (Spanning Tree Protocol) used only when you are connecting multiple PowerStations (maximum of 4) in a loop configuration.
- » **Bridge Priority** - can be used to assign “root” priority to devices that are connected in a loop. A lower number indicates a higher priority. Your network administrator should be consulted if you think you need to make changes to the default setting.

System Parameters

As described previously in this manual, it is recommended that all IP address information be entered in the PowerStation main Setup menu. IP addresses are automatically assigned to the IO Subsystems and Ethernet switch. If you make a change in this section, it may be over-written the next time the PowerStation is restarted.

- **Host Name:** You should enter a short, logical name here to describe the PowerStation switch. We suggest you include something to indicate the room or studio where the unit is located.

- **Network Address:** Do not change - this address is automatically assigned during boot-up.
- **Netmask:** Do not change - this value is automatically assigned during boot-up.
- **Gateway:** Do not change - this address is automatically assigned during boot-up.
- **Syslog Server and Severity Filter:** This section also includes the syslog server IP address and syslog level settings. Under certain circumstances, Axia tech support may request that you collect logs of system activity. Otherwise, the syslog settings should be left at default settings.
- **User Password:** The user password may be changed here. Be sure to record any changes you make to the default user password (which is blank). It is difficult for anyone to help you out if the password is not known.

Be aware that making changes to device passwords after your PathfinderPC server has been configured is going to make your life more complicated. We encourage you to make password changes at the beginning of your setup or leave the passwords at the default value.

- **Firmware Version:** This section is where you will update the firmware for the Switch section of the PowerStation. As with most other Axia devices, there is provision for two different versions of firmware. The Switch will reboot when the version is changed.

What's Next

Congratulations! There's no test at the end of this manual, but if there was one you'd surely pass it. There is more great information on specific topics in the Appendices - feel free to check them out too.

If you have spotted any errors or omissions in this manual, we want to hear about them so we can make necessary changes in the next manual update. Thanks for your participation and thanks for choosing Axia. 🌀

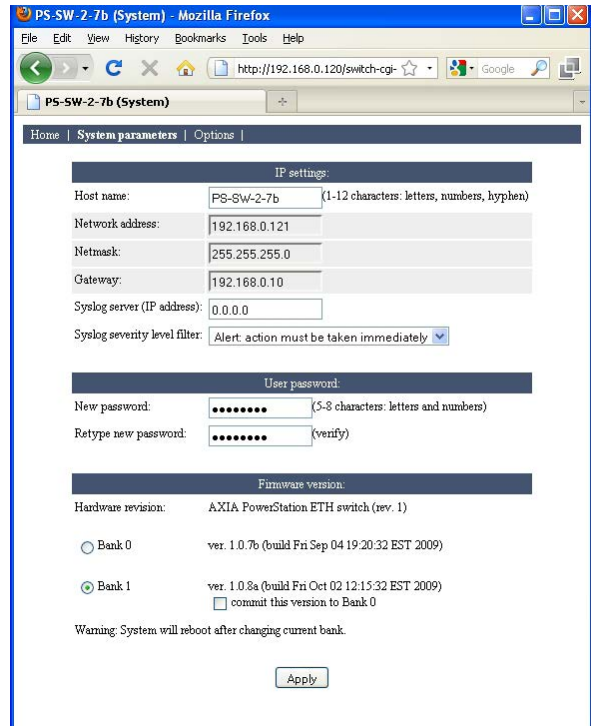


Fig. 10-10: PowerStation MAIN Switch - System

Appendix A:

Specifications

Microphone Preamplifiers

Source Impedance: 150 ohms
Input Impedance: 4 k ohms minimum, balanced
Nominal Level Range: Adjustable, -75 dBu to -20 dBu
Input Headroom: >20 dB above nominal input
Output Level: +4 dBu, nominal

Analog Line Inputs

Input Impedance: >40 k ohms, balanced
Nominal Level Range: Selectable, +4 dBu or -10dBv
Input Headroom: 20 dB above nominal input

Analog Line Outputs

Output Source Impedance: <50 ohms balanced
Output Load Impedance: 600 ohms, minimum
Nominal Output Level: +4 dBu
Maximum Output Level: +24 dBu
Digital Audio Inputs and Outputs
Reference Level: +4 dBu (-20 dB FSD)
Impedance: 110 Ohm, balanced (XLR)
Signal Format: AES-3 (AES/EBU)
AES-3 Input Compliance: 24-bit with selectable sample rate conversion, 32 kHz to 96kHz input sample rate capable.
AES-3 Output Compliance: 24-bit
Digital Reference: Internal (network timebase) or external reference 48 kHz, +/- 2 ppm
Internal Sampling Rate: 48 kHz
Output Sample Rate: 44.1 kHz or 48 kHz
A/D Conversions: 24-bit, Delta-Sigma, 256x oversampling
D/A Conversions: 24-bit, Delta-Sigma, 256x oversampling
Latency <3 ms, mic in to monitor out, including network and processor loop

Frequency Response

Any input to any output: +0.5 / -0.5 dB, 20 Hz to 20 kHz

Dynamic Range

Analog Input to Analog Output: 102 dB referenced to 0 dBFS,
105 dB "A" weighted to 0 dBFS
Analog Input to Digital Output: 105 dB referenced to 0 dBFS
Digital Input to Analog Output: 103 dB referenced to 0 dBFS, 106 dB "A" weighted
Digital Input to Digital Output: 138 dB

Equivalent Input Noise

Microphone Preamp: -128 dBu, 150 ohm source, reference -50 dBu input level

Total Harmonic Distortion + Noise

Mic Pre Input to Analog Line Output: <0.005%, 1 kHz, -38 dBu input, +18 dBu output
Analog Input to Analog Output: <0.008%, 1 kHz, +18 dBu input, +18 dBu output
Digital Input to Digital Output: <0.0003%, 1 kHz, -20 dBFS
Digital Input to Analog Output: <0.005%, 1 kHz, -6 dBFS input, +18 dBu output

Crosstalk Isolation, Stereo Separation and CMRR

Analog Line channel to channel isolation: 90 dB isolation minimum, 20 Hz to 20 kHz
Microphone channel to channel isolation: 80 dB isolation minimum, 20 Hz to 20 kHz
Analog Line Stereo separation: 85 dB isolation minimum, 20Hz to 20 kHz
Analog Line Input CMRR: >60 dB, 20 Hz to 20 kHz
Microphone Input CMRR: >55 dB, 20 Hz to 20 kHz

Audio Processing

Equalizer
Frequency Bands: 20Hz to 320Hz, 125Hz to 2KHz, 1.25KHz to 20KHz.
Cut/Boost range on each band: -25dB to +15dB.
Q-factor: Automatic - bandwidth varies based on amount of cut or boost.

Compressor

Threshold: -30dB to 0dB Ratio: 1:1 to 16:1
Post-processor Trim Level: Adjustable from -20dB to +20dB

Expander/Noise Gate

Threshold: -50dB to 0dB Ratio: -30dB to 0dB

De-esser

Threshold: -20dB to 0dB Ratio: 1:1 to 8:1

Power Supply AC Input, Audio Node

(Analog, AES/EBU, Microphone, Router Selector)

Auto-sensing supply, 90VAC to 240VAC, 50 Hz to 60 Hz, IEC receptacle, internal fuse
Power consumption: 30 Watts

Power Supply AC Input, GPIO Node

Auto-sensing supply, 90VAC to 240VAC, 50 Hz to 60 Hz, IEC receptacle, internal fuse
Power consumption: 33 Watts

Power Supply AC Input, StudioEngine

Auto-sensing supply, 90VAC to 240VAC, 50 Hz to 60 Hz, IEC receptacle, internal fuse
Power consumption: 100 Watts

Power Supply AC Input, Element Power Supply/GPIO

Auto-sensing supply, 90VAC to 240VAC, 50 Hz to 60 Hz, IEC receptacle, internal fuse
Power consumption: 150 Watts

Power Supply AC Input, PowerStation Aux & Main

Auto-sensing supply, 90VAC to 240VAC, 50 Hz to 60 Hz, IEC receptacle, internal fuse
Power consumption: 500 Watts

Operating Temperatures


-10 degrees C to +40 degrees C, <90% humidity, no condensation

Dimensions (HxWxD) and Weight

Microphone node: 1.75 x 19 x 10 inches, 6 pounds
Analog Line node: 1.75 x 19 x 10 inches, 6 pounds
AES/EBU node: 1.75 x 19 x 10 inches, 6 pounds
Router Selector node: 1.75 x 19 x 10 inches, 6 pounds
GPIO node: 3.5 x 19 x 13 inches, 8 pounds
Studio Mix Engine 3.5 x 19 x 15 inches, 10 pounds
PowerStation Main/Aux: 7 x 19 x 15.5 inches (behind rail)
Front panel extends 2.25 inches in front of rack rail
PowerStation Main: xx.x pounds
PowerStation Aux: xx.x pounds

Table of Inputs and Outputs

| <u>Main Outputs</u> | <u>Type</u> | <u>Comments</u> |
|---------------------------------------|--------------------|--|
| Program 1 | Stereo | Main stereo bus (Usually referred to as Program) |
| Program 2 | Stereo | Second stereo bus (Sometimes referred to as Audition) |
| Program 3 | Stereo | Third stereo bus (Sometimes referred to as Utility) |
| Program 4 | Stereo | Fourth stereo bus (Sometimes referred to as Auxiliary) |
| Program 4 Record | Stereo | Fourth stereo bus variation (post fader, pre on/off) |
| Program 4 Phone | Mono | Fourth stereo bus variation (pre fader, pre on/off) |
| <u>Aux Inputs and Outputs</u> | | |
| <u>Aux Inputs and Outputs</u> | <u>Type</u> | <u>Comments</u> |
| Aux Send A Output | Stereo | Aux send bus can be used for processing or independent mixes |
| Aux Send B Output | Stereo | Aux send bus can be used for processing or independent mixes |
| Aux Send C Output | Stereo | Aux send bus can be used for processing or independent mixes |
| Aux Send D Output | Stereo | Aux send bus can be used for processing or independent mixes |
| Aux Return A Input | Stereo | Allows processing to be folded back into a mix |
| Aux Return B Input | Stereo | Allows processing to be folded back into a mix |
| <u>Monitor-related Outputs</u> | | |
| <u>Monitor-related Outputs</u> | <u>Type</u> | <u>Comments</u> |
| Monitor 1 | Stereo | Control room monitor speakers, source and level controlled by Element Monitor 1 control |
| C/R Monitor Direct | Stereo | Control room monitor output, source same as Monitor 1, fixed level output |
| Main Headphone | Stereo | Control room (board op) headphone, source and level controlled by Element headphone control |
| Monitor 2 | Stereo | Studio monitor speakers, source and level controlled by Element Monitor 2 control |
| Studio Headphone Talent | Stereo | Studio (talent) headphones, source same as main, fixed level output, with talkback |
| Studio Headphone Guest | Stereo | Studio (guest) headphones, source same as main, fixed level output, no talkback |
| Preview | Stereo | Allows the connection and level control of external powered speakers. |
| Talk to External | Mono | Allows board operator mic to talk to other devices, a logic command is associated |
| Talk to CR Audio | Mono | Allows the Talk to CR audio mix to drive an external destination |
| <u>Monitor-related Inputs</u> | | |
| <u>Monitor-related Inputs</u> | <u>Type</u> | <u>Comments</u> |
| External Preview Input | Stereo | Allows an external path into the preview speakers, a logic command is associated |
| External Monitor Input 1 | Stereo | Allows an external source to be monitored by c/r or studio selectors |
| External Monitor Input 2 | Stereo | Allows an external source to be monitored by c/r or studio selectors |
| <u>Source Inputs</u> | | |
| <u>Source Inputs</u> | <u>Type</u> | <u>Comments</u> |
| Microphone Input <i>n</i> | Mono | Typical installations have 4 or 8 microphone sources per studio |
| Analog Line Input <i>n</i> | Stereo | Typical installations have 16 analog line sources per studio |
| Digital Line Input <i>n</i> | Stereo | Typical installations have 16 digital line sources per studio |
| <u>Source-related Outputs</u> | | |
| <u>Source-related Outputs</u> | <u>Type</u> | <u>Comments</u> |
| Feed-to-Source A <i>n</i> | Mono | Mono mix-minus output feeds the left side of a stereo connection. "Talk to..." function enabled. |
| Feed-to-Source B <i>n</i> | Mono | Mono mix-minus output feeds the right side of a stereo connection. "Talk to..." function disabled. |
| Individual Hphone Feed <i>n</i> | Stereo | Individual headphone feed (for talent and guest mics) with *Talk to x* function enabled. |

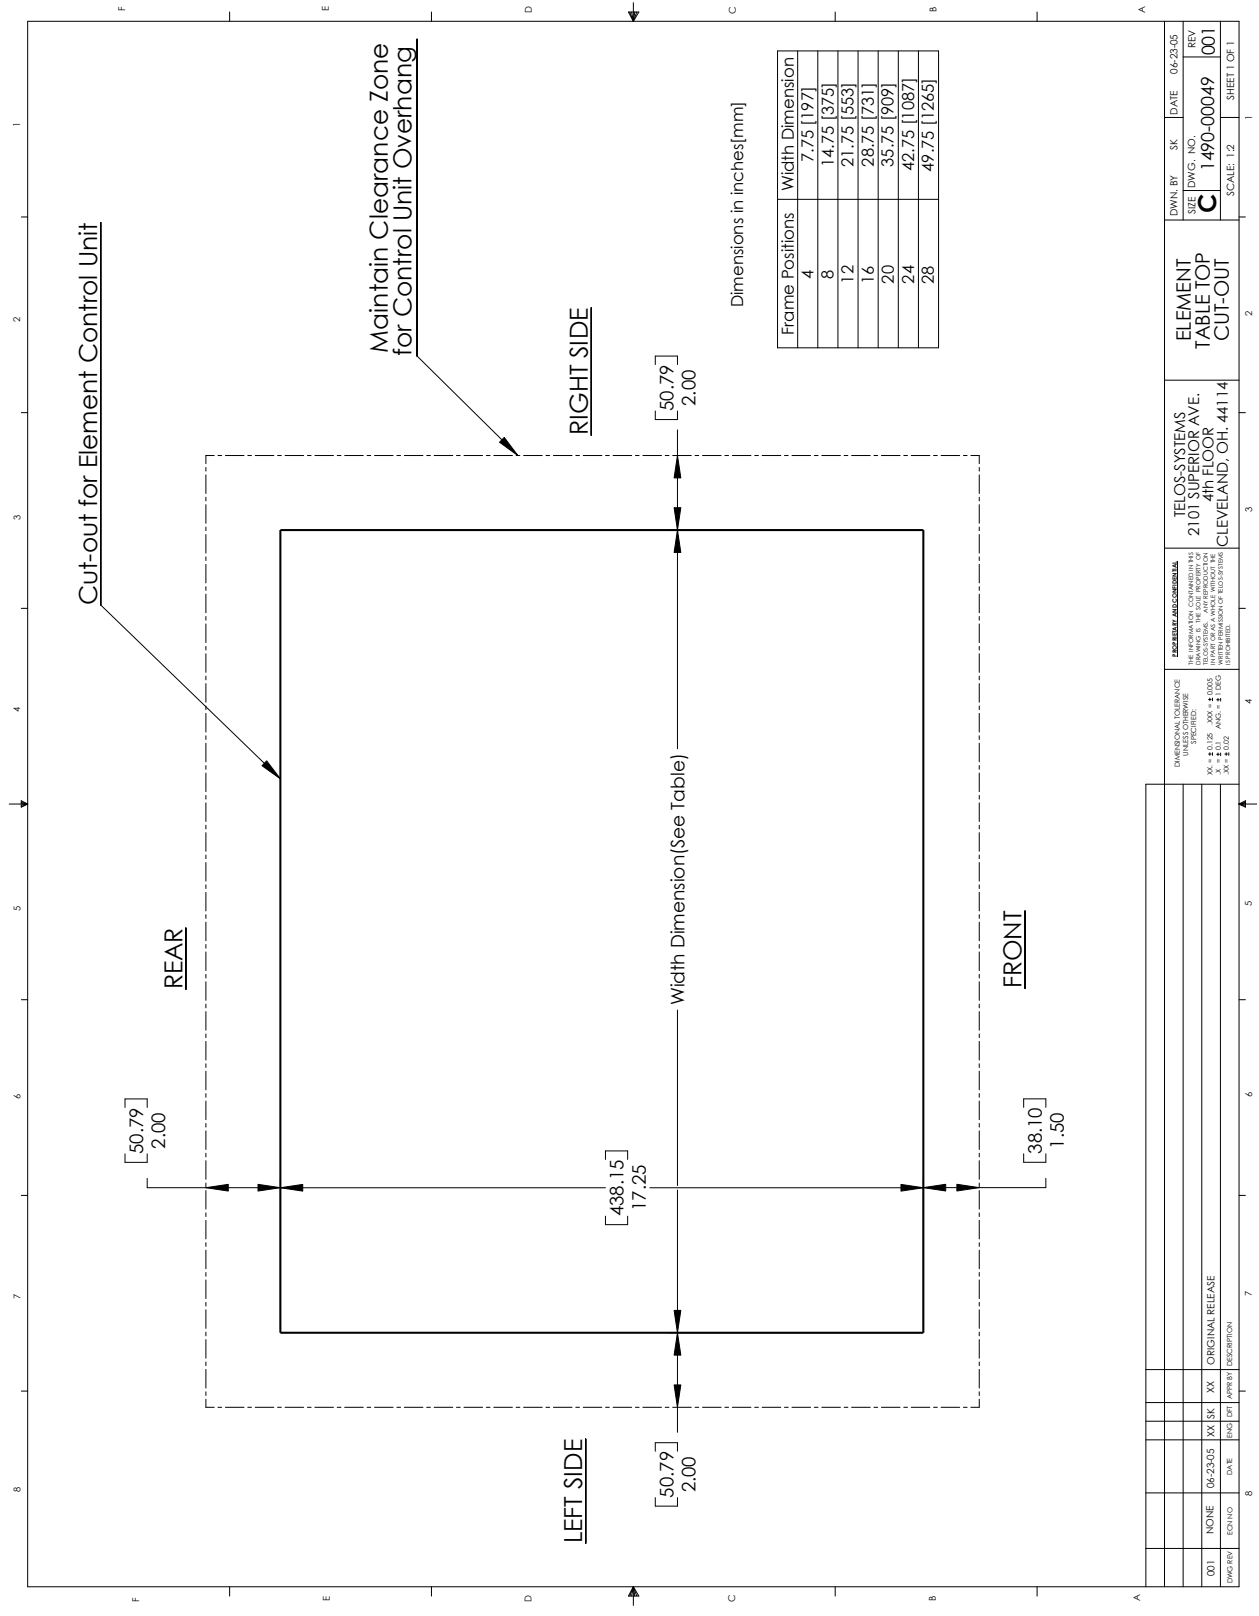

| | | | | | | |
|---------|---------|----------|----|-----|-----|------------------|
| 001 | NONE | 06-23-05 | XX | SK | XX | ORIGINAL RELEASE |
| DWG REV | ETCHING | DATE | BY | CHK | APP | DESCRIPTION |

UNLESS OTHERWISE SPECIFIED:
 X = 1/8" (3.175)
 Y = 1/16" (1.575)
 Z = 1/32" (0.7875)
 UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE TO BE SHOWN UNLESS OTHERWISE SPECIFIED.

TELOS SYSTEMS
 2101 SUPERIOR AVE.
 4TH FLOOR
 CLEVELAND, OH. 44114

ELEMENT TABLE TOP CUT-OUT

| | | | |
|----------|------------|-------|----------|
| DRAWN BY | SK | DATE | 06-23-05 |
| SHEET | DWG. NO. | REV | |
| C | 1490-00049 | 001 | |
| | SCALE: 1:2 | SHEET | 1 OF 1 |

Dark, dark as coal tar
it pours out, bitter and strong.
That's Starbucks for you.

Appendix B: CE Declaration of Conformity

Supplementary Information for European Users



Declaration of Conformity

Application of Council Directives: 93/68/EEC (CE Marking); 73/23/EEC (safety low-voltage directive); 89/336/EEC (electromagnetic compatibility).

Standards to which conformity is declared: EN50081-1, EN50082-1.

Manufacturer's Name: Axia, TLS Corporation

Manufacturer's Address: 1241 Superior Avenue, Cleveland, Ohio, USA

Type of equipment: Audio Mixing Surface

Model No.: Element

Serial No.: _____

Year of Manufacture: 2005

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.

Place: Cleveland, Ohio, USA 44114

Date: October 30, 2005

Signature: _____ (on file) _____

Full Name: Michael Dosch

Position: President

CE Mark Conformance

October 30, 2005

Axia, TLS Corp.

1241 Superior Avenue

Cleveland, OH 44114 USA

Supervision and summary by: _____

Michael Dosch

1.0 Introduction

1.1 Scope This record is intended to document the Axia Element audio mixing surface conformance with Council Directives: 93/68/EEC (CE Marking); 73/23/EEC (safety-low voltage directive); 89/336/EEC (electromagnetic compatibility).

CE Mark Conformance, Cont'd

Testing was conducted during the period September 22 - October 19, 2005.

1.2 Purpose Testing was performed to evaluate safety, emissions and immunity, conformance to enable CE marking.

1.3 Conclusions The Element audio control surface was found to be compliant and CE marking was applied to the product.

Conformity is declared to the standards: EN50081-1, EN50082-1.

2.0 HF Radiated Emissions

2.1 Standards Applied The unit was laboratory evaluated according to standard: EN50081-1 using Measurement Document: EN55022, Class B.

2.2 Testing The unit was tested and evaluated by: Smith Electronics*

2.3 Test Results The unit was found to be in conformance for both radiated and line-conducted emissions.

3.0 Immunity

3.1 Standards Applied

3.1.1 ESD Susceptibility Measurement Document: IEC 1000-4-2 (IEC 801-2). Immunity to static electricity.

3.1.2 Radiated Susceptibility - HF Electric Field Document: IEC 1000-4-3 (IEC 801-3).

3.1.3 Conducted Susceptibility - Power Line Measurement Documents: Burst/Transients: IEC 1000-4-4 (IEC 801-4), Surge: IEC 1000-4-5 (IEC 801-5) Voltage Fluctuations: IEC 1000-4-1 (IEC 801-1)

3.2 Testing

3.2.1 ESD Immunity The unit was tested and evaluated by: Smith Electronics*

3.2.2 Radiated Immunity - RF Electric Field The unit was tested and evaluated by: Smith Electronics*

3.2.3 Conducted Immunity - Power Line Testing to IEC 801-4 was conducted by: Smith Electronics*

*Smith Electronics
8200 Snowville Rd.
Cleveland, OH 44141 (USA)



CE Conformance

This device complies with the requirements of EEC Council Directives 93/68/EEC (CE Marking); 73/23/EEC (safety low-voltage directive); 89/336/EEC (electromagnetic compatibility). Conformity is declared to the following standards: EN50081-1, EN50082-1.

Appendix C: FAQ / Diagnostics / Maintenance

This appendix contains answers to some frequently-asked Element setup questions, and some troubleshooting procedures intended to determine if factory service is needed. These procedures are not intended to take the place of a conversation with Axia support personnel; should you need to contact us for support, please use the contact information listed on Page iii of this manual.

Q: How do I set the IP address of Element? Press and hold the **Fader Options** key (or * and 4 and 7 keys) located on the upper right of the Master Module for 5 seconds; the connected VGA screen will display the IP Address Book.

Q: The Element web interface asks me for a password, but I haven't set one.

Element can be password protected to discourage tampering. By default, the user name is “user” and there is no password.

Q: I just added a new module to my Element and the module display reads INACTIVE. What do I do?

When new modules are added to Element, you must notify the housekeeping system that they're there by using “Capture Mode.” To do this, press and hold the * and 2 keys located next to Element's control knob on the Master Module. After five seconds, the console will enter “Capture Mode” and the new modules will be activated — you'll know because all module alpha displays read **Capture Mode**. To exit “Capture Mode”, press the **Enter or #** key, also located next to the Control knob. Your new modules are now ready to use.

Q: I get a “Page Not Found” error when I try to connect to Element using my Web browser. What's wrong?

It's possible that your computer's network configuration needs adjustment. Livewire networks do not assign IP addresses dynamically (DHCP), so double-check to see if your computer is actually a part of the

network — that its network adapter has a valid IP address and the proper subnet mask value assigned. Assuming your computer is running Windows, you can view these settings using a utility called IPCONFIG.EXE. Here's what to do:

1. Double-check Element's IP address — press and hold the ***, 4 & 7** keys (*+I+P) for 5 seconds, until the IP Address Book appears on the display screen. The IP address and subnet mask values are displayed.

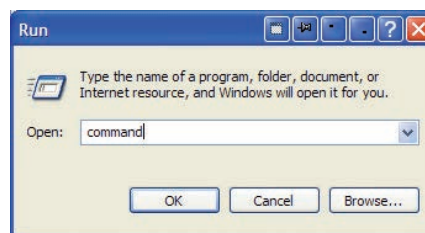


Figure C-1: starting a command box

2. On your Windows computer, click on the **Start** button and choose **Run...** from the menu. In the box that appears, type “command” (or “cmd”) to start a DOS command box, then click the **OK** button.

1. A black box with white type will appear. Type **ipconfig** in the box, and press the “Enter” key. You'll be rewarded with a screen that looks like this: The screen displays your computer's IP address, Subnet Mask and Gateway settings. Write these down and compare them to those previously obtained from your Element.

Explanation: The **IP address** is usually expressed as four decimal numbers, each representing eight bits, separated by periods. This is known more technically as “dotted quad notation.”

An IP address has two parts: the identifier of a particular network and an identifier of the particular device (which can be a server or a workstation) within that network.

Since networks vary in size, there are four dif-

ferent address formats or classes you can use to construct them. We recommend that Livewire networks be constructed as **Class B** networks to allow enough unique device addresses for expansion.


To learn more about IP addressing and network construction, we recommend reading Cormac Long's excellent 4-part [IP Network Design](http://tinyurl.com/64bb5), available at <http://tinyurl.com/64bb5>.

- Write down the values displayed and type "exit" to close the DOS command box. Compare the two IP addresses to be certain that your computer is on the same network as your Element; in a Class B network, this means that the first six digits of the IP addresses *must match*. If they do not, change the IP address of your computer's Network Interface Card. Consult your Operating System's documentation for specific instructions on how this is done. Also compare the Subnet Mask values; these must be exactly the same on both your computer and your Element. If they are not, change your computer's Subnet Mask settings to match that of Element.

Note that changing a computer's IP settings and/or Subnet Mask settings often requires a reboot before those settings take effect.

Once your computer is using the same IP network address and subnet as your Element, you should be able to access your Element's web page. If you've confirmed network settings and still cannot access your Element, "Ping" the Surface to determine whether it is responding to your requests. Here's how:

- Use the **Run...** command previously described to open a DOS command box. At the command prompt, type **ping xxx.xxx.xxx.xxx** (where *x* represents Element's IP address).
- If your Element is responding to commands, the **ping** command will produce a

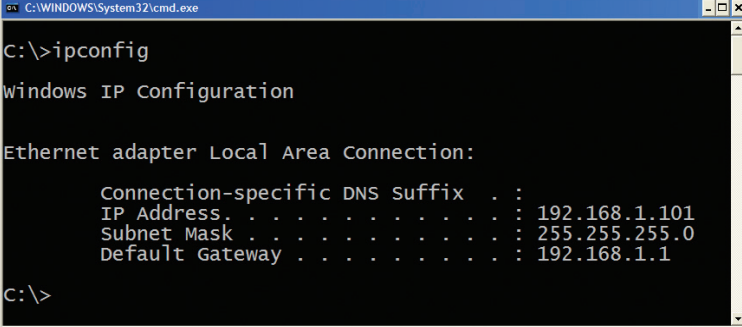

```
C:\WINDOWS\System32\cmd.exe
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:


    Connection-specific DNS Suffix  . : 
    IP Address. . . . .               : 192.168.1.101
    Subnet Mask . . . . .            : 255.255.255.0
    Default Gateway . . . . .        : 192.168.1.1

C:\>
```

Figure C-2: IPCONFIG command displays computer's IP settings

screen resembling Figure C-3.

Results like these, showing packets sent and returned, indicate that your Element is active and responding to requests. However, if the **ping** command produces results like those in Figure C-4, your Element is not responding and must be restarted. Dis-

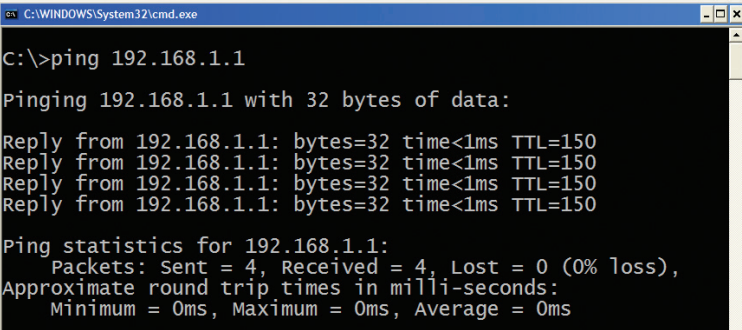

```
C:\WINDOWS\System32\cmd.exe
C:\>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:


Reply from 192.168.1.1: bytes=32 time<1ms TTL=150
Reply from 192.168.1.1: bytes=32 time<1ms TTL=150
Reply from 192.168.1.1: bytes=32 time<1ms TTL=150
Reply from 192.168.1.1: bytes=32 time<1ms TTL=150

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\>
```

Figure C-3: Successful PING. Element is responding normally.

connect the Element power supply from the mains, wait 1 minute, then restore power. If this doesn't solve the problem, you may not have your computer and Element on the same LAN or VLAN. Try connecting the two directly with an Ethernet crossover cable (for greater detail on cable diagrams, read the

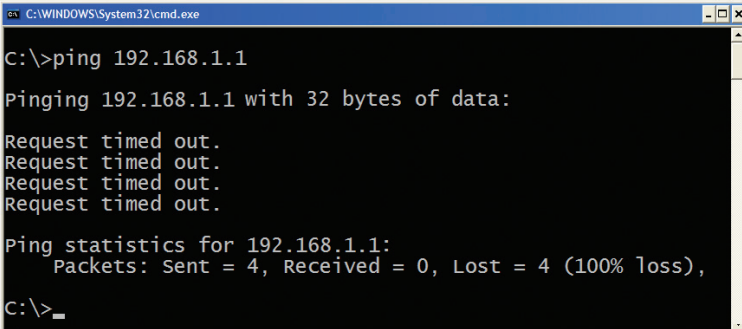

```
C:\WINDOWS\System32\cmd.exe
C:\>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),

C:\>
```

Figure C-4: PING command showing unresponsive Element

Introduction to Livewire: System Design Reference and Primer, which can be downloaded from: <https://www.telosalliance.com/Axia>.)

Q: I don't see the meter displays in my Web browser when I open the pages for my Audio Nodes.

The web pages use Java to render the meter displays. First, double-check your browser options to confirm that Java is enabled, and turn it on if necessary. If Java is not installed on your computer, you will need to install it. Download the free Java installer from <http://www.java.com> and follow the instructions to install Java; once installed, the meter displays should be visible in your Web browser.

Q: How do I set the time on the Element?

Press and hold the **Timer Options** key on the Master Module. After five seconds, the Clock & Timer Options key will be displayed. All clock adjustments may be made from this screen.

Q: My Element GPIO/Power Supply/CPU doesn't boot and just beeps when I plug it in. What do I do?

The Element CPU (non-PowerStation version) currently uses a VIA EPIA ME6000 mainboard with Award BIOS. If your Element CPU cannot boot, the computer tries to tell you what is wrong using POST codes (an acronym for "Power-On Self Test").

Award states that the only POST code their BIOS uses is one long beep and then two short beeps, which indicate a graphics card problem. The reason that only one POST code is used, according to Award, is that the BIOS will attempt to display error codes for other, non-video-related problems on-screen if at all possible. If the BIOS cannot initiate the display adapter, it issues the POST code for a display error, which must be corrected before any other errors can be determined.

However, some other POST codes are known to exist. Consult the table that follows.

| POST Code | Error |
|------------------------|---|
| 1 Long, 2 Short | Video card error — replace or re-seat the card. |
| Repeating beeps | Memory Error — Memory is either damaged or badly seated |
| Repeating Hi/Low beeps | Damaged or overheating CPU |
| High-frequency beeps | Overheating CPU |

Jostling in transit has been known to loosen the edge-connected cards used in Element's CPU. If you hear only a POST code beep upon plugging in your CPU, disconnect power, remove the screws from the top of the Element GPIO/Power Supply and remove and re-seat all cards found on the internal mainboard; typically, this will solve the problem. If it does not, please contact Axia support for further assistance.

Installing A New Module

Adding a module to Element is a very simple, straightforward procedure, but some minor disassembly of the surface will be necessary if the new module is accompanied by an overbridge alphanumeric display.

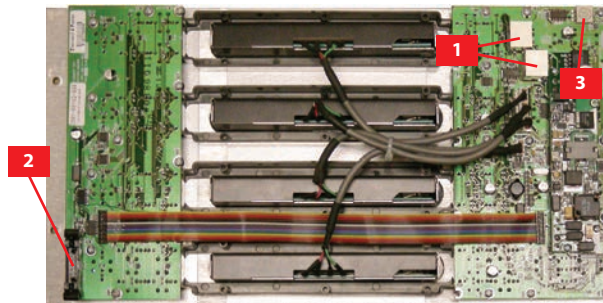


Figure C-5: Underside of module showing (1) RJ45 connectors, (2) display panel connector, and (3) module ID encoder.

Before beginning the installation, inspect your new module. Take note of three features on the underside of the module: the RJ45 connectors, the ribbon cable connector for the overbridge alpha display panel, and the module ID encoder. (Note that not all modules require an overbridge display and thus a ribbon connector will not be present.)

Your module kit will contain some or all of the fol-

lowing items:

- » The specified module
- » An overbridge alphanumeric display panel
- » An overbridge window for the display panel
- » A ribbon connector
- » A 1-foot RJ45 patch cable

If you believe any of these items are missing, please contact Axia Support immediately.

Tools you'll need for module installation are:

- » A #1 Philips-head screwdriver
- » A 2.5 mm. hex wrench
- » A $\frac{5}{64}$ " jeweler's screwdriver

Before beginning, you'll need to set the ID for your new module. Each Element module must have a unique ID. A quick way of choosing an ID is to count how many modules are installed on your Element; typically the factory installs modules with IDs set in numerical order from left to right (Master Modules should always have their ID set to "0"; more on this later). So, if you have 4 factory-installed modules in your Element, you can safely set the ID of your new module to "5". To set the module ID, use a jeweler's screwdriver to gently rotate the indicator (shown in Figure C-7) to the desired number.

To begin installation, remove the blanking panel occupying the position you wish to install your new module into. Use the hex wrench to remove the hex-head screw(s) at the top of the panel.

If your new module has an accompanying overbridge display, you will need to remove one of Element's end-

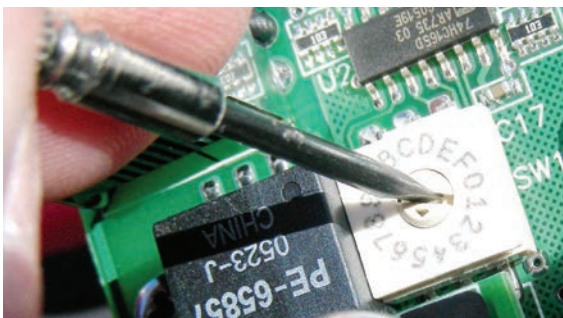


Figure C-7: Setting the module ID

panels in order to insert it. Ascertain which end panel is closest to the position your new module will be mounted in; this is the one you'll remove.

There are eight machine screws that hold each Element end panel to the frame: 5 in the "bucket" and 3 under the overbridge (shown in Figure C-8, below). To access these screws, you'll need to remove the module closest to this end panel and tilt the overbridge forward..

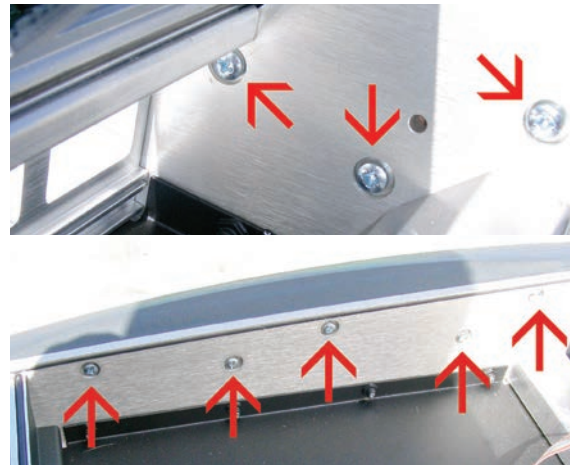


Figure C-8: Locations of end-panel fastening screws in the overbridge compartment (above) and in the "bucket" (below).

Once the screws are removed, the end panel pulls off easily. Note the locating hole in the end panel that receives the overbridge hinge pin.

If there are any overbridge displays between the end of the overbridge and the position in which you'll be mounting your alpha panel, you must remove them. To do so, remove the ribbon connector from the circuit board by gently pushing the two "ears" on each side of the connector socket. This will eject the connector.

Note: Ribbon connectors must be connected to the alphanumeric panels "tail-down", that is, with the ribbon emerging from the **bottom** of the connector.

You may now slide the disconnected alpha panels out of the overbridge mounting channel, along with the blanking panel occupying your new display's position.

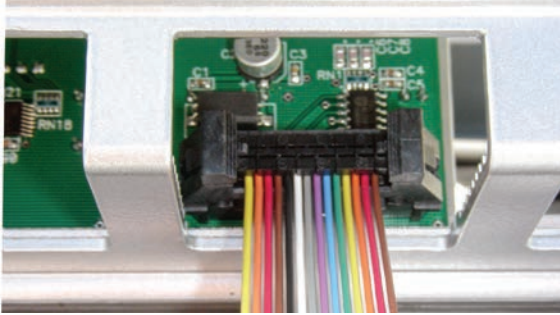


Figure C-9: Location of alpha display ribbon connectors as seen from rear of overbridge

Carefully slide your new alphanumeric panel into the mounting channel. Note that the metal portion of the display has rounded edges which fit into the round frontmost channel; the circuit-board portion of the display **must** have its top and bottom edges located in the **first groove** behind the round channel.

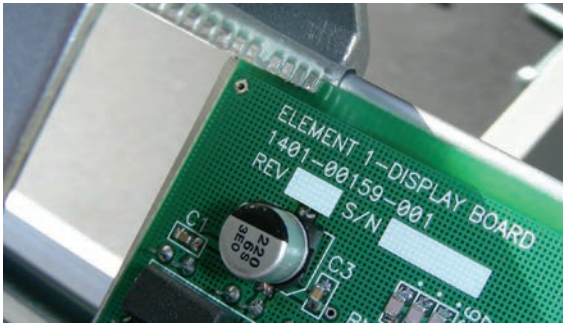


Figure C-10: Detail of overbridge mounting channel

After all of the overbridge panels have been located in the mounting channel, reconnect their ribbon cables. Connect the ribbon cable that came with your new display, and thread it from the overbridge into the “bucket” through the passage provided.

Re-mount the end panel, taking care to locate the overbridge hinge pin in the hole provided.

Now, connect the RJ45 patch cable supplied in your module kit to any free jack on Element’s connection panel, located in the center of the overbridge compartment.

Note: You’ve probably noticed that 4-space modules have **two** RJ45 connectors on their undersides. These are “daisy chain” connectors; if all of the jacks on your Element’s connection panel are in use, you can connect a new module

to the unused jack on any other module.

Connect the other end of the patch cable to the RJ45 connector located on the bottom of your new module, connect the alpha display ribbon connector.

Note: Ribbon connectors must be connected to the modules “tail-up”, with the cable emerging from the connector toward the **top** of the module.

Your new module should look as shown in Figure C-11. Once all cables are connected, seat the module in the frame and secure it with the provided 2.5 mm hex-

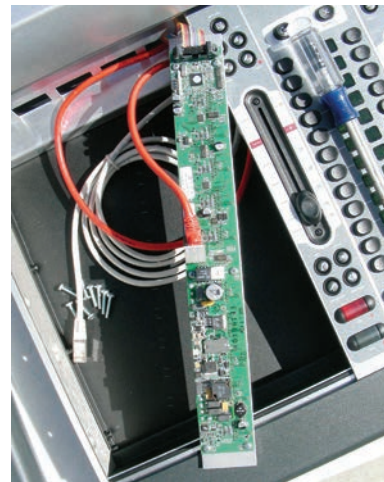


Figure C-11: Reverse view of connected module. Note ribbon cable is connected “tail-up”.

head screws.

Replace any other modules you may have removed, and secure them as well.

The final step in the module installation process is to “capture” the new console configuration. To enter Capture Mode, press and hold the * and 2 keys on the Master Module for 5 seconds. The alphanumeric displays will change to read **Capture Mode**; this enumerates all of the installed faders in the control surface. Press the **Enter** or # key to exit Capture Mode; your new module is



Figure C-12: Alpha display indicates Capture Mode

active and your Element is ready to use.

Module Diagnostics

Element software contains a hidden routine that allows you to perform fader, lamp and alphanumeric display diagnostics on each module should you suspect that one of these items requires service.

To enter the diagnostic mode (Standard Monitor module only), press and hold the * and 2 and # keys found on Element's Monitor Module for 5 seconds.

Upon entering the lamp diagnostic mode, the monitor connected to Element will display an initial screen with a list of all installed modules (as shown in Figure C-13). You'll see a description of the type of each module; preceding the description are a set of numbers in brackets.

To begin fader diagnostics, use the Arrow keys to highlight the fader you wish to test and press the Enter key. You will see, onscreen, a graphical representation of the selected module's controls, including faders, lighted selection keys and on/off switches.

In the first phase of the test, all of the module's lamps are lit and you are instructed to turn each one off. This serves as a combination lamp and switch test.

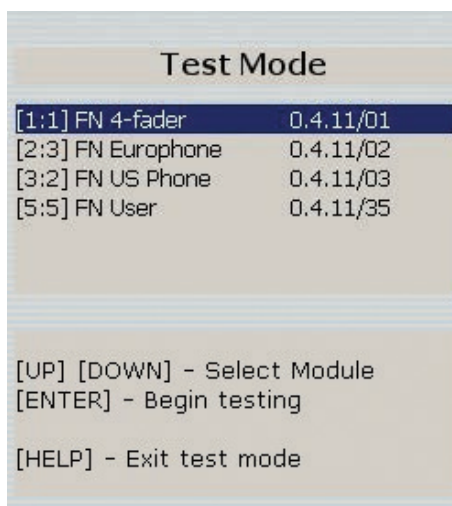


Figure C-13: Module diagnostic selection

When the lamp/switch test is complete, you'll be prompted to perform a fader operation test. As you move the faders on the module being tested, you will see their onscreen images move as well, and the alpha displays on Element itself will display changing encoder values as the faders are moved.

When you have finished testing a module, you have

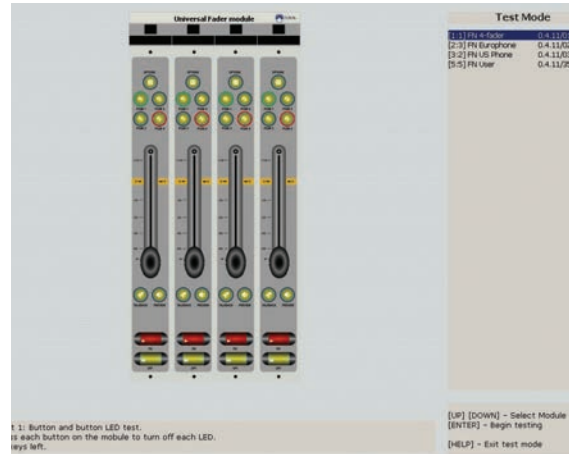


Figure C-14: Module lamp test

the option of testing other modules, or of exiting the test routine.

Fader Cleaning Procedures

Element's single-element, conductive-plastic faders were chosen for their long life and reliable operation, but jocks will be jocks: it's inevitable that sooner or later you'll need to pull a fader for cleaning.

There are no replaceable parts in the faders used in Element. If fader movement has become rough, either the lubricant on the glide rails has evaporated or foreign material has gotten into the fader. **Dow Corning 510** is the preferred glide rail lubricant as it will not migrate to the contact fingers like other lubricating oils.

Element modules can be serviced "hot." If you disconnect a module, the StudioEngine will retain the faders' most recent settings until the hardware is recon-

nected.

Tools and supplies you will need to remove and service a fader:

- » A 1/16" hex wrench (for fader removal)
- » A 2.5 mm hex wrench (for module removal)
- » A jeweler's screwdriver (5/64" or smaller)
- » Cotton swabs
- » Dow Corning 510 lubricating oil

Fader Disassembly and Cleaning

1. Use the 2.5 mm hex wrench to remove the retaining screw(s) at the top of the module requiring service. With the screws removed, lift the module at the top, tilting it upward, and pull the locating tab at the bottom of the module from the mounting channel.
2. Turn the module over and locate the ribbon cable that connects the module to its overbridge display (if present). Gently press the "ears" on each side of the board connector to release the cable.
3. Locate and disconnect the RJ45 patch cable that connects the module to Element's connection panel.
4. Remove the four-conductor fader cable from the pins on the bottom of the fader (Figure C-16).
5. Now that the fader is disconnected, turn the module right-side up. Remove the knob from the fader to be serviced by pulling gently upward.
6. Using the 1/16" hex wrench, remove the two hex screws at the top and bottom of the fader slot. The fader will drop out from the bottom of the module.



Figure C-15: Tilt module up to remove from frame.

7. Lay the fader assembly on your work surface, la-

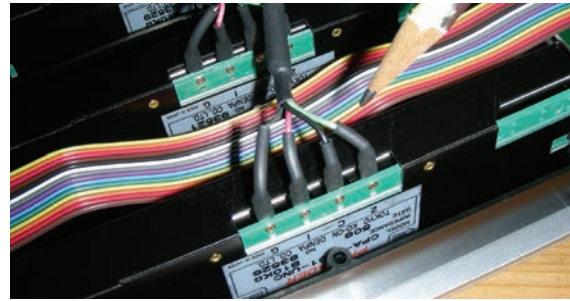


Figure C-16: Remove the fader connector cable

bel-side up. Remove the snap-on fader assembly cover; it's held in place by round stamped bosses at each end. With the fader sitting label up and the connector pins to the front, you'll see a pry-point on the right end of the fader cover (Figure C-17). Use a jeweler's screwdriver to gently pry off the cover.

8. Use a dry cotton swab, or a cotton swab wet with distilled water, to clean the fader parts.

Note: The use of chemical cleaners on the conductive plastic will substantially shorten fader life. Never touch the fader slider contact fingers while cleaning the fader parts.

Always use a clean dry swab to dry off the conductive plastic tracks after cleaning. If the fader rails are noticeably dirty, wipe them off using a dry cotton swab before lightly lubricating the top rail with Dow Corning 510.

If coffee, a soft drink or other sugared liquid has been spilled into the fader, remove it from the module as soon as possible and remove the

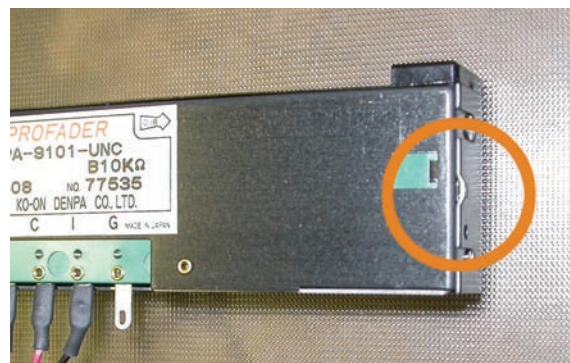


Figure C-17: Pry point on fader cover

top cover of the fader. Hold the fader under hot running water while moving the fader slider back and forth to dissolve the sugars and other chemicals. Thoroughly dry the rails and conductive plastic using dry cotton swabs and then lubricate the top fader rail with Dow Corning 510.

Lubricating the Glide Rail

Move the fader slider to the middle of its travel and place one drop of Dow Corning 510 lubricant on the top rail on either side of the fader slider bushings. Move the slider through its full travel to distribute the lubricant. Wipe off any excess lubricant from the rubber stops at each end of the glide rail. Normally only the top rail (the

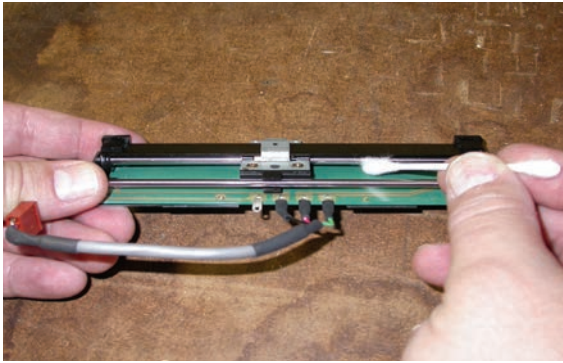


Figure C-18: Cleaning the fader glide rails

one the fader slider bushings glide on) requires lubricant.

Reinstalling The Fader

1. Snap the cover onto the fader body.
2. From below, reinsert the fader into position in the surface, taking care that the end marked ∞ is installed adjacent to the channel's **On / Off** keys.
3. Reinstall the hex screws from the top of the surface. Do not overtighten.
4. Press the fader knob firmly onto the stem.
5. Reconnect the fader leads to their mating pins on the bottom of the fader. The sequence is:
 - * Green wire to pin "2"
 - * Black wire to pin "C"
 - * Red wire to pin "1"
 - * Bare wire to pin "G"
6. Reconnect the RJ-45 patch cable and alpha panel

ribbon cable to the module.

Note: The ribbon connector must be connected to the module "tail-up", with the cable emerging from the connector toward the **top** of the module.

7. Lay the module into the frame, engaging the locating tab at the bottom of the module and tilting the top downward into the frame. Be careful not to pinch the ribbon cable between the module and frame.
8. Reinstall hex-head screw(s) at top of module.

Appendix D: Working With Phone Hybrids

One of the advantages of an Element/Livewire studio is the smooth integration of Telos telephone interface equipment with the mixing console. Element telephone control modules let you put the phone controls in front of the operator and near the associated faders. Mix-minus is handled naturally and automatically, without the need for the usual installation and operator contortions. And each fader channel has its own mix-minus capability, so you will never run out of busses.

Since advanced Telos telephone interfaces have Ethernet connections, they are easily connected to your studio network to be controlled by the Element phone modules. Sophisticated control signaling may then pass between the two systems without the need for the usual parallel connections.

But we recognize that not everyone owns a Telos phone system (even though we wish they did!), so we've included GPIO capability in Element to control simpler telephone equipment that does not have a Livewire interface.

This Appendix describes how to configure Element for use with Telos talkshow systems. The methods described here pertain to Element software v2.5.0, so you must have this software (or later) to use the features for these phone hybrids described here.

Telos VX Broadcast VoIP System

This section will help you configure your Axia Element console for use with the Telos VX broadcast VoIP telephone system. If you have not yet configured your VX system, please refer to the Telos VX User Manual to do so before proceeding.

You will need to know the following things in order to configure Element for use with your VX system:

1. The IP address of your VX Engine
2. The user name and password of your VX Engine
3. The name of the VX Studio you wish to connect to
4. The names and channel numbers of the VX hybrids and Livewire outputs you wish to use in-studio
5. *Optional, should you wish to load different VX Shows using your Element console:* the VX Show names you wish to load

Note for users of previous Element software versions: With v2.5.0 software, the way Element connects to Telos phone systems has changed. The major difference to Element / VX configuration is that the IP address of your VX system must be entered in the Phone section of your Element or PowerStation Show Profile, instead of in the Phone Channel section as was previously required.

In order to correctly control your VX, your Element and/or PowerStation must be upgraded with new software. Software packages that implement this change begin with the following versions:

- PowerStation: v1.1.3a
- Element: v2.5.0.3

To obtain the latest software, please visit <https://www.telosalliance.com/Axia> and follow the update instructions contained in the accompanying Release Notes prior to proceeding with this configuration document, if you have not already done so.

Connecting to VX

Open the Element's Module Manager/Phone Channels web page. If you have the Call Controller module installed, you will see the following at the top of the screen:

Phone channel configuration:

| ID | Module | Server Address | Login | Password |
|----|--------|----------------------|----------------------|----------------------|
| 1 | 3:4 | <input type="text"/> | <input type="text"/> | <input type="text"/> |

If you don't see this, or if the ID or Module information is incorrect, you will need to "Capture" your current module configuration. This is normally done at the factory, but if you have added the phone module yourself, you will need to execute the Capture so that the Element can "see" the newly added module.

To Capture, press and hold the Help key on Element's Navigation Module for 5 seconds, until CAPTURE appears in the source name displays. On the phone module, you will see the assigned ID number in the upper left line icon position. You can change this by pushing the adjacent line button. End Capture Mode by pressing the Enter key on the Navigation Module.

Configuring an Element Show Profile for use with VX

Note: Entry of your VX's IP address in Phone Channel screen is no longer required. (At present, this screen is left in the Element Control Center so that you can see the Connection status of your VX.) The VX IP address is now stored in Element's Show Profile settings, allowing you to create different show profiles that connect to different VX Engine studios and shows.

1. Enter your VX's IP address. Use your Web brows-

Figure D-1: Show Profile setup

er to navigate to Element's **Sources and Profiles -> Configuration -> Show Profiles** web page. Select the Element Show Profile you wish to configure, and click on **Phone**.

In the Phone URL field, enter the IP address of your VX. In the screenshot above, a VX IP address is shown as

vx:192.168.0.9

where 192.168.0.9 is the IP of a VX Engine. You can also specify a username and password if needed. (If you use the default settings, where the username is "user" and the password is empty, you don't need to enter anything.)

2. Configure your VX Studio and Shows. In the same screen where you entered VX IP number, you can enter a VX Studio name. In the Host /Studio Name: field, simply enter the studio name you used in your VX's configuration. In the example above, the VX Studio name is "Studio 1."

Studio Configuration

| Studio Name | Fixed Channels | Selectable Channels | Active Show | |
|--------------|----------------|---------------------|-------------|--------|
| Studio 1 | 4 | 4 | Show 1 | Delete |
| Load test #1 | 10 | 0 | No show | Delete |
| Load test #2 | 10 | 0 | No show | Delete |
| ISDN #1 | 0 | 2 | No show | Delete |

Figure D-2: Show Configuration screen

If you wish to change a VX Show using an Element Show Profile, simply specify the name of the VX Show you wish to load in the Show Name field. If you leave it empty, no VX Show will be changed, and whichever show is currently loaded will continue to be used. Leave the Show Password field empty. There are no passwords for Shows in the Telos VX.

3. Configure other options. Element's Call Controller module uses the left row of telephone line selection buttons to control Hybrid 1, the right row to control Hybrid 2. If you wish to use the right row of Call Controller buttons to control Hybrid 1 and the left row to control Hybrid 2, click the Reversed Hybrid box.

VX can be used in either 12 or 24 line mode. You can select either Auto, 12 Lines or 24 Lines with the Mode Selection radio buttons. In 12 line mode, 12 lines are displayed on both columns of the Call

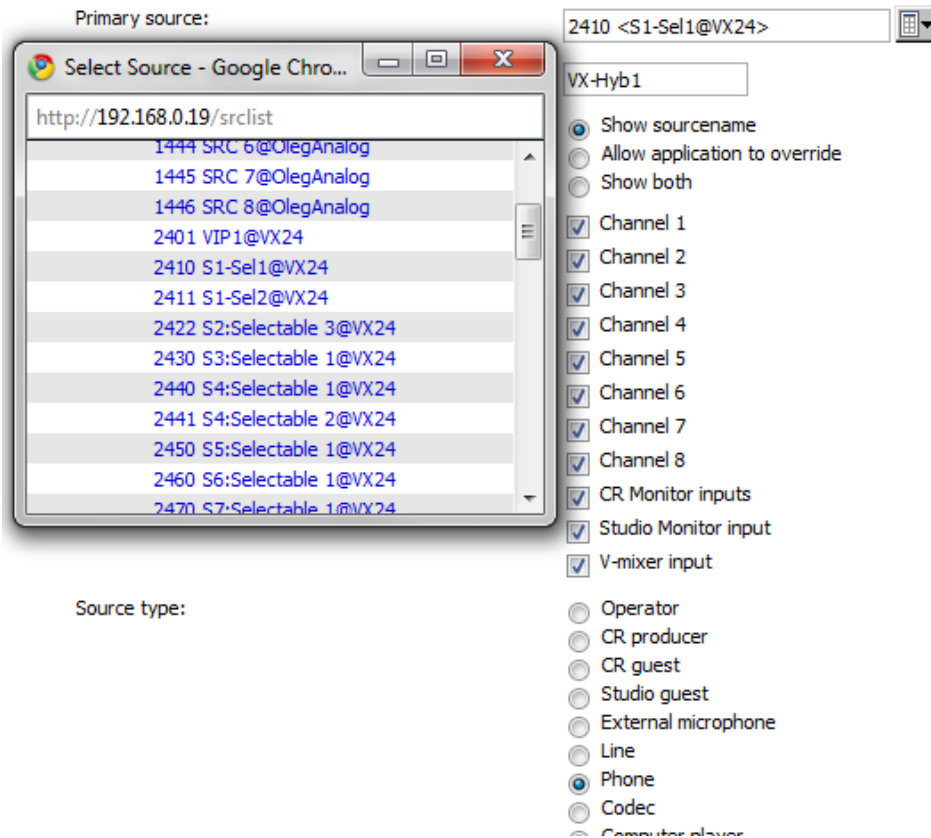


Figure D-3: Selecting a source

Controller module; the left key bank answers lines on Hybrid 1, the right keys answer lines on Hybrid2. In 24 line mode, both left and right key banks will answer lines using Hybrid 1. To answer lines on any other hybrid, operators will use the module's SET key to choose which hybrid to use. Selecting "Auto" uses the configuration of the VX Show to dynamically set the number of lines used.

4. Click "Save" when done. Note that after editing and saving a Show Profile, you must reload it from your Element console in order for changes to take effect.

Configuring an Element Source Profile for use with VX

In the Element Control Center, navigate to **Source Profiles**. Click **New Source Profile** and a source list window will appear as shown in Figure D-3; select the audio channel that you configured in VX Engine under Studio configuration. In the list, you should see a Livewire channel number and short description of the Hybrid; give it an Element source name, such as "VX-

Hybrid1," and select **Phone** for Source Type.

The Source Profile for the hybrid should be filled in as follows:

- Leave the **Phone hybrid IP** field empty.
- Leave the **Phone line** and **Phone hybrid (for NX12)** fields at their default value of "0."
- **Use 2nd show (split mode for NX12)** should be left unchecked.
- The **Phone Module ID** field lets you select from the multiple phone modules that you may have installed. Normally, you will have just one, so select 1 from the drop-down box.
- For **Hybrid Nr.** select the hybrid that cor-

responds to the Primary Source audio you selected above. Telos VX supports unlimited number of hybrids per studio. To find out what Hybrid number corresponds to the audio source you selected, go to the VX Engine/Studio configuration page and check the sequence number of the **Selectable LW** channel that you are using as the audio source here. The first Selectable LW channel counts as Hybrid 1.

- **Conferencing Allowed** lets you permit "button mash" conferencing. Unless you specially wish to prohibit this type of conferencing, select **Yes** from the drop-down box.

| | |
|---|---------------------------------|
| Phone hybrid ip: | <input type="text"/> |
| Phone line: | <input type="text" value="0"/> |
| Phone hybrid (for Nx12): | <input type="text" value="0"/> |
| Use 2 nd show (split mode for Nx12): | <input type="checkbox"/> |
| Phone Module ID: | <input type="text" value="1"/> |
| Hybrid Nr.(0 - None): | <input type="text" value="1"/> |
| Conferencing allowed: | <input type="text" value="No"/> |
| Fixed line (1 to 24, 0 - No): | <input type="text" value="0"/> |

Figure D-4: Show Configuration options

- **Fixed Line** lets you assign a line permanently to a specific fader channel, emulating a dedicated hybrid. Normally this is used with a 4-Fader Module. If you wish to use a Hybrid in this mode, specify one of your VX system’s “fixed” hybrids in the **Primary Source** field. In the VX Engine studio configuration, you configure both fixed and selectable hybrids; enter a Fixed Hybrid number in this field if you wish to associate this source with a Fixed Hybrid.

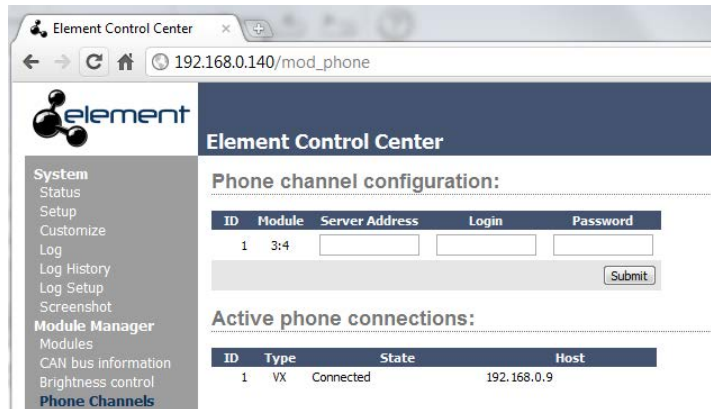


Figure D-5: Confirming VX Connection

The other fields in the **Source Profile** page are non-phone specific, and may be configured as you wish. Repeat this procedure to create a source profile for each hybrid in your studio.

You’ll now need to load the hybrid sources onto the fader channels. This can be done either manually, or automatically using Show Profiles. Naturally, we recommend that you make this assignment in each Show Profile which will use the phone system, since leaving manual assignment to air talent is asking for trouble!

For normal operation, you will assign Hybrid 1 to the left fader channel of the Call Controller, and Hybrid 2 to the right fader channel. Additional hybrids, if you have them, may be assigned to any channel on a 4-Fader Phone Module.

Note: Within Element, each incoming “phone” type audio source has an associated backfeed for automatic mix-minus generation. There are several user configuration options that affect which audio sources are fed to the hybrid under various conditions; please refer to the “Source Profile Options” and “Feed To Source Mode” options documented elsewhere in the manual.

Activate configuration

When you are done entering configuration, save your Show and Source profiles, and load one of your newly-edited Show Profiles to your Element console.

You can use the **Element Control Center Phone Channels** page to confirm your VX connection, as shown in Figure D-5.

Telos Nx12, Nx6, TWOx12 and Series 2101 Multi-Studio Talkshow System

This section will help you configure your Axia Element console for use with Telos IP-based telephone systems. You should use the procedures documented here only if:

- You have upgraded to Element v2.5.x software or Powerstation v1.1.3a or higher, and
- You are using Telos TWOx12, Nx12, Nx6, or Series 2101 talkshow systems.

To obtain the latest software, please visit <https://www.telosalliance.com/Axia> and follow the update instructions contained in the accompanying Release Notes prior to proceeding with this configuration document, if you have not already done so.

Note for users of previous versions: Starting with Element 2.5-series and Powerstation 1.1.3, a new and improved configuration method for connecting Element consoles to Telos phone systems which communicate via the legacy Telos “AP” protocol. This new method coincides with the introduction of the Telos VX VoIP talkshow system, as the code additions required to support the new VX control protocol allowed us to improve software and provide more flexibility for clients with earlier Telos equipment as well — specifically, for IP-connected TWOx12, Series 2101, Nx12 and Nx6 systems.

This new method lets you select control of a specific Telos phone unit in every Element Show profile, should you desire. For example, you

can configure a show profile named “WXYZ” and specify that it connect with an Nx12 that controls the call in lines wired directly to that unit. Another show profile, “WABC,” has settings to control an Nx6 handling POTS request lines wired to it. Using this new capability, you can define a different phone system to control for each Show Profile, if you wish, tailored to specific on-air needs.

You will need to know the following things in order to configure Element for use with your phone system:

1. The IP address of your Telos phone system(s)
2. The user name and password of your phone system(s)
3. The name of the phone system Show you wish to connect to.

Configuring the Element Show Profile

The major change to Element phone configuration is that the IP address of your Telos phone system must be entered in the Phone section of your Element or Power-Station Show Profile, instead of in the Phone Channel section as was previously required. The phone system IP address is now stored in Element’s Show Profile settings, allowing you to create different show profiles which connect to different Telos devices.

1. Enter the Telos phone system’s IP address. Navigate to Element’s **Sources and Profiles** page. Select the Element Show Profile you wish to configure, and click on **Phone**.

In the **Phone URL** field, enter the IP address of the Telos phone system you’re connecting to. The format begins with **ap:** (to define that you will be using the AP protocol) followed by a login, a password, and finally the IP address.

In Figure D-6, the user is *telos*, the password

is *telos* and the IP address follows, like so:

```
ap:telos@192.168.100.106
```

2. Configure the Show. In the same screen where you entered the IP address of your Telos phone system, enter the Telos Show running on that device. In the screenshot example, the show is called “Hybrid 1&2.” If the Nx12 was configured for two shows, another show could have been “Hybrid 3&4.” Refer to the configuration of your Telos device to determine which show name you need to enter into this field.

Possible shows from a Telos TWOx12 are “Hybrid1&2”, “Hybrid1”, and “Hybrid2”. Possible shows from an Nx6 or NX12 are “Hybrid 1&2”, “Hybrid 3&4”, and “Hybrid 1-4”. Telos Series 2101 show names are generated in the configuration of the system. Again, it is important that you refer to your Telos device to determine which show is running.

The **Host / Studio Name** field can remain blank.

A **Show Password** is used only if there is a password assigned to the Show of your Telos unit. Otherwise, leave this field blank.

3. Configure other options. Element’s Call Controller module uses the left row of telephone line selection buttons to control Hybrid 1, the right row to control Hybrid 2. If you wish to use the right row of Call Controller buttons to control Hybrid 1 and the left row to control Hybrid 2, click the **Reversed Hybrid** box.

Some Telos products provide support for up to 24 lines. You can select either **Auto, 12 Lines** or **24 Lines** with the **Mode Selection** radio buttons. In 12-line mode, 12 lines are displayed on both columns of the Call Controller module; the left key bank answers lines on Hybrid 1, the right keys answer lines on Hybrid 2. In 24-line mode, both left and right key banks will answer lines using Hybrid 1. To answer lines on any other hybrid, operators will use the module’s **SET** key to choose which hybrid to use. Select-

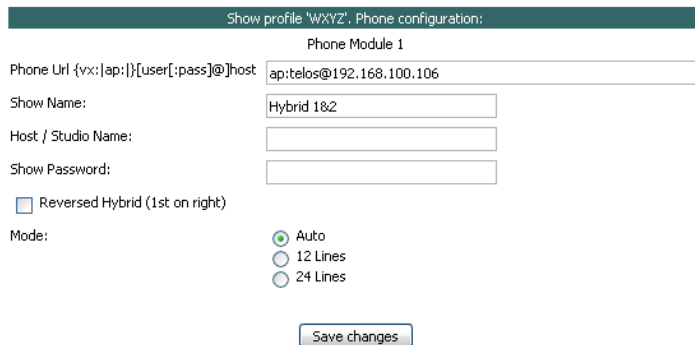


Figure D-6: Setting connections

ing “Auto” uses the configuration of the device to dynamically set the number of lines used.

4. Click “Save” when done. Note that after any changes made in the show profile pages, the show must be loaded (or re-loaded) from the Element surface in order for the new settings to become active.

Configuring an Element Source Profile

In the Element Control Center, navigate to **Source Profiles**. Click **New Source Profile** and, using the Primary Source drop-down box, select the audio channel that you configured in the Telos device. In the list, you should see a Livewire channel number and short description of the Hybrid; give it an Element source name, such as “Nx12 Call1,” and select **Phone** for **Source Type**.

The Source Profile for the hybrid should be filled in as follows:

- Leave the **Phone Hybrid IP** field empty.
- Leave the **Phone line** and **Phone hybrid (for NX12)** fields at their default value of “0.”
- **Use 2nd show (split mode for NX12)** should be left unchecked.
- The **Phone Module ID** field lets you select from the multiple phone modules, if you have more than one installed in your console. Normally, you will have just one, so select “1” from the drop-down box.
- For **Hybrid Nr.** select the hybrid that corresponds to the Primary Source audio you selected above. Typically this will be either a 1 or a 2.

Note: If using the second show of an Nx-series, the value of 1 is for Hybrid 3 (the first hybrid of the Hybrid 3&4 show) and the value of 2 is for Hybrid 4 (second hybrid of the show).

- **Conferencing Allowed** lets you permit “button mash” conferencing. Unless you specially wish to prohibit this type of conferencing, select **Yes** from the drop-down box.
- **Fixed Line** lets you assign a line permanently to a specific fader channel, emulating a dedicated hybrid. Normally this is used with a 4-Fader Module.

The other fields in the Source Profile page are non-

phone specific, and may be configured as you wish. Repeat this procedure to create a source profile for each hybrid in your studio.

You’ll now need to load the hybrid sources onto the fader channels. This can be done either manually, or automatically using Show Profiles. Naturally, we recommend that you make this assignment in each Show Profile which will use the phone system.

For normal operation, you will assign Hybrid 1 to the left fader channel of the Call Controller, and Hybrid 2 to the right fader channel. Additional hybrids, if you have them, may be assigned to any channel on a 4-Fader Phone Module.

Note: Within Element, each incoming “phone” type audio source has an associated backfeed for automatic mix-minus generation. There are several user configuration options that affect which audio sources are fed to the hybrid under various conditions; please refer to the “Source Profile Options” and “Feed To Source Mode” options documented elsewhere in the manual.

Call Controller Operation

The operation of the Call Controller is the same whether you are using a Telos Nx12 or 2x12 phone system. This section is not intended to replace the manual that came with your Nx12 or 2x12 but rather give you an overview of your phone system in the context of the Element.

On Element’s Call Controller Module, pressing any Line button either answers a call ringing-in or selects an inactive line to make an outgoing call; when an inactive line is “picked up” in this manner, the keypad located on the Element Navigation Module is active and can be used for dialing calls. You’ll see visual confirmation on Element’s display screen as you dial the number, and if caller ID is available, it is displayed after an incoming call is answered.

Useful Note: Pressing the pound key (#) after dialing a number will speed connect time by as

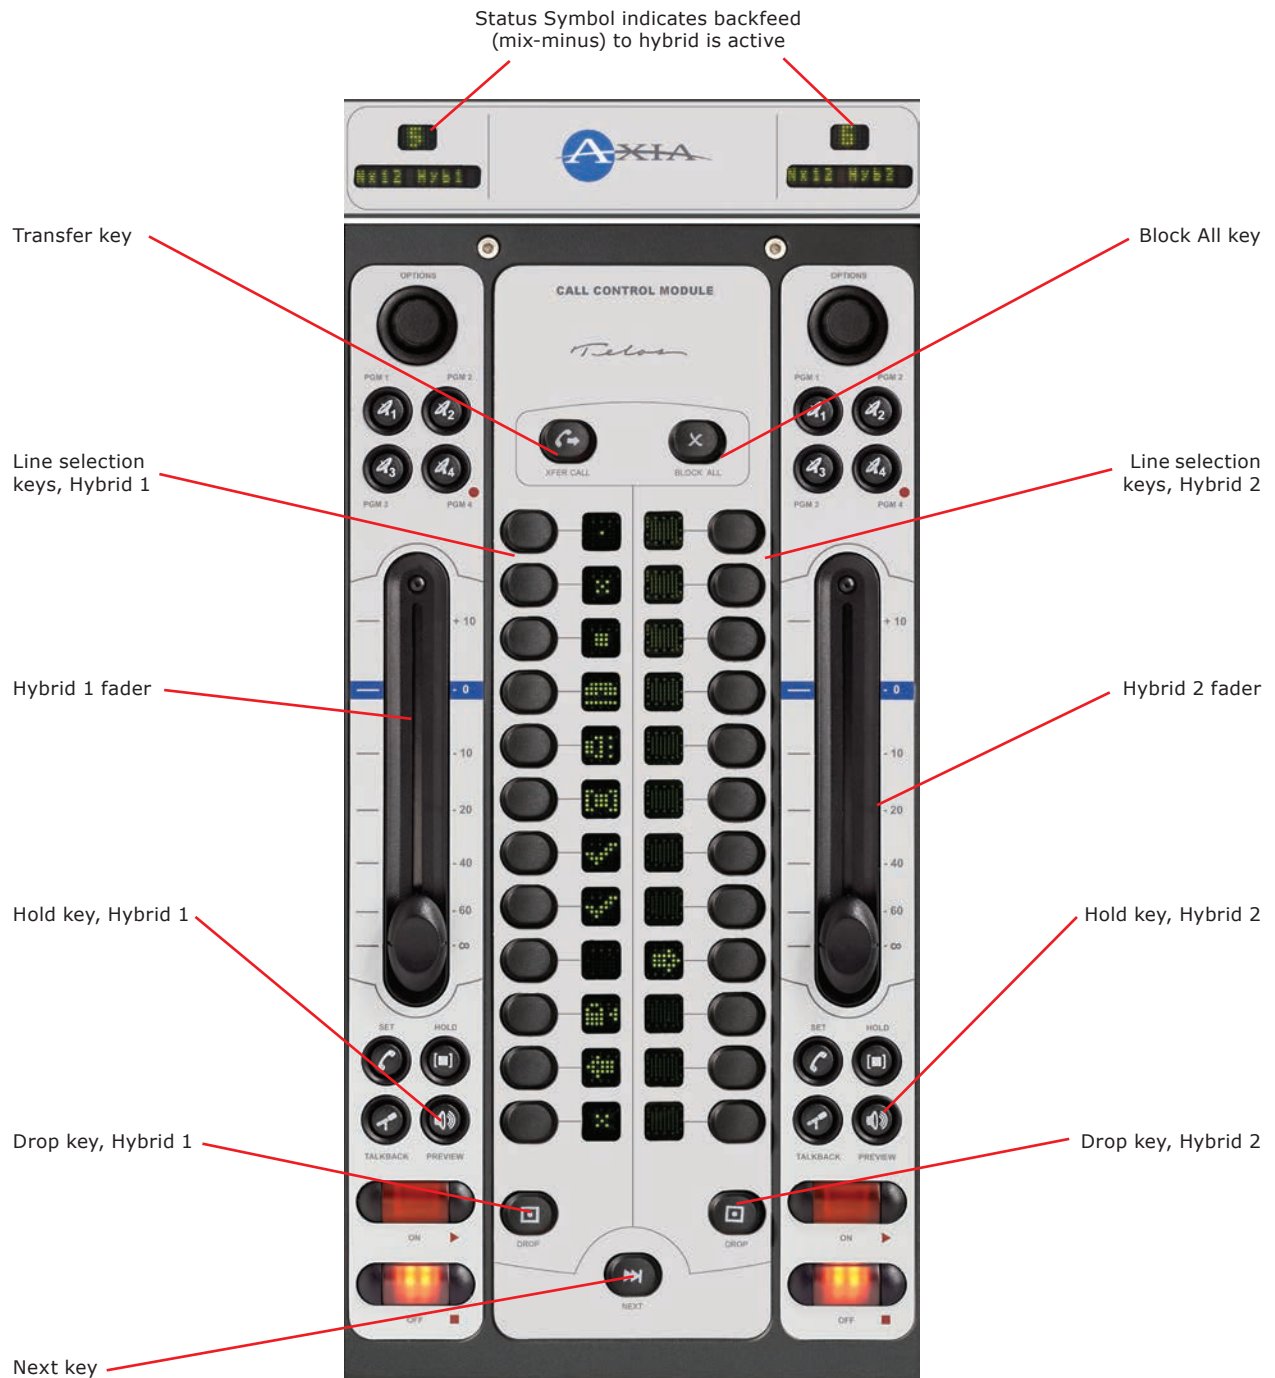


Figure D-7: Call Controller + 2-Phone Fader Module

much as 2 - 5 seconds! By default, the Telco's central office switch "listens" for a specified period of time after you dial a requested number, waiting in case you decide to dial more digits. Pressing the pound key tells the switch that the dialing sequence is complete, and bypasses this waiting period, connecting you quicker!

Pressing any **Line** key for a line that is already active causes it to be locked in this state (a Lock icon will appear in the Status Symbol window next to the locked line), so that additional lines can be selected without this or other locked lines being dropped. This is useful for making certain that lines on-air are not inadvertently dropped (such as when a talkshow guest is on a call-in line), or for "button mash" conferencing. To clear a locked line, press its **Line** button again; the Lock icon will disappear and the line can then be dropped, either by selecting another line or by pressing the **Drop** key.

Pressing the **Drop** key drops any non-locked lines on the associated line column.

Pressing the **Next** key takes the line that the Nx12 or TWOx12 system has determined to be next in the on-air queue for Hybrid 1. Normally, that is the line that has been on hold the longest. If there is no line on hold, pressing **Next** answers the line that's been ringing-in the longest.

Audio is normally routed to the fader channel adjacent to the **Line** key row. Pressing the **Hold** key on the fader channel puts the call on Hold, from where it can be retrieved from anywhere in the system. (The **Set** key on the fader channel is not used with the Nx12 or TWOx12, and pressing it has no effect.)

Block All puts the phone system into "Busy" mode. This is useful for clearing lines prior to contest call-ins. When you enter "Busy" mode, inactive lines are busied so that callers will receive a busy signal when they attempt to call-in. Lines that are active, i.e. on-air and on Hold are not affected by the **Block All** key; however, if these lines are dropped while Nx12 or TWOx12 is in "Busy" mode, these lines will be "busied out" as well. Note that "Busy" mode has no effect at all on lines which are designated as Hot or Warm Lines. To cancel "Busy"

mode, press the **Block All** key again; all busied lines will again be available for incoming callers.

The **Transfer** key activates the Transfer function within the Nx12 or TWOx12. Please refer to your Telos phone system documentation for more information on this feature.

Telos Two ISDN Hybrid

The Telos Two has an Ethernet connection for control, so it can be tightly integrated with the telephone control modules in the Element. It uses the 4-Phone Fader Module, which includes a Hold and Set button in addition to the usual complement. All control is via the Ethernet, so no GPIO connection is necessary.

The Telos Two can be configured for ISDN system hold or local hold. The first case is used when you want to be able to retrieve the call from another device sharing the ISDN line.

Installation and Configuration

The Telos Two needs to have software version 2.0.51p or later installed. The latest software is available on the Telos web site support page.

1. Connect your Telos Two to the Ethernet and assign it an IP number that is acceptable for use within your network.
2. Connect your ISDN telephone line to the Telos Two and confirm that it is working by checking the LCD status display.
3. Connect both Telos Two audio inputs and both outputs to an Axia Analog node. The hybrid inputs and outputs must be connected via analog since there is no way to separate the two hybrid back-feeds using the AES interface. Wiring to the left side of the two node inputs will accomplish our goal. Remember to set the Signal Mode to LEFT when creating the Source and Show Profiles.
4. Using the audio node's Source configuration web page, enter a text name and channel number for each input. It might be convenient to include the telephone

number as part of the text name. Configure for “Fast stream” audio mode.

5. On the node’s Destination configuration web page, select the *same channel number* for each output as was used for the corresponding input. Select “To source” for the Type. Configure for “Fast Stream” audio mode.
6. Open the Element Sources & Profiles Configuration web page. Choose Source Profiles, then Create New Source Profile. In your new source profile, choose the Primary Source that you entered in the audio node’s setup page. Give it an Element source name and select “Phone” for source type. Enter the phone hybrid IP address, including the hybrid number, in the form

xx.xx.xx.xx,n

where the “x”s represent the IP number, and the “n” represents the hybrid number.

The Telos Two has two hybrids, so you need to repeat this procedure to create another source profile for the second hybrid.

Important Note: The Telos TWO has an optional internal mix-minus cross-connect feature. Since Element provides this function automatically, you should disable this feature in the Telos TWO (set hybrid mode to “separate”) to prevent unexpected results.

Within Element, each incoming “phone” type audio source has an associated back-feed. There are some user configuration options that affect which audio sources are fed to the hybrid under various conditions, explained in the mix-minus/back-feed section of this manual.

Operation

Load your newly-created hybrid source on a 4-Phone Module fader. This can be done either manually or automatically using Show Profiles.

Pressing the fader channel **On** button answers a ringing-in call or selects an inactive line for an outgoing call. Pressing **Preview** has the same effect on the hybrid.

The keypad located on the Element Monitor module

can be used to dial outbound calls. It is automatically assigned to the last line that was selected. You’ll see the number as it is being entered on the main Element screen. After the number is complete, press the Enter button to start the connection.

Caller ID is displayed for incoming calls. The icon in the overbridge near the source text name changes to show the line status.

The first time you press the **Off** button, the channel audio is switched off. The second time you press the **Off** button, the call will be dropped.

Pressing the module’s **Hold** button puts the call on hold. (The **Set** button on 4-Phone Module channels is not used with the Telos Two, and pressing it has no effect.)

Telos One and Delta Hybrids

These hybrids can be controlled using Element’s hardware GPIO ports. Either normal 4-Fader Modules or 4-Phone Fader Modules may be used with these hybrids, although there is no benefit from the latter as the **Hold** and **Set** buttons have no function.

First, let’s set up GPIO connections. (Please refer to the GPIO section of this manual, or the Axia GPIO Node Manual, for pinout diagrams.)

1. Connect the GPIO START Pulse output to the hybrid’s “Line Take” pin, and the GPIO STOP Pulse output to the hybrid’s “Line Drop” pin. This will cause the **On** and **Off** buttons on the fader to which the hybrid is assigned to operate the hybrid remotely. Here’s a cable diagram:

Element-to-Telos ONE cable:

| Function | Element DB-15M | Hybrid DB-9M |
|----------|----------------|--------------|
| Common | 7 | 6 |
| On | 4 | 1 |
| Off | 5 | 7 |

Element-to-Telos Delta cable:

| Function | Element DB-15M | Hybrid DB-15M |
|----------|----------------|---------------|
| Common | 7 | 6 |
| On | 4 | 1 |
| Off | 5 | 7 |

2. Connect the hybrid inputs and outputs to an Audio node.
3. Using the Node's Source configuration web page, enter a text name and channel number for each input. It might be convenient to include the telephone number as part of the text name. Configure for "Fast Stream" audio mode.
4. Using the Node's Destination configuration web page, select the *same channel number* for each output as was used for the corresponding input. Select "To source" for the Type. This is how Element's automatic backfeed/mix-minus knows where the backfeed should be sent. Configure for "Fast Stream" audio mode.
5. Open the Element Sources & Profiles Configuration web page. Choose Source Profiles, then Create New Source Profile. In your new source profile, choose the Primary Source that you entered in the audio node's setup page. Give it an Element source name and select "Phone" for source type. Select a Hybrid Answer Mode of "Channel ON answers hybrid" or "Channel ON or Preview ON answers hybrid".
6. Open Element's Module Manager/GPIO Configuration web page. You will see the following:

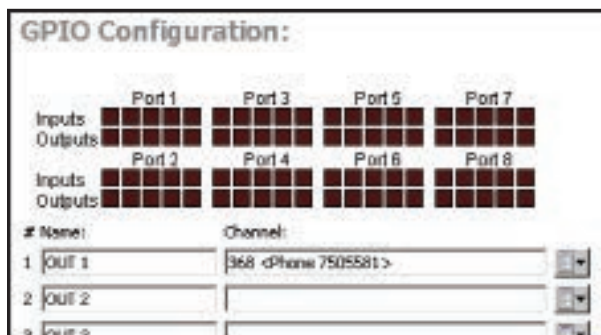


Figure D-8: GPIO setup

For the physical GPIO you will be connecting to the hybrid, enter or select from the drop-down box the Livewire source channel for the hybrid. Note the Livewire channel number and name are keys to the

GPIO as well as to audio signals. Element will generate the appropriate control signals for hybrids when Phone is selected as the source type.

The status display above the entry boxes show you the GPIO status and are useful for troubleshooting.

Operation

Load the hybrid source onto a fader channel. If you are using the GPIO to control the Hybrid functions for the Telos One or Delta hybrids, pressing the fader channel **ON** button turns the Hybrid ON, and pressing the **Off** button turns the Hybrid OFF.

Note: Dialing or generation of DTMF from the Element keypad is not supported for the Telos ONE.

Telos ONE-x-Six, Direct Interface and 1A2 Systems

To use these legacy hybrids, audio must be connected via Analog nodes. There is a special two-position control panel that can drop into Element to control ONE-x-Six, Direct Interface Module or 1A2 phone systems. This panel communicates directly to the phone systems using a dedicated cable rather than via Ethernet. Line Take and Drop functions cannot be controlled using GPIO on these systems, so the control surfaces supplied with the phone systems must be used to actuate these commands.

Installation & Configuration

1. Install the control module and connect it to the phone equipment.
2. Connect audio input, output, and Program-On-Hold to an Analog node. Use the left channel inputs and outputs for these mono signals.
3. Using the Analog node's Source configuration web page, enter a text name and channel number for each input. It might be convenient to include the telephone number as part of the text name. Configure for "Fast Stream" audio mode.
4. Using the audio node's Destination configuration

web page, select the *same channel number* for each output as was used for the corresponding input. Select “To source” for the Type and configure for “Fast Stream” audio mode.

5. Open the Element Sources & Profiles Configuration web page. Choose Source Profiles, then Create New Source Profile. In your new source profile, choose the Primary Source that you entered in the audio node’s setup page. Give it an Element source name and select “Phone” for source type. Set the default input mode to Left.

Operation

Load the hybrid source(s) onto the fader channels. Use the control surfaces directly connected to the phone system to select lines and place callers on the hybrids. Faders will not be controlled by the hybrids via GPIO and will need to be manually turned **ON** and **OFF** as needed.

Note: Dialing or generation of DTMF from the Element keypad is not supported for these legacy Telos phone systems.

*Mimicking nature,
streams combine to form anew
many become one.*

Appendix E: Accessory Panels and User Panels

Axia manufactures a comprehensive line of accessory control panels that can be placed near talent, host or producer positions to give non-board-op users convenient control over options such as headphone source selection and volume, mic channel on/off/mute, talkback and routing controls. These panels connect to the Axia network in two ways, depending upon their feature set: via GPIO, and via CANBus.



Figure E-1: Axia accessory control panels.

Panels requiring a CANBus connection require a cable connection to the nearest Element console. These include the Headphone Selector Panel, Mic Control/Headphone Selector Panel and the 4-button LCD Smart-Switch control panels.

Other panels require only a GPIO connection. These include the Mic Control Panel, Producer’s Mic Control Panel, 5-Button Film-Cap Switch Panel, and the 5-, 10- and 15-Button Rackmount Switch Panels.

Installing a CANBus Accessory Panel

Note: Before beginning installation, make certain that you have the latest software installed for your StudioEngine and Element console. Current version software is always available at <https://www.telosalliance.com/Axia>.

Pre-installation Hardware Check

Before installing your new panel, we need to perform a quick hardware check.

Open the overbridge panel on your Element and examine the Power Distribution Board (the one in the mid-

dle with all the RJ-45 connectors). Does one of the RJ jacks contain an RJ-45 termination device? If so, you are ready to install your accessory panel. Remove the terminator from the distribution board and set it aside for later.

If you do not see this terminator, please contact Axia support for more information.

Installation

User panels that connect via CANBus are much like Element fader modules, in that they require a unique ID setting in order for the system to recognize them correctly. Each Element module (and each CANBus accessory panel) has a multi-position rotary switch located on its circuit board; each device attached to an Element’s CANBus must have this switch set to a unique position.

To find out what ID assignments are free, enter Element’s diagnostic mode by pressing and holding the **Help** and **Right Arrow** keys on the Monitor Module for five seconds.

You’ll see a description of each installed module and accessory panel device; preceding the description are a set of numbers in brackets.

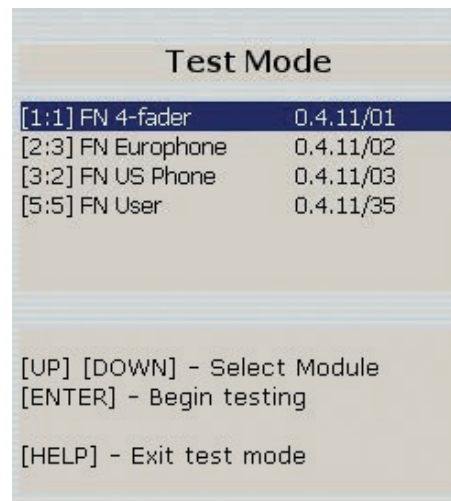


Figure E-2: Element diagnostic mode

The bracketed numbers refer to device type and ID number, respectively. The first digit identifies the type of device; the second digit the ID (controlled by the rotary switch). Select an ID for your new accessory panel by determining which IDs are not in use.

Now, using a small screwdriver, turn the switch on the bottom of the accessory panel to the ID number you've selected (as shown in Figure E-3).

Now, connect the panel to the Element CANBus using CAT-5e Shielded cable. Be sure to keep make the cable only as long as is required; 50 feet of cable for a panel located 10 feet from the console is excessive, and can cause problems later!

Shielded category cable is almost never required in an Axia system. However, we highly recommend shielded CAT-5e in this instance in order to prevent the digital control signals present in these circuits from generating RF interference after they exit the containment of the Element chassis. In a pinch, though, regular (unshielded) CAT-5e will work.

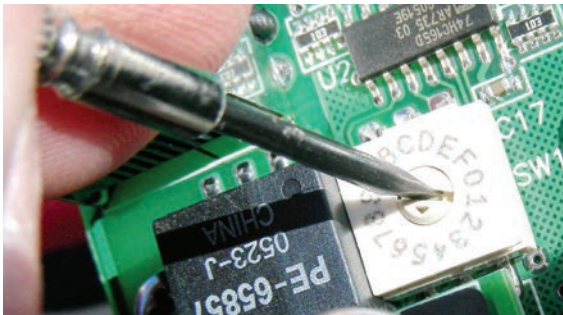


Figure E-3: Setting the ID number

Connect one end of the cable to the accessory panel you're installing, and the other end to the Power Distribution Board, using the jack you removed the termination block from.

If you have more than one accessory panel to install, connect it now to the second RJ port on the back of the first accessory panel. More panels can be daisy-chained as needed.

On the final accessory panel, place the termination block you removed from the Power Distribution Board

into the panel's spare RJ jack.

Once connected, your new accessory panel will be automatically recognized and ready to use. In the rare event it is not, please "capture" the console's new configuration, following the instructions in Chapter 1 of this manual.

Programming

Using a connected computer, log into your Element's configuration web pages and select the User Modules page. You'll see your new panel listed there.

- For panels with mic functions, enter the channel number of the mic source you want it to control.
- For panels with headphone functions, enter the channel number of the mic source that the headphone panel is adjacent to. The panel will control the headphone backfeed to that mic position.

Installing a GPIO Accessory Module

Installation

Accessory panels using GPIO connections are a straightforward installation using standard multiple-conductor cable and DB-15M connectors. You can fabricate this cable, or purchase one like the Cables To Go #02639, a 10-foot version available from Provantage, Best Buy or online from CablesToGo.com.



Figure E-4: Axia rackmount control panels connect via GPIO ports

Cables between the accessory panels and the Axia GPIO Node pin-for-pin, with male-to-male connectors.

Programming a Mic Control Panel connected to an Element GPIO Connection

This section applies when connecting a Mic Control accessory panel to the GPIO port of your Element Power Supply. It assumes you have already made the cable con-

nection described above in “Installation.”

Using a PC connected to the Axia network, enter the configuration page for your Element and select the GPIO Configuration section.

In the GPIO Configuration page, you will see eight listings that correspond to the eight ports that are on the back of the Element Power Supply. Create a name on the listing that corresponds to the port to which you wired your Mic Control Panel, and enter the channel number of the mic source you want it to control.

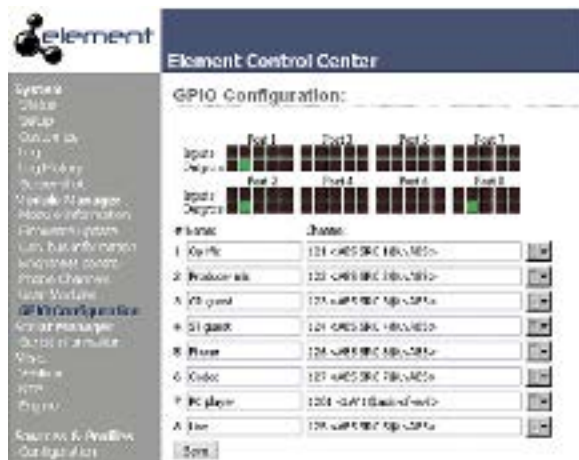


Figure E-5: GPIO status indications

Now, assign the Mic channel you’re working with to one of the channels of your Element. Navigate to the the Element GPIO Configuration page as shown in Figure E-5 above and observe the status indicators for the lights and input commands on your mic controller as you toggle the accessory panel from **On** to **Off**. Refer to the table in Figure E-6 for the Mic GPIO profile.

Programming a Mic Control Panel connected to a GPIO Node Connection

This section applies when connecting a Mic Control accessory panel to the GPIO port of an Axia GPIO Node. It assumes you have already made the cable connection described above in “Installation.”

Using a PC connected to the Axia network, enter the configuration page for the GPIO Node to which your accessory panel is connected.

Create a name on the listing that corresponds to the port to which you wired your Mic Control Panel, and enter the channel number of the mic source you want it to control.

Now, assign the Mic channel you’re working with to one of the channels of your Element. Navigate to the GPIO Node’s Configuration page and observe the status indicators for the lights and input commands on your mic controller as you toggle the accessory panel from **On** to **Off**. Refer to the table in Figure E-6 for the Mic GPIO profile.

Special Programming for Mic Control Panels

It is possible to connect the mic controller to a GPIO port either on a GPIO Node or on the Element Power Supply and program it using PathfinderPC logic control. For more information on this, please refer to the PathfinderPC User’s Manual.

| Inputs | Pin | Outputs | Pin | Power/Common | Pin |
|-----------------|-----|-----------------|-----|-----------------|-----|
| ON Command | 11 | ON Lamp | 1 | Source Common | 7 |
| OFF Command | 12 | OFF Lamp | 2 | Logic Common | 8 |
| TALK Command | 13 | TALK Lamp | 3 | +5 VDC | 9 |
| MUTE Command | 14 | MUTE Lamp | 4 | Input Common | 10 |
| <i>not used</i> | 15 | <i>not used</i> | 5 | <i>not used</i> | 6 |

Figure E-6 : GPIO pinout diagram for Mic profile

Meeting coffee, black.

Less Powerpoint, I beg you.

Must keep eyes open.

Appendix F: Channel / IP Worksheets

The scalable nature of Axia Livewire audio networks makes it possible to construct systems of any size - from a single room to an entire multi-studio facility.

Since Livewire components – Audio Nodes, Elements, StudioEngines, PowerStation, etc. – are connected with Ethernet, each one requires a unique IP (Internet Protocol) address. IP addresses are four bytes long and are written in “dotted decimal” form, with each byte represented decimally and separated by a period. For example, in the IP address 193.32.216.9, the 193 is the value for the first byte, 32 for the second, etc. Since a byte can hold values from 0 to 255, this is the range for each decimal value. If you run a public network, Host IP addresses are assigned to your organization by your internet service provider and parceled out to individual host computers by your network administrator. He may give you this number to be entered manually, or could opt for DHCP (Dynamic Host Configuration Protocol) to let your computer get the address automatically from a pool. Because Livewire devices are permanently attached and because it is more desirable to know the IP address attached to a particular node (and perhaps assign them in some kind of logical pattern), we do not support DHCP for our hardware nodes. Therefore, you will need to enter an IP address into each node.

Using the audio nodes, Livewire systems can support 32,766 channels of audio; this necessitates giving each audio source or destination its own unique identifier, called *Channel ID numbers*.

As you can imagine, keeping track of so many unique IP addresses and Channel ID numbers is a big job. Therefore, on the next few pages, we’ve provided you with worksheets that you can use to keep track of the numbers you’ve assigned.

A logical convention that is often followed will link the Livewire channel number to the last octet of the device IP address. For example, if a node has an IP address of 192.168.1.12, the channel numbers assigned to the 8 sources of that node might be 1201 through 1208.

For a more detailed explanation of IP addresses, subnet masks and related issues, we highly suggest that you refer to “Network Engineering For Audio Engineers”, Chapter 8 of our *Introduction to Livewire: IP Audio System Design Reference and Primer*.

Axia IP Address Assignment Worksheet

| <i>IP Address</i> | <i>Device Name</i> | <i>Location</i> | <i>Notes</i> |
|-------------------|--------------------|-----------------|--------------|
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |
| . . . | | | |

Warranty

Telos Alliance Limited Warranty

This Warranty covers “the Products,” which are defined as the various audio equipment, parts, software and accessories manufactured, sold and/or distributed by or on behalf of TLS Corp. and its affiliated companies, collectively doing business as The Telos Alliance (hereinafter “Telos”).

With the exception of software-only items, the Products are warranted to be free from defects in material and workmanship for a period of five (5) years from the date of receipt of such Product by the end-user (such date of receipt the “Receipt Date”). Software-only items are warranted to be free from defects in material and workmanship for a period of 90 days from the Receipt Date. Telos will repair or replace (in its discretion) defective Products returned to Telos within the warranty period, subject to the provisions and limitations set forth herein.

This warranty will be void if the Product: (i) has been subjected, directly or indirectly, to Acts of God, including (without limitation) lightning strikes or resultant power surges; (ii) has been improperly installed or misused, including (without limitation) the failure to use telephone and power line surge protection devices; (iii) has been damaged by accident or neglect. As with all sensitive electronic equipment, to help prevent damage and or loss of data, we strongly recommend the use of an uninterruptible power supply (UPS) with all of our Products. Telos products are to be used with registered protective interface devices which satisfy regulatory requirements in their country of use.

This Warranty is void if the associated equipment was purchased or otherwise obtained through sales channels not authorized by Telos.

EXCEPT FOR THE ABOVE-STATED EXPRESS WARRANTY, TELOS MAKES NO WARRANTIES, EXPRESS OR IMPLIED (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE).

In no event will Telos, its directors, officers, employees, agents, owners, consultants or advisors (its “Affiliates”), or authorized dealers or their respective Affiliates, be liable for incidental or consequential damages, or for loss, damage, or expense directly or indirectly arising from the use of any Product or the inability to use any Product either separately or in combination with other equipment or materials, or from any other cause.

In order to invoke this Warranty, the Product must be registered via Telos’ website (found at: <http://telosalliance.com/legal/warranty>) at time of receipt by end-user and notice of a warranty claim must be received by Telos within the above stated warranty period and warranty coverage must be authorized by Telos. Contact may be made via email: support@telosalliance.com or via telephone: (+1) 216-241-7225. If Telos authorizes the performance of warranty service, the defective Product must be delivered to: Telos, 1241 Superior Avenue, Cleveland, Ohio 44114 or other company repair center as may be specified by Telos at the time of claim.

Shipping Costs and Warranty Service:

If the date the customer's notice of warranty claim is received by Telos (such date the "Warranty Claim Notice Date") is within the first 90 days following the Receipt Date, Telos will pay the costs of shipping such warranted Product to and from the end user's location, and the cost of repair or replacement of such warranted Product.

If the Warranty Claim Notice Date occurs after the first 90 days following the Receipt Date and before the end of the second (2nd) year, the customer will pay the freight to return the warranted Product to Telos. Telos will then, at its sole discretion, repair or replace the warranted Product and return it to the end user at Telos' expense.

If the Warranty Claim Notice Date occurs between the end of the second (2nd) year following the Receipt Date and the completion of the fifth (5th) year, the customer will pay the costs of shipping such warranted Product to and from the end user's location. Telos will then, in its sole discretion, repair or replace the warranted Product at Telos' expense. Telos also reserves the right, if it is not economically justifiable to repair the warranted Product, to offer a replacement product of comparable performance and condition direct to the customer at a discounted price, accepting the failed warranted Product as a trade-in.

The end user will in all cases be responsible for all duties and taxes associated with the shipment, return and servicing of the warranted Product.

No distributor, dealer, or reseller of Telos products is authorized under any circumstances to extend, expand or otherwise modify in any way the warranty provided by Telos, and any attempt to do so is null and void and shall not be effective as against Telos or its Affiliates.

Out of warranty units returned to the factory for repair may be subject to a \$500 evaluation fee, which fee must be prepaid prior to shipping the unit to Telos. If no repairs are required, the \$500 fee will be retained by Telos as an evaluation charge. If repairs are required, the \$500 fee will be applied to the total cost of the repair.

TCP/IP,

How did we live without thee?

Analogicly.

THIS PAGE
INTENTIONALLY
LEFT BLANK

THIS PAGE
INTENTIONALLY
LEFT BLANK



Axia Audio, a Telos Alliance Company • 1241 Superior Ave. • Cleveland, Ohio, 44114, USA • +1.216.241.7225 • TelosAlliance.com
© 2016 TLS Corp. Axia®. The Telos Alliance®. All Rights Reserved. G16/15023