



## Default Element CPU/GPIO BIOS Configuration

July 10, 2007

This document contains default BIOS settings for the Axia Element CPU. This is intended for reference; clients should not attempt to change BIOS values without the express instruction of Axia Support.

To start up the Via motherboard in the Element GPIO you will need:

- 1) A keyboard w/PS2 connector
- 2) A Monitor

Connect keyboard to the proper jack. Connect power and, using a small screwdriver, short pins 6 and 8 together on the connector "Fpanel" (front right corner) to simulate a power-on button press. Note that Pin 15 is missing from header.

Immediately after shorting the pins keep tapping the "DEL" key until the BIOS config screen appears.

### STANDARD CMOS SETTINGS:

▪ DATE	[mm:dd:yy]
▪ TIME	[24 hours format]
▪ IDE PRIMARY MASTER	[COMPACT FLASH CARD]
▪ IDE PRIMARY SLAVE	[NONE]
▪ IDE SECONDARY SLAVE	[NONE]
▪ Drive A	[NONE]
▪ Drive B	[NONE]
▪ Halt On	[ALL, but keyboard]

### ADVANCED BIOS FEATURES:

▪ Virus Warning	[Enabled]
▪ CPU I2 Cache ECC Checking	[Enabled]
▪ Quick Power On Self test	[Enabled]
▪ First Boot Device	[HDD-0]
▪ Second Boot Device	[Disabled]
▪ Third Boot Device	[Disabled]
▪ Boot Other	[Disabled]
▪ Swap Floppy drive	[Disabled]
▪ Boot up Floppy seek	[Disabled]
▪ Boot up Num Lock Status	[On]
▪ Typematic rate Setting	[Enabled]
▪ Typematic rate (Chars/sec)	[30]
▪ Typematic delay	[250]
▪ Security option	[Setup]
▪ Display Full Screen Logo	[Enabled]
▪ Show summary info	[Disabled]
▪ Display Small logo	[Disabled]



## ADVANCED CHIPSET FEATURES

- |                          |                                       |
|--------------------------|---------------------------------------|
| ▪ AGP Aperture size      | <b>[128meg]</b>                       |
| ▪ CPU to PCI Post Writer | [Enabled]                             |
| ▪ Select Display Device  | [CRT] (even though it will be an LCD) |
| ▪ Panel type             | [1024*768]                            |
| ▪ TV type                | [NTSC]                                |
| ▪ CPU Direct access FB   | [Enabled]                             |

## INTEGRATED PERIPHERALS

- |                          |            |
|--------------------------|------------|
| ▪ Super IO DEVICE        |            |
| ○ Onboard FDC Controller | [Disabled] |
| ○ Onboard Serial port 1  | [3F8/IRQ4] |
| ○ Onboard Serial port 2  | [2F8/IRQ3] |
| ○ Onboard Parallel port  | [378/IRG7] |
| ○ Parallel port mode     | [SPP]      |
| ▪ Onboard IDE Channel 1  | [Enabled]  |
| ▪ Onboard IDE Channel 2  | [Enabled]  |
| ▪ IDE Prefetch Mode      | [Enabled]  |
| ▪ Display Card Priority  | [AGP]      |
| ▪ Frame Size Buffer      | [16M]      |
| ▪ AC97 Audio             | [Disabled] |
| ▪ MC97 Modem             | [Disabled] |
| ▪ VIA OnChip Lan         | [Enabled]  |
| ▪ USB Keyboard Support   | [Disabled] |
| ▪ Onboard LAN Boot ROM   | [Disabled] |
| ▪ Onboard Fast IR        | [Disabled] |

## POWER MANAGEMENT SETUP

- |                           |                             |
|---------------------------|-----------------------------|
| ▪ ACPI Suspend Type       | [S1 (POS)]                  |
| ▪ HDD power down          | [Disabled]                  |
| ▪ Power Management Timer  | [Disabled]                  |
| ▪ Video Off Option        | [Always ON]                 |
| ▪ Power Off by PWRBTN     | [Instant OFF]               |
| ▪ Run VGABIO if S3 Resume | [Auto]                      |
| ▪ AC Loss Auto Restart    | <b>[ON] (**Important**)</b> |

## PERIPHERALS ACTIVITIES

- |                              |            |
|------------------------------|------------|
| ▪ VGA Event                  | [OFF]      |
| ▪ LPT & COM Event            | [LPT/COM]  |
| ▪ HDD & FDD Event            | [ON]       |
| ▪ PCI Master Event           | [OFF]      |
| ▪ PS2KB Wakeup Select        | [Hot Key]  |
| ▪ PS2KB Wakeup from S3/S4/S5 | [Disabled] |
| ▪ USB resume                 | [Disabled] |
| ▪ Power On by PCI Card       | [Disabled] |
| ▪ Wake on LAN/RING Connector | [Disabled] |
| ▪ RTC Alarm Resume           | [Disabled] |

**IRQ ACTIVITIES**

- |                       |            |
|-----------------------|------------|
| ▪ Primary INTR        | [ON]       |
| ▪ IRQ3 (COM 2)        | [Disabled] |
| ▪ IRQ4 (COM 1)        | [Enabled]  |
| ▪ IRQ5 (LPT2)         | [Enabled]  |
| ▪ IRQ6 (Floppy Disk)  | [Enabled]  |
| ▪ IRQ7 (LPT1)         | [Enabled]  |
| ▪ IRQ8                | [Disabled] |
| ▪ IRQ9                | [Disabled] |
| ▪ IRQ10               | [Disabled] |
| ▪ IRQ11               | [Disabled] |
| ▪ IRQ12 (PS/2 Mouse)  | [Enabled]  |
| ▪ IRQ13 (CoProcessor) | [Enabled]  |
| ▪ IRQ14 (Hard Disk)   | [Enabled]  |
| ▪ IRQ15 (Reserved)    | [Disabled] |

**PNP/PCI CONFIGURATION**

- |                           |               |
|---------------------------|---------------|
| ▪ PNP OS installed        | [NO]          |
| ▪ Reset Config Data       | [Disabled]    |
| ▪ Resources controlled by | [Auto (ESCD)] |
| ▪ Assign IRQ for VGA      | [Enabled]     |
| ▪ Assign IRQ for USB      | [Enabled]     |

For questions or further instructions, please contact Axia Support at +1-216-241-7225 or email [support@AxiaAudio.com](mailto:support@AxiaAudio.com).